



COMPACT FLYSCREEN OWNER'S MANUAL

TABLE OF CONTENTS

Introduction	2
Safety	3
Operation	4
Troubleshooting	7
Maintenance	7

Introduction

The Lippert Compact Flyscreen door is designed for coaches.

The Flyscreen door has the following features:

- PVC and aluminum sliding flyscreen with walkable, U-shaped guide.
- Keeps out insects and debris while allowing fresh airflow.
- Clutched sliding system allows the screen to be opened to any position.

The Lippert Compact Flyscreen door can only be used while the coach's door is open. The flyscreen door **MUST** be open before closing the coach's door.

Additional information about this product can be obtained from lci1.com/support or by downloading the free LippertNOW app. The app is available on Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users.

Apple App Store®, iPhone®, and iPad® are registered trademarks of Apple Inc.

Google Play™ and Android™ are trademarks of Google Inc.

For information on the assembly or individual components of this product, please visit:

<https://support.lci1.com/entry-doors>.

NOTE: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the LCI limited warranty.

WARNING

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

WARNING

Failure to follow instructions provided in this manual may result in death, serious personal injury and/or severe product and property damage, including voiding of the component warranty.

CAUTION

The "CAUTION" symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.

CAUTION


Do NOT use the flyscreen in a fully closed or partially opened position when the entry door is closed. Closing the entry door while the flyscreen is fully closed or partially opened can cause damage to the flyscreen. Make sure the entry door is open whenever the flyscreen is extended.

Operation

When opening the flyscreen, make sure the coach's entry door is open.


To open the flyscreen across the flyscreen door:

1. Use fingers to grasp the middle of the flyscreen's bar (Fig. 1A) then slowly pull the flyscreen to the right, across the width of the flyscreen's opening until the bar contacts with the opposite frame. Release the bar.

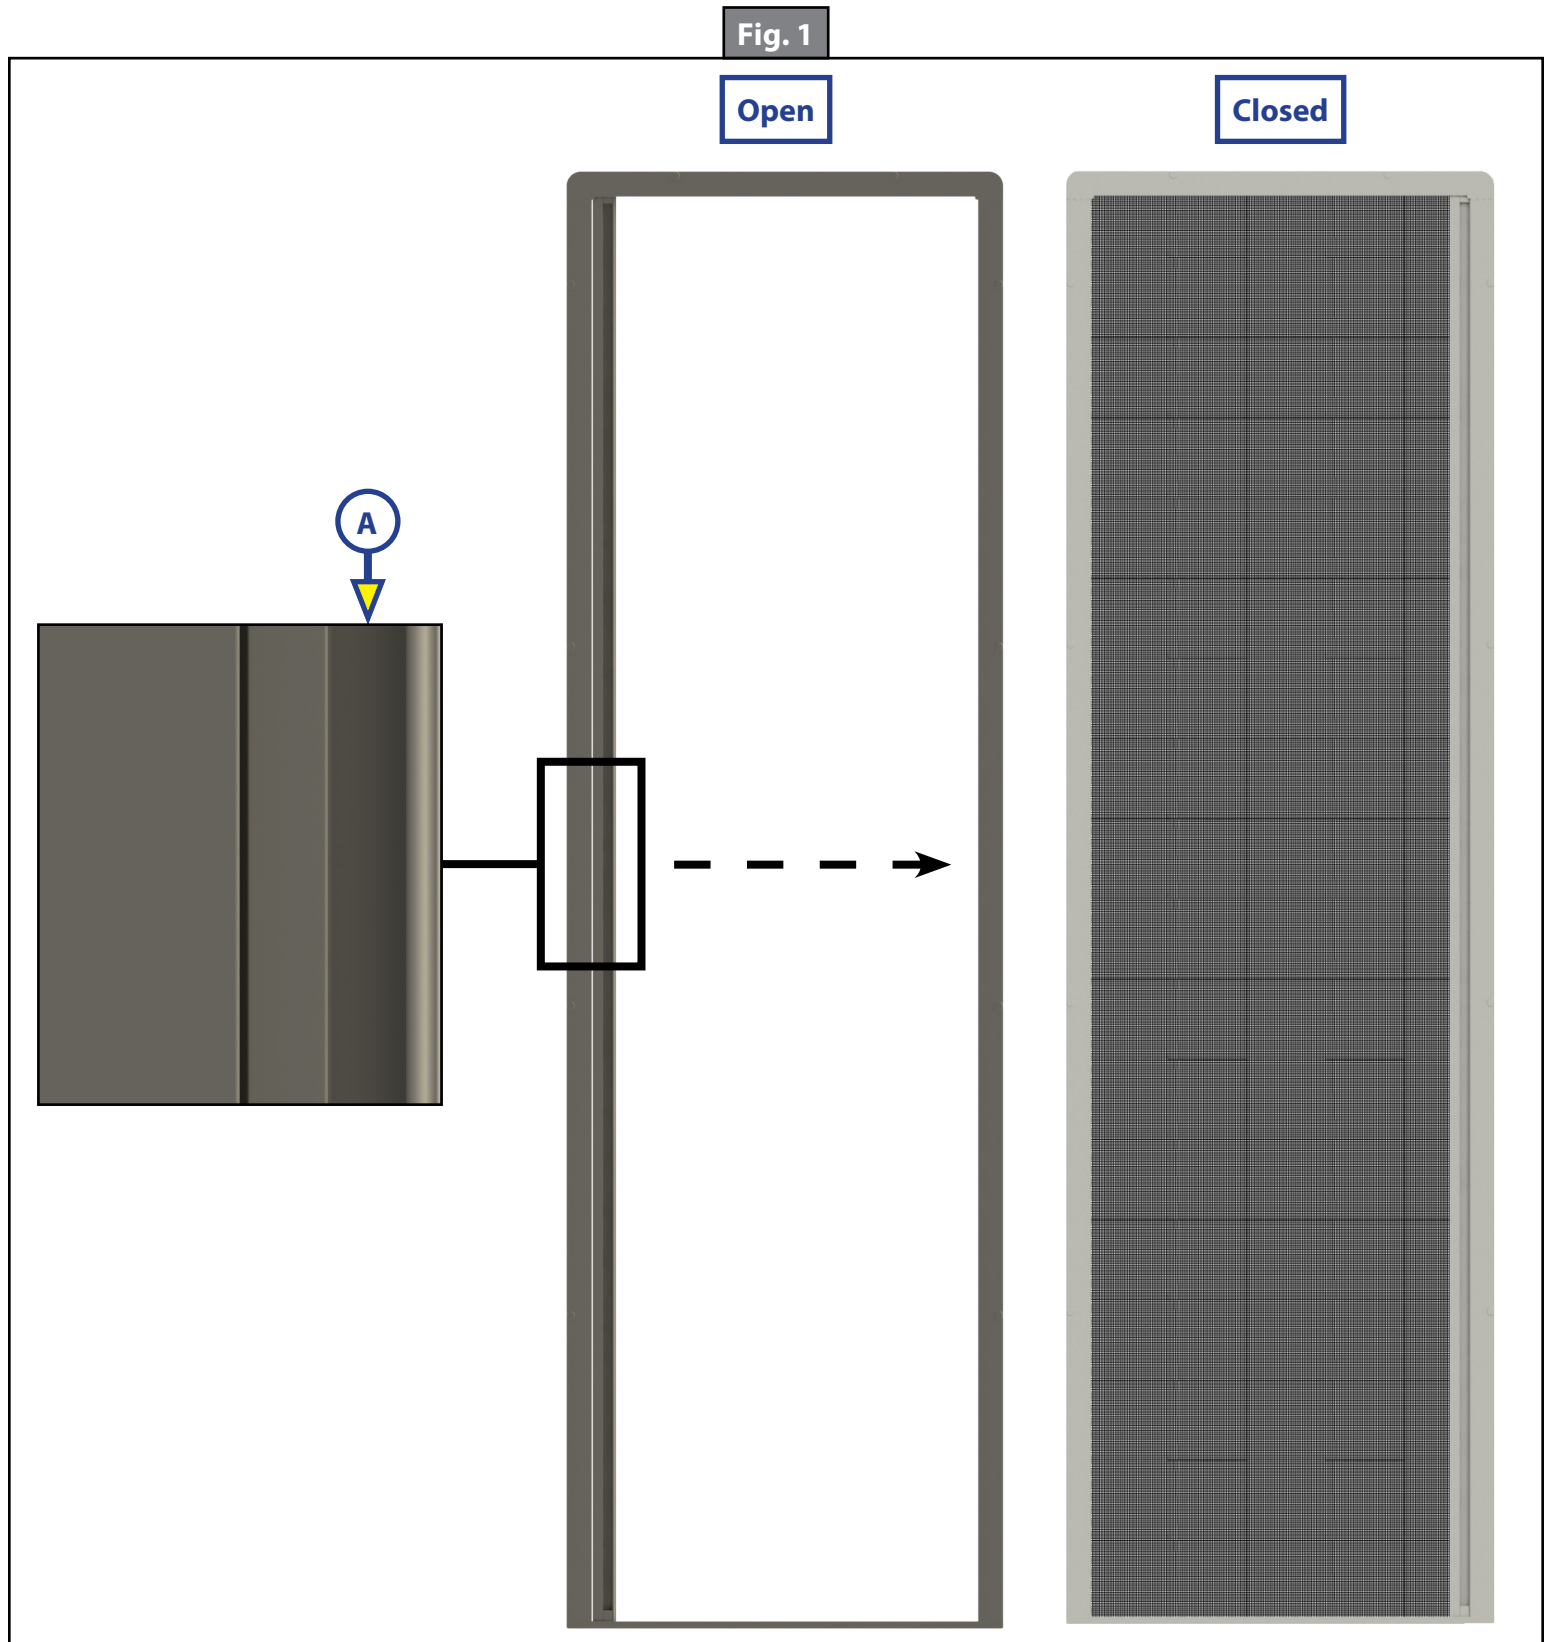

2. To take advantage of the flyscreen's sliding clutch positioning, use fingers to grasp the middle of the flyscreen's bar (Fig. 1A) then slowly pull the flyscreen to the right across the width of the flyscreen door's opening to the desired position (Fig. 2A). Release the bar. Leave the coach's entry door open.

NOTE: The coach's entry door **MUST** remain open when any portion of the flyscreen is being used or damage to the flyscreen can occur.

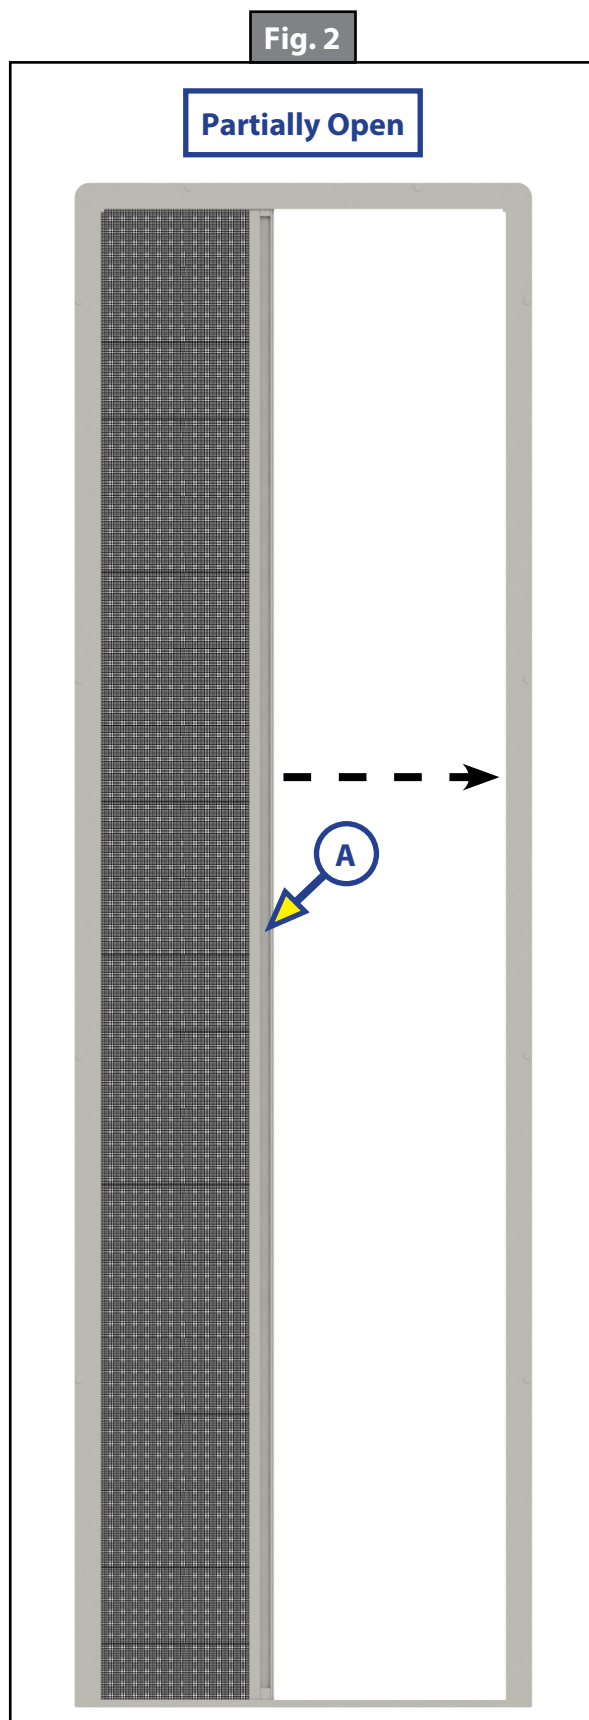


When opening the flyscreen, make sure the coach's entry door remains open until the flyscreen is fully retracted.

To close the flyscreen across the flyscreen door's opening:

1. Use fingers to grasp the middle of the flyscreen's bar (Fig. 3A) then slowly push the screen to the left across the width of the door's opening until the bar contacts the flyscreen housing (Fig. 3B). Release the bar. Close the coach's entry door, if so desired.
2. If partially closing the flyscreen, use fingers to grasp the middle of the flyscreen's bar then slowly push the screen to the left across the width of the opening to the desired position. Release the bar. Leave the coach's entry door open.

NOTE: The coach's entry door **MUST** remain open when any portion of the flyscreen is being used or damage to the flyscreen can occur.

Fig. 3

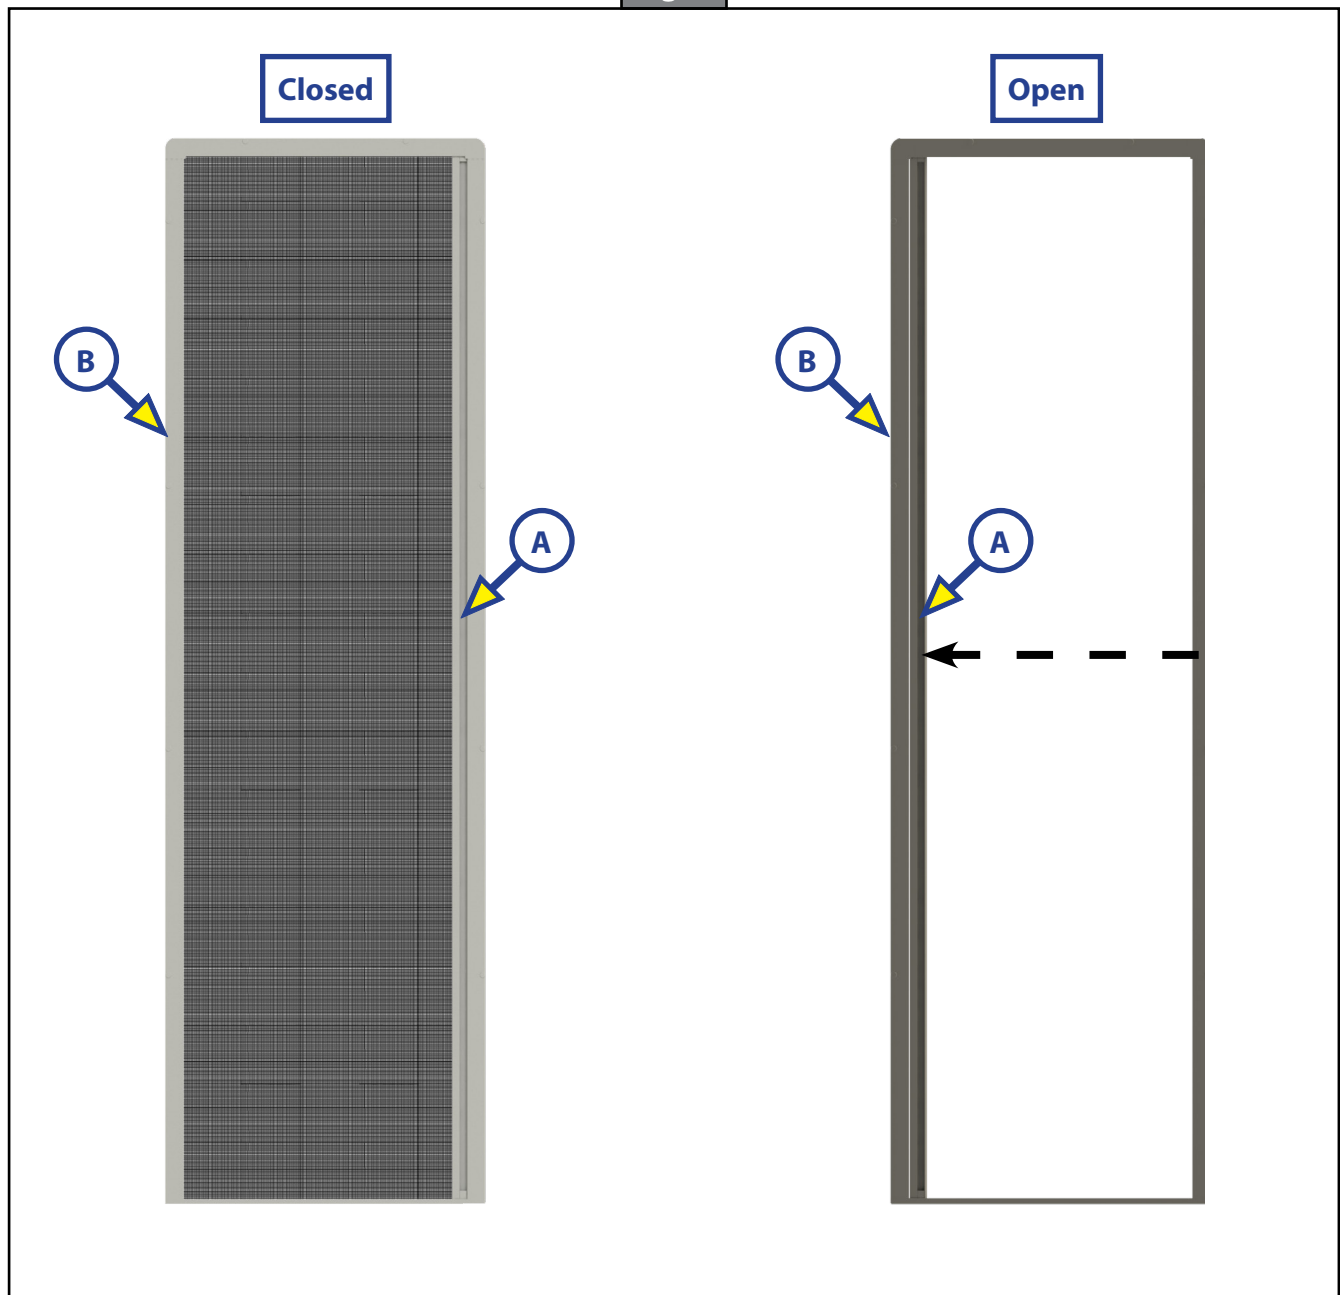

Troubleshooting

NOTE: The Lippert Compact Flyscreen door can only be used while the coach's door is open. The flyscreen door **MUST** be open before closing the coach's entry door.

What's Happening?	Why?	What Should be Done?
Flyscreen door does not fully open.	Flyscreen is binding up in the guide.	Contact: Lippert Customer Care Center customerservice@lci1.com Ph: 432-LIPPERT (432-547-7378)
	Debris in the guide.	Clean all debris from the guide.
Flyscreen door does not fully close.	Flyscreen is binding up in the guide.	Contact: Lippert Customer Care Center customerservice@lci1.com Ph: 432-LIPPERT (432-547-7378)
	Flyscreen retraction mechanism weak/damaged.	
	Debris in the guide.	Clean all debris from the guide.
Flyscreen door only partially opens.	Flyscreen is binding up in the guide.	Contact: Lippert Customer Care Center customerservice@lci1.com Ph: 432-LIPPERT (432-547-7378)
	Clutched sliding system not working properly.	
	Debris in the guide.	Clean all debris from the guide.
Flyscreen door only partially closes.	Flyscreen is binding up in the guide.	Contact: Lippert Customer Care Center customerservice@lci1.com Ph: 432-LIPPERT (432-547-7378)
	Clutched sliding system not working properly.	
	Debris in the guide.	Clean all debris from the guide.
Screen material has come loose from the framework.	Excessive force used to open/close flyscreen door.	Contact: Lippert Customer Care Center customerservice@lci1.com Ph: 432-LIPPERT (432-547-7378)
	Weakened seal in framework.	
	Flyscreen door was not open when the coach's door was closed.	
Screen material is torn.	Tears caused by flyscreen material loosened from the framework.	Contact: Lippert Customer Care Center customerservice@lci1.com Ph: 432-LIPPERT (432-547-7378)
	Flyscreen door was not open when the coach's door was closed.	

Maintenance

Do **NOT** wash the screen fabric or damage to the screen can occur, rendering the flyscreen door ineffective. Clean the frame with a damp cloth and mild soap. There is no flyscreen door maintenance required.



The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. (LCI). LCI prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized LCI representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of LCI.

Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.