

SLIDE-OUTS

Purpose

This document provides the steps to correct squeaking in through frame slide-out gear packs.

Instructions

1. Loosen both gear packs bolts (Fig. 1A and Fig. 1B) until tension is off of the gear pack.
2. Apply dry silicone onto gear pack drive shaft at lubrication points (Fig. 2A), (Fig. 3A), (Fig. 4A through D).

NOTE: Do not lubricate rack or pinion gear teeth, lubricate drive shaft only.

3. Extend and retract slide-out arms several times to work lubricant through gear pack.


Fig. 1



A


B

Fig. 2

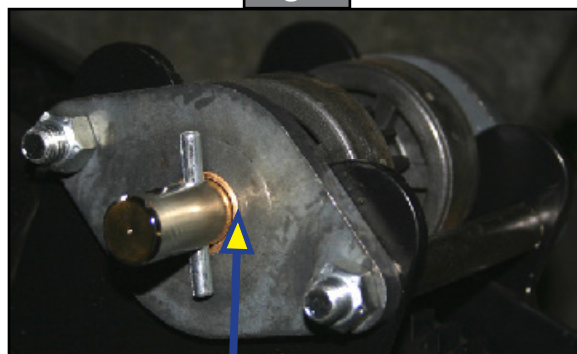


A

Fig. 3

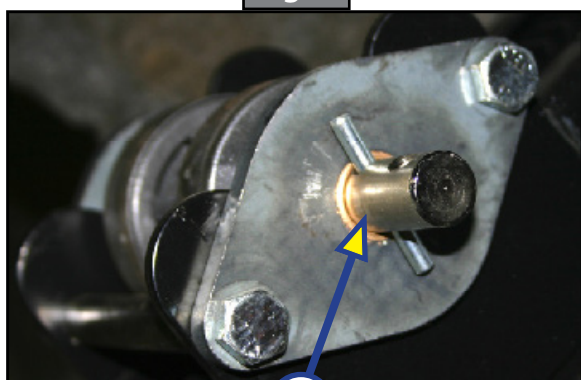

A

Fig. 4

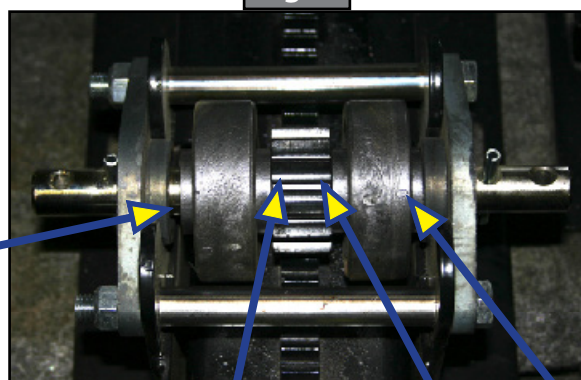

A

B

C

D

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.