

LEVELING AND STABILIZATION

Fig. 1 Outside Landing Gear



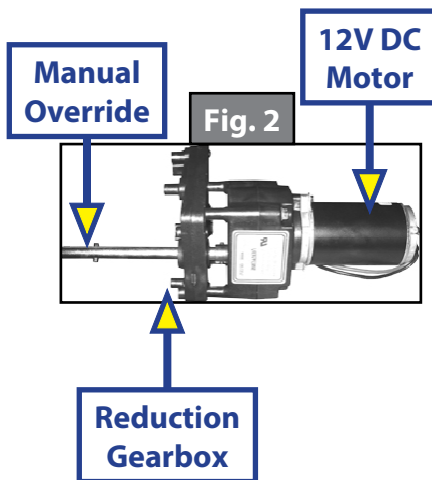


Fig. 3 Inside Landing Gear

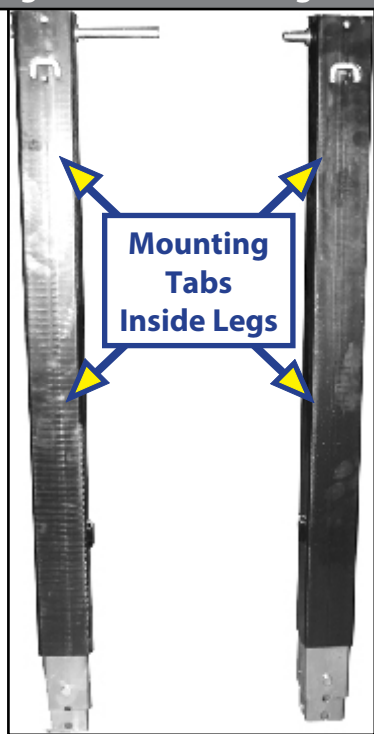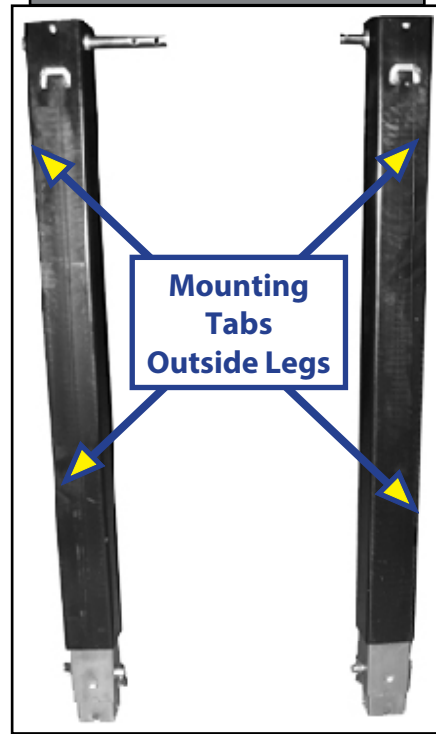

⚠ WARNING

- Always park unit on the most level ground or surface available.
- Always check the wheels prior to operating the electric landing gear.
- Never attempt to level the unit without the footpad properly installed.
- Electric landing gear is designed for vertical operation. Excessive side loads may cause damage to the landing gear.
- Retaining pin **MUST** be inserted fully through both sides of the tube prior to use.
- Do not use landing gear to service unit or change tires.
- Retract electric landing gear completely prior to moving the unit. Do not over-retract.

Failure to heed these warnings may result in death, serious physical injury or damage to the unit.

Power Operation

Prior to operation, be sure battery is fully charged. Low voltage may result in damage to the electrical portion of the system.

To Extend Electric Landing Gear:

1. Push EXT side of landing gear switch
2. Hold button down until desired condition of level is reached.
3. Release button.

LEVELING AND STABILIZATION

NOTE: Do not overextend or over-retract electric landing gear. Overextending the landing gear may result in damage to the drive shaft, putting the unit in an unsafe condition and will not be covered by LCI limited warranty.

To Retract Electric Landing Gear:

1. Push RET side of landing gear switch.
2. Hold button down until landing gear is fully retracted.
3. Release button.

Manual Operation


To Manually Extend Electric Landing Gear:

1. Place manual crank handle coupler onto manual override shaft of the reduction gearbox.
2. Turn the crank handle counterclockwise to extend landing gear.
3. Stop cranking when desired level is reached.
4. Remove and store crank handle.

NOTE: Do not overextend or over-retract electric landing gear. Overextending the landing gear may result in damage to the drive shaft, putting the unit in an unsafe condition and will not be covered by LCI limited warranty.

To Manually Retract Electric Landing Gear:

1. Place manual crank handle coupler onto manual override shaft of the reduction gearbox.
2. Turn the crank handle clockwise to retract landing gear.
3. Stop cranking when landing gear is fully retracted.
4. Remove and store crank handle.

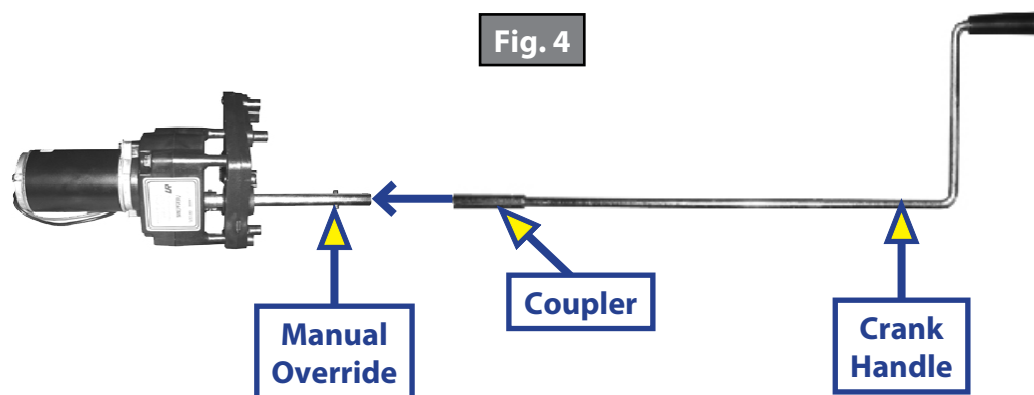

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.