


LEVELING AND STABILIZATION

Fig. 1 ELG Switch Wiring Diagram

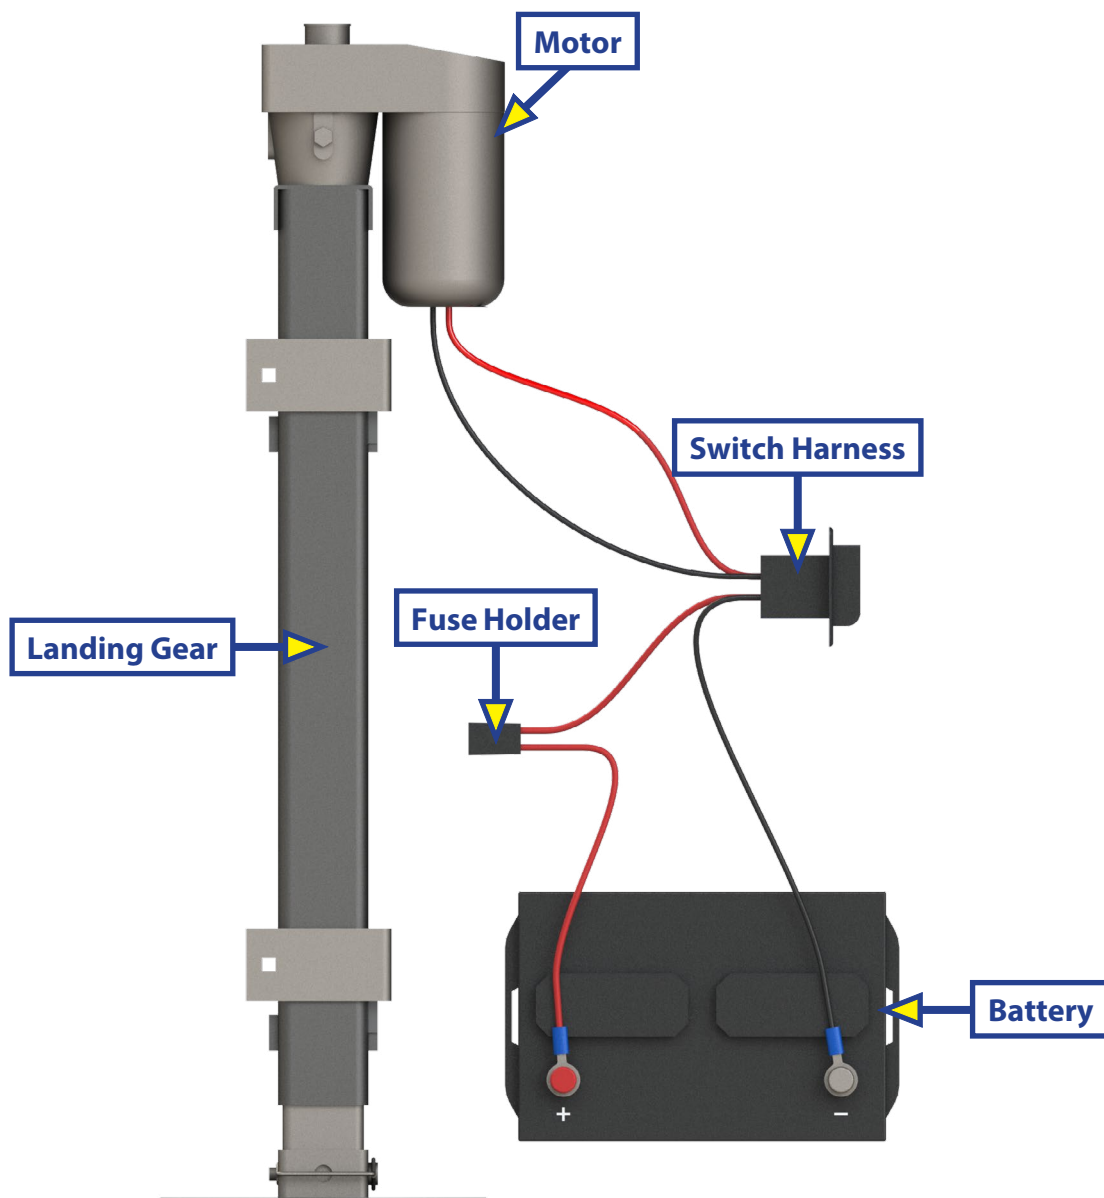

NOTE: When working with Electric Landing Gear Switch Harnesses, the fuse holder (with fuse installed) **MUST** be included in the return. Do not remove harness without the fuse holder attached as it will void the warranty and prevent receiving compensation for a warranty claim.

NOTE: Do not remove fuse from ELG Switch Harnesses before installing units.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.