



FLOW MAXTM FAUCET
OWNER'S MANUAL

TABLE OF CONTENTS

Introduction	2
Safety	2
Operation	3
Fixed Faucet	3
Pull Down Faucet	4
Maintenance	5
Troubleshooting	5

Introduction

This manual outlines the operation of the Flow Max Faucets.

Additional information about this product can be obtained from lci1.com/support or by downloading the free LippertNOW app in Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users. App Store® and iPad® are registered trademarks of Apple Inc. Google Play™ and Android™ are trademarks of Google Inc.

For information on the assembly or individual components of this product, please visit:

<https://support.lci1.com/kitchen>

Note: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the Lippert limited warranty.

WARNING

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

WARNING

Failure to follow instructions provided in this manual may result in death, serious personal injury and/or severe product and property damage, including voiding of the component warranty.

CAUTION

The "CAUTION" symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.

CAUTION

 
Always wear eye protection when performing service, maintenance or installation procedures. Other safety equipment to consider would be hearing protection, gloves and possibly a full face shield, depending on the nature of the task.

Operation

Fixed Faucet


1. Pull the lever away from the faucet to turn it on (Fig. 1A).
2. Move the lever forward for hot water (Fig. 2) and backward for cold water (Fig. 3).

Note: Depending on faucet model direction of the faucet handle may differ.

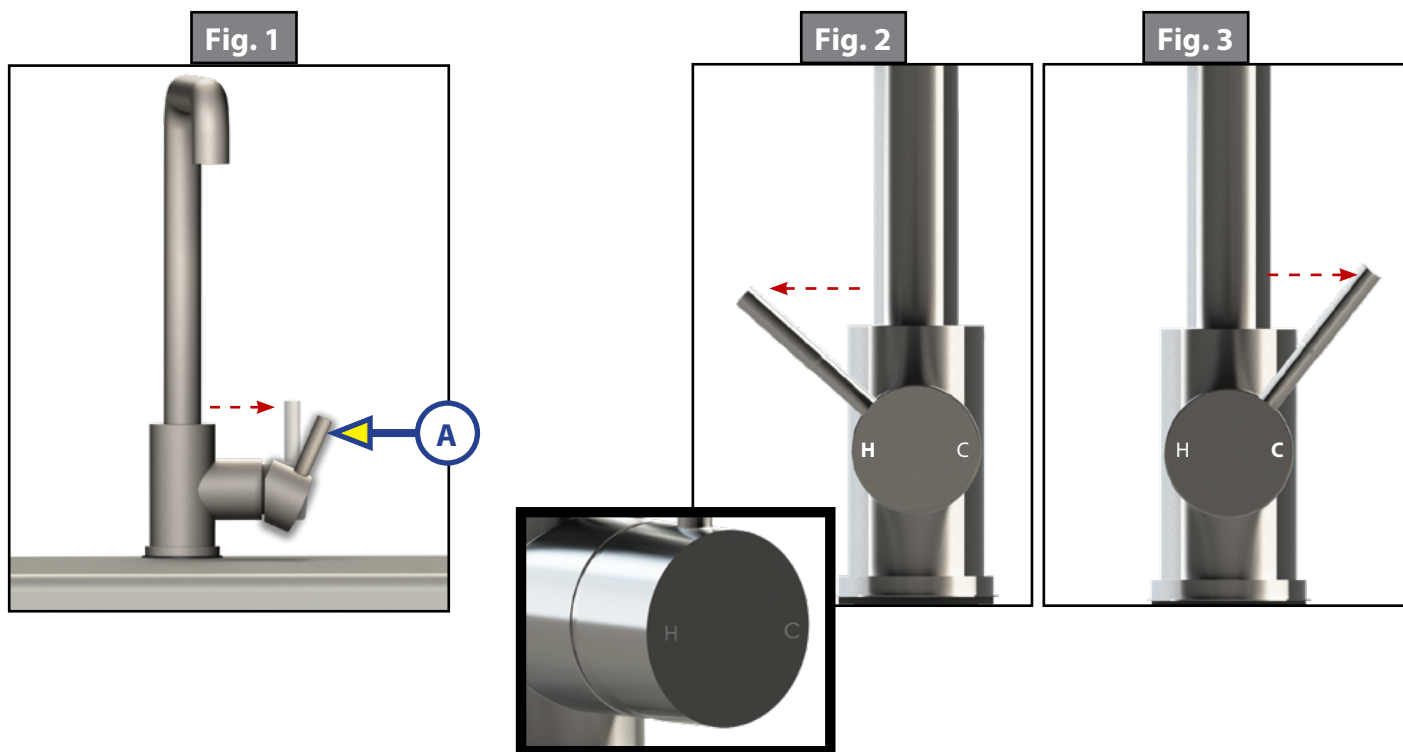

Note: Located on the front of the lever is a "H" for hot water and a "C" for cold water. Move the lever in the direction of the desired temperature.

 3. Push the lever in towards the faucet to shut the water off (Fig. 4A).

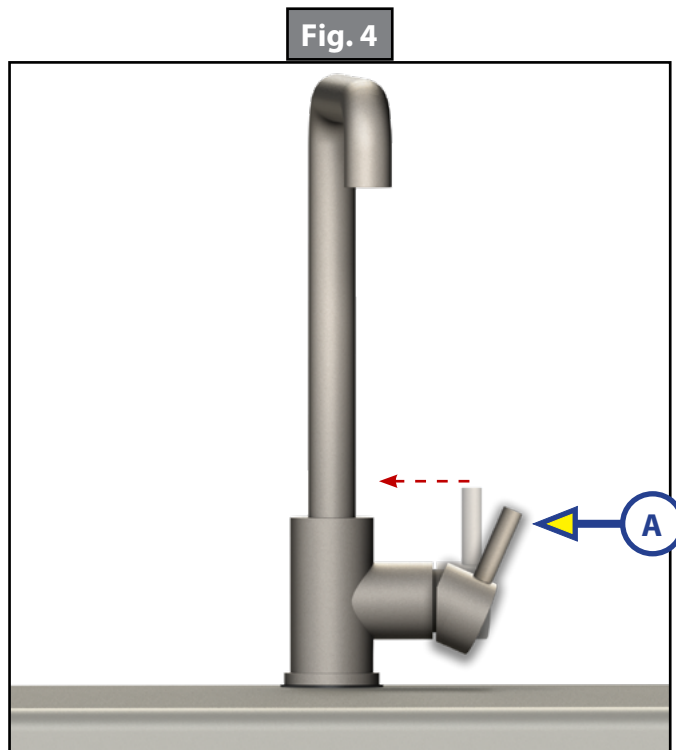

Pull Down Faucet

1. Pull the lever away from the faucet to turn it on (Fig. 5A).
2. Move the lever forward for hot water (Fig. 6) and backward for cold water (Fig. 7).

Note: Located on the front of the lever is a “H” for hot water and a “C” for cold water. Move the lever in the direction of the desired temperature.

Fig. 5

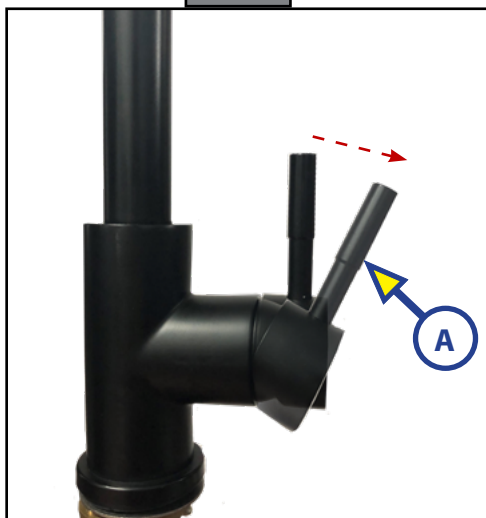 


Fig. 6


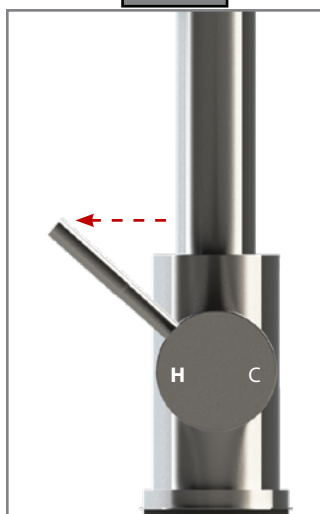 


Fig. 7

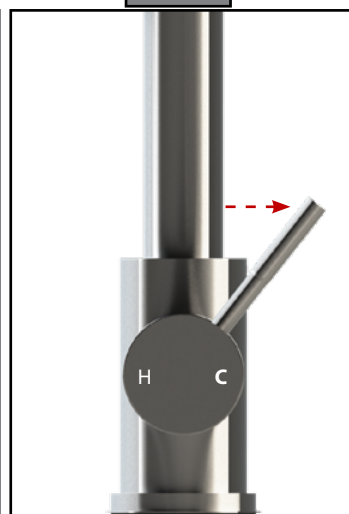 

3. To use the spray wand pull down and out on the faucet head.
4. Press and release the button on the lower portion of the faucet head (Fig. 8A) for spray mode. Press and release the button again for stream mode.
5. Replace the faucet head by gently guiding the hose back into the faucet neck and insert into clip, if applicable.
6. To shut the water off push the lever in towards the faucet (Fig. 9A).

Fig. 8


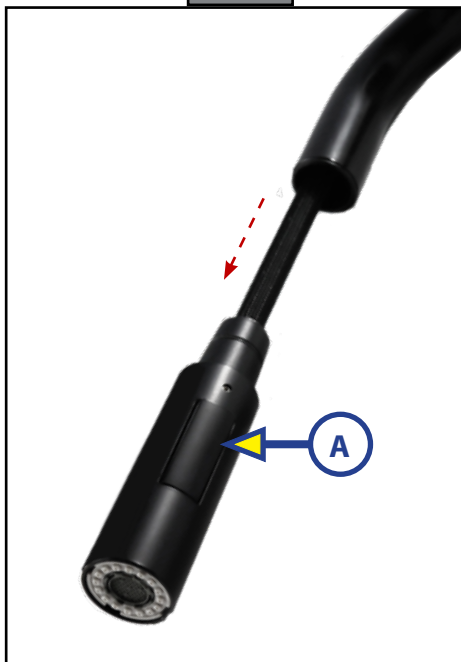 


Fig. 9

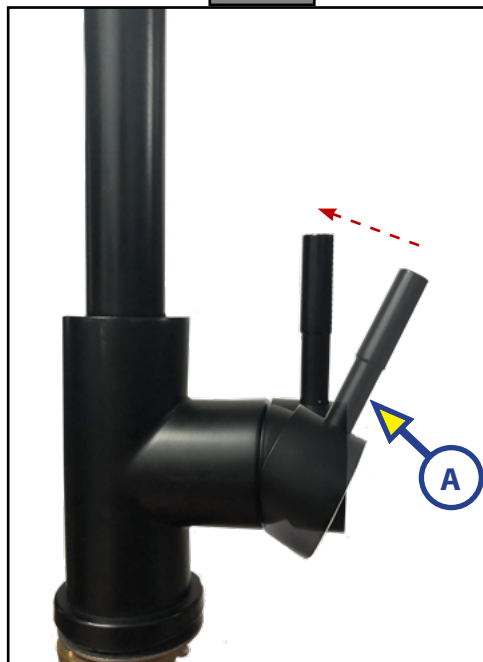 

Maintenance

Clean the faucet periodically with a soft cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void the warranty.

Troubleshooting

Vibration caused by driving or transporting can loosen plumbing and hardware. Check for loose system components. Many symptoms can be resolved by tightening hardware. Use care not to over-tighten. Refer to the chart for troubleshooting tips.

What is happening?	Why?	What should be done?
Irregular Flow	Blockage at the screen	For further instructions: Reference: CCD-0004351
	Clogged cartridge	For further instructions: Reference: CCD-0004317
There is a leak from the aerator when the faucet is on.	The aerator does not fit correctly on the faucet.	Remove aerator and reinstall.
The aerator has irregular or reduced water flow.	The aerator is dirty.	Remove aerator and clear debris.



The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. (LCI). Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.