

SLIDE-OUTS

Fig. 1 - LCI Hydraulic Pump



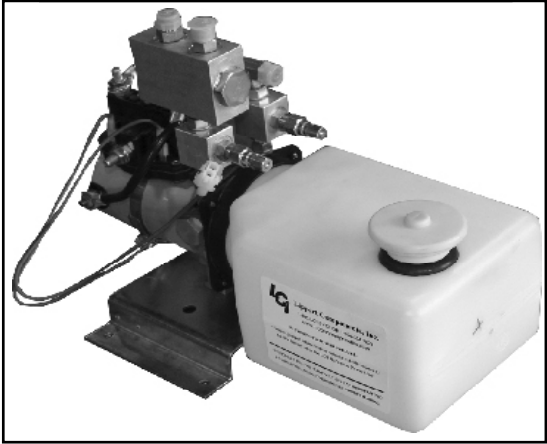


Fig. 2

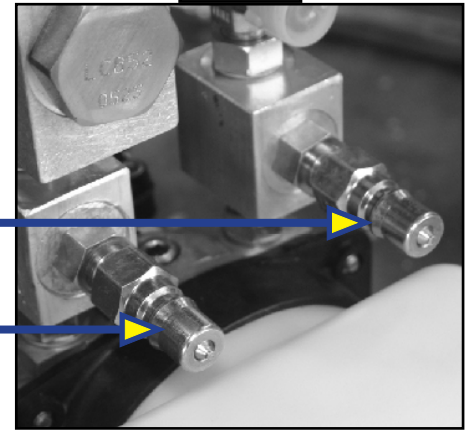


Quick Disconnect
Flush and Fill
Fittings

Fig. 3

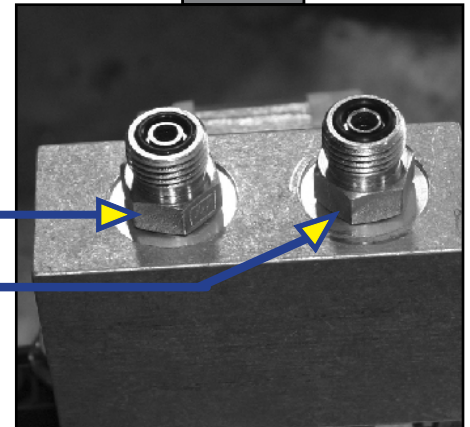

Cylinder
Extend Fittings

Fig. 4

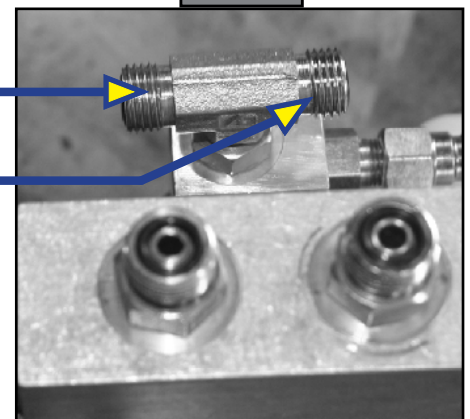

Cylinder Retract
Fittings

SLIDE-OUTS

Fig. 5



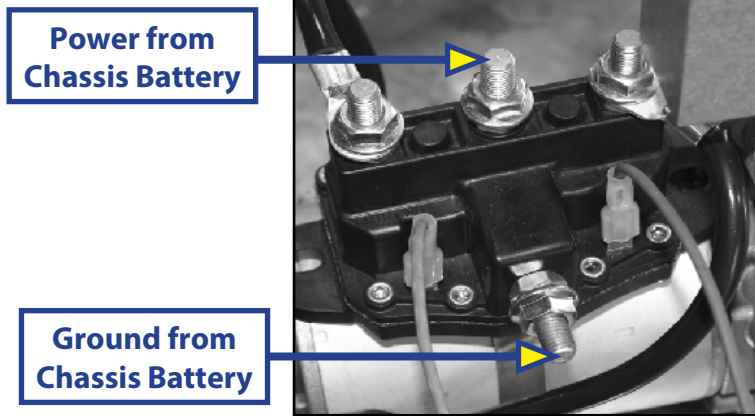


Fig. 6

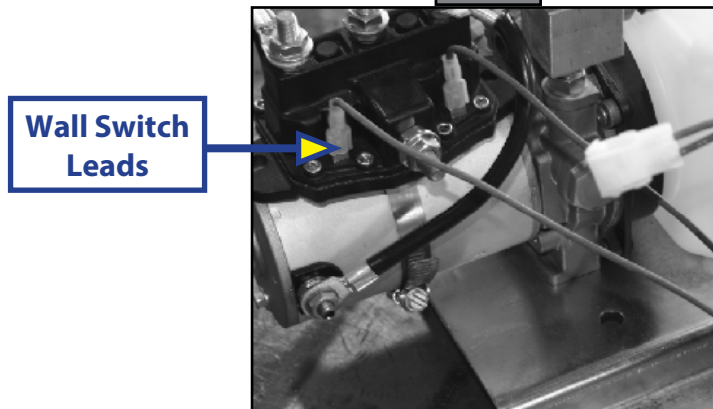

NOTE: Lead positions can be switched if slide-out moves opposite to the way the wall switch reads. Plugs in just like the electric motor.

Fig. 7

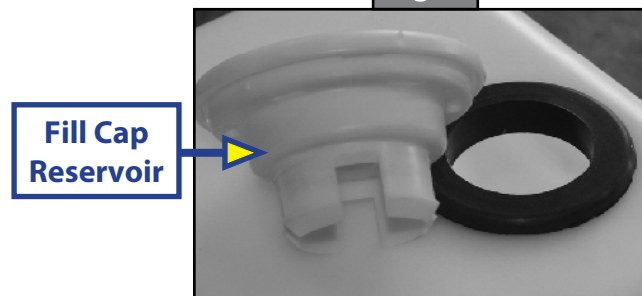

NOTE: Fill to within ½" from the top with slide-out fully retracted.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.