



ConnectAnywhere
WITH VOICE

How to activate your LCI ConnectAnywhere System

Congratulations!

With LCI ConnectAnywhere you can now unlock the ultimate in usability for your RV. You now have the ability to control and view vital functions of your RV no matter the distance.

Let's get started!



ConnectAnywhere Items

required for system activation.



ConnectAnywhere
Cellular Gateway



ConnectAnywhere
Cloud Gateway



Carrier Provided
SIM Card



External Roof
Mounted Antenna



An Android or iOS
Smart Device



Download the
OneControl app to
begin unlocking
features.



Locating your ConnectAnywhere hardware.



Your ConnectAnywhere hardware is typically located in a cabinet in the middle of your RV or in a pass-through storage unit. Refer to your RV's floor plan or user guide for more information.




Possible ConnectAnywhere
locations.

Activating your ConnectAnywhere system using an AT&T Provided SIM card.

Whether you are currently an existing AT&T wireless customer or not, you can contact their customer service or visit their nearest wireless retail store to get your activated SIM card.

Before visiting your wireless service provider, there are some things you're going to need...

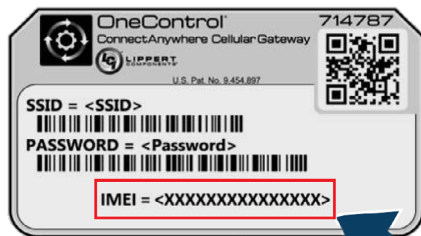


TIP:

Your wireless provider may request the IMEI# which is printed on the cellular gateway. System connectivity is subject to carrier coverage map. Have your provider set up the SIM card for a hotspot.

ConnectAnywhere SIM Card Conversion Chart

The ConnectAnywhere cellular Gateway requires a standard size SIM card. Provided in your kit should be a Nano SIM Adapter if a standard size is not available from your cellular provider.

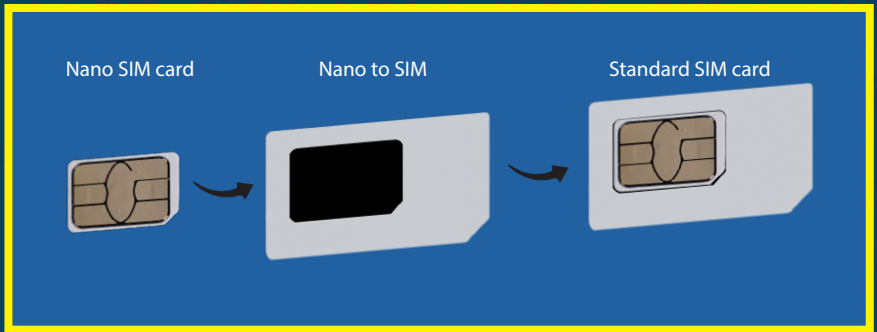

1. Unplug the cellular gateway's barrel connector power harness before moving on.

NOTE: Check SIM card slot for pre-installed SIM card adapter. Remove adapter to use with the SIM card.



2. Insert the SIM card, contacts facing up, into the slot on the side of the gateway. The beveled edge of the SIM goes in first. There should be a click when the card latches in.



Cellular provided
SIM card

Once you've ensured the SIM card is firmly seated, reattach the barrel connector harness to the back of the cellular gateway.

Connecting and Using Your ConnectAnywhere System as a Cellular Hotspot

ConnectAnywhere and its innovative functionality also has the ability to provide RVers with a rugged and reliable wireless hotspot.

Connecting to Your Secure ConnectAnywhere Wi-Fi Network

Secure Wi-Fi Networks are password-protected and have  by their names.

1. Go to Settings > Wi-Fi, and make sure Wi-Fi is turned on.
2. Tap the name of your secure Wi-Fi network you want to join, which is the SSID on your Cellular Gateway Label as shown.
3. Enter the password, also shown on the right, for your secure Wi-Fi network, then tap Join. If you can't tap Join, the password you've entered is incorrect.

After you join the network, you'll see  next to the network and  in the upper-left side of your display.

Verify connectivity by opening your web browser on your mobile device and navigate to www.lci1.com/onecontrol. When the page displays you know you are connected.




NOTE:

Passwords are case sensitive and do not contain any numerals.

Complete your setup and registration by clicking on the OneControl icon from the app or on the web by visiting <https://lippert.force.com/IoTCommunity/register> to register your ConnectAnywhere system and begin your Journey to Anywhere.



Remember to write down or take a picture with your phone of your KCODE. You will need this to register your system.

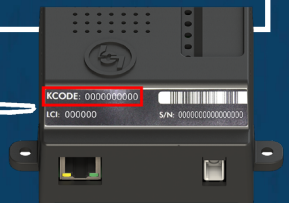

Registering your ConnectAnywhere system:

1. Select "Registrations."
2. Select "ConnectAnywhere Registration."
3. Fill in required information and agree to Terms.
4. Confirm email.
5. Login.
6. Three horizontal bars in upper left corner.
7. OneControl.
8. Begin Setup.
9. Enter K-Code

ConnectAnywhere system registration continued...

10. Enable Coach Web-Access.
11. Allow.
12. Finish Setup.
13. Log into OneControl app.
14. Open app.
15. Select Menu cog (wheel).
16. Log in.

Congratulations,
you did it!



ConnectAnywhere WITH VOICE

ConnectAnywhere can now be controlled with simple voice commands.

With OneControl's voice command system you can now bring your Amazon Echo Dot, powered by the Alexa voice assistant, with you and not only control your coach via voice, but maintain the convenience of your smart home on the road.

Let's get started!

Tip:

You'll need to use the app to complete the linking process for your Connect Anywhere system.

Pair your ConnectAnywhere system with the Alexa app:

1. Download the Alexa app onto your mobile device, or use your computer's web browser to access the app.
2. Launch the Alexa app and create an account.
3. Set up the new device.
4. Choose your device.
5. Connect to Wi-Fi.
6. Follow the on-screen prompts.
7. Search for, and enable, the LCI OneControl skill.
8. Link the Amazon account to your LCI account, follow on-screen prompts.

The OneControl login page is: lci1.com/onecontrol-login

Tip:

Once your Amazon Alexa account is linked to your LCI ConnectAnywhere account, you can use Alexa to control your ConnectAnywhere devices by voice.



ConnectAnywhere
WITH VOICE

Sample Alexa Voice Commands

Sample OneControl Requests

You must first invoke OneControl by saying an invocation phrase, followed by the request:

Example invocation phrases:

"Alexa, ask OneControl to..."

"Alexa, tell OneControl to..."

"Echo, ask OneControl to..."

"Echo, ask OneControl for..."

Request:

"...turn all the lights on."

"...turn on the kitchen lights."

"...dim lights"

"...turn all lights bright."

"...dim kitchen lights to 10%."

"...turn on all cooling to 70 degrees."

"...set the temperature in zone 1 to 68 degrees."



Generator

Slides



Leveling



Tank
Monitor

Vent Cover



Multiple
Light
Zones



CONTROL YOUR DEVICES

Learn the basics and how to
interact with your devices.

Green Bar

Teal Bar

Local Connection

Cellular Connection

HVAC



Awnings



Water Pump



Landing Gear



Bed Lifts



TV Lift



Stabilizer Jack

Locally Enabled Devices

Learn what you can control from within 100 feet of your RV.

Control any of
RV's manufact
functions like



Generator



Level



Tank
Monitor



Multi
Ligh
Zone

neControl enabled function installed by your
turer. Control anything ranging from vital
e your tank levels and entertainment lighting!



HVAC



Awnings

Slides



Water
Pump



TV Lift



Landing
Gear



Universal
IR Remote

Vent Cover



Bed Lifts



Stabilizer
Jack



Lighting
Green Bar

=


Local Connection

Cellular Enabled Devices

Learn what you can control from any distance
with cellular coverage.



Generator

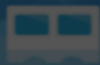

Leveli



 
Tank
Monitor



Multip
Ligh
Zone



HVAC



Awnings

Slides



Water
Pump



TV Lift

 


nt Cover

Landing
Gear



Universal
IR Remote



Bed Lifts



Stabilizer
Jack



Teal Bar

Cellular Connection

ConnectAnywhere System Activation & Registration is complete.

Your journey
begins now!

Contact

Lippert Components Incorporated

Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



CONNECTANYWHERE
WITH VOICE





This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.