


ELECTRONICS

Part # [292614](#)

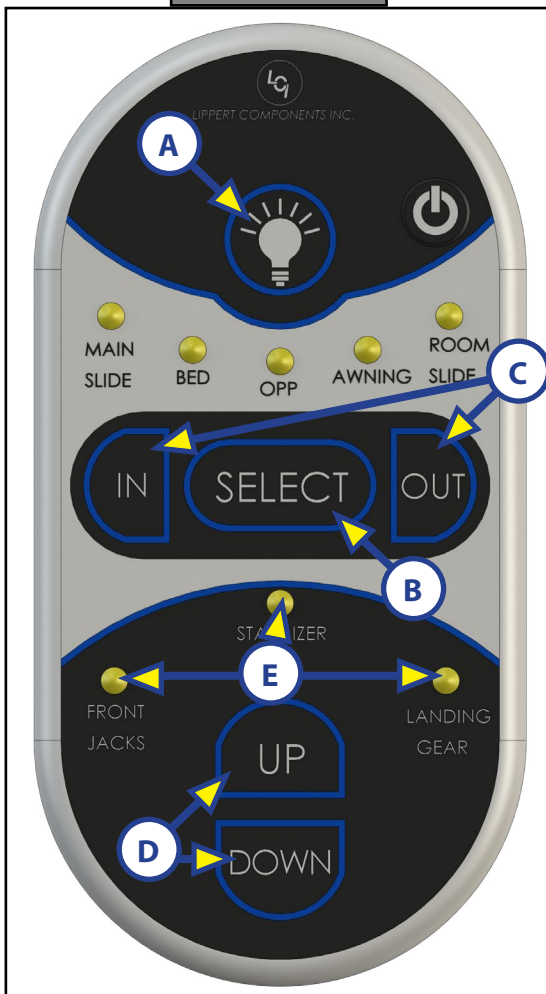

To Sync the Transmitter to the Receiver:

1. Press and hold the momentary push button on the receiver.
2. Press "Light" (A) button on the transmitter until relay on receiver "clicks".
3. Release momentary push button.
4. The transmitter is synced to the receiver.

Mode 1: Normal Operation

Aside from unlocking the touchpad, normal operation should be self-explanatory:

1. Power up the transmitter - LED pattern will be displayed.
2. Hold down the SELECT (B) button to unlock the transmitter (about three seconds).
3. After unlocking, the first operation will be selected as indicated by the active LED.
4. Press IN/OUT (C) or UP/DOWN (D) to actuate the selected function.
5. Press SELECT (B) to cycle through the available functions.
6. Press the LIGHT (A) button at any time to operate the light output.
7. LEDs will always follow the same pattern while cycling through: Left to Right, Top to bottom.

NOTE: Even though the "first" LED is lit - it may not correspond with Function 1.

Mode 2: Configuration Mode

1. If the remote is powered up and the bottom three LED's are blinking (E), the remote is waiting to be programmed.
2. One Blink - indicates that FUNCTION 1 is waiting to be programmed. Two Blinks - indicates that FUNCTION 2 is waiting to be programmed.
3. To enter configuration mode, turn on the device then hold the IN + DOWN buttons until the bottom three LED's begin blinking (about three seconds).
4. Using the IN/OUT(C) buttons, cycle to the LED description that corresponds with FUNCTION 1.
5. Press the SELECT (B) button to confirm, and then move on to the next function.
6. The bottom three LEDs (E) will again be blinking.
7. Use the IN/OUT (C) and SELECT (B) buttons to choose the remaining functions.
8. If no option (empty function on receiver) is to be programmed for any function, press Select while the bottom three LEDs are blinking for the corresponding function number.
9. To re-enter configuration mode, turn on the device then hold the IN + DOWN buttons until the bottom three LEDs begin blinking (about three seconds).



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.