



 
LIPPERT
COMPONENTS®

Kwik Safe Installation and Operation

⚠ CAUTION

Do not store the Kwik Safe keys inside of the safe. The safe should be placed horizontally when installing the safe.

NOTE: Please read the instructions carefully. Note the safe operational requirements, warnings and cautions. Use this product correctly and with care, for the purpose for which it was intended. Failure to do so may cause damage and/or personal injury. This will invalidate the warranty. Please keep instructions for future reference.

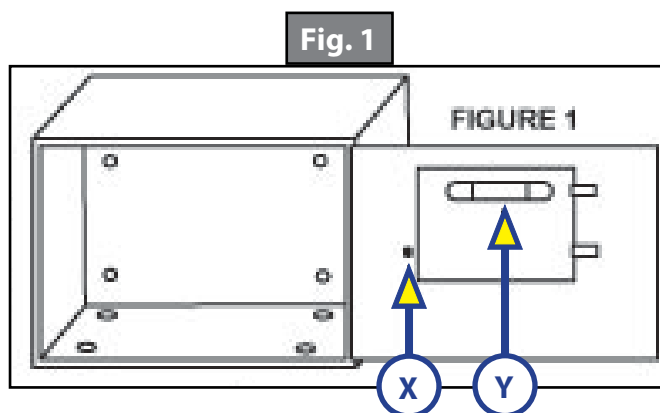

NOTE: Prior to installation, remove all contents from shipping box. Inspect contents for any missing pieces or any visual damage that may have occurred during transport.

Installation

To reduce the risk of the theft of the entire safe, the safe can be secured to the floor, wall or in a cupboard. For your convenience there are 4 8mm diameter holes pre-cut into the floor and back wall of the safe. Expansion bolts have been supplied with which you can secure your safe (Fig. 1).

Opening The Safe

To open the door for the first time, press 1-5-9 (these are the factory preset numbers) and confirm by pressing the letter "A". You should hear an audible beep, and the green unlock light should turn on. Open the safe door within 5 seconds using the handle. If you or an intruder uses the incorrect number sequence, the safe door will not open. If the incorrect number sequence is used 3 times consecutively, you **MUST** wait 60 seconds before reattempting to enter the correct number sequence. If after another 3 incorrect number sequence is used, you **MUST** wait approximately 5 minutes before reattempting to gain access.



LIPPERT
COMPONENTS®

Programming The Code

Press the red "X" button (Fig. 1) on the back of the door near the hinge, release it and you will hear two audible beeps. The yellow light will be on at the same time. Now enter 3 to 8 number sequence that you wish to use as a combination sequence, and confirm it by pressing the letter "B" within 15 seconds of entering your combination sequence. If programming the combination sequence takes longer than 15 seconds for you to confirm, you will have to start over. Write down your combination sequence and immediately check whether your combination has been successfully programmed, **PRIOR** to closing the safe door.

Battery Replacement

The Kwik Safe requires 4 "AA" batteries, alkaline or lithium batteries are recommended. Open the safe door, locate the battery compartment (Fig. 1, Item Y) on the inside of the door, and push the battery cover open. Once you have replaced the batteries, you **MUST** reprogram your code. When the batteries are low, the red LED light on the front of the door will turn on, indicating that the batteries are low. If the door will not open, use the following override procedure.

Override Procedure

For your convenience, a manual override system has been installed into your safe. If you forget or misplace your combination sequence, or the batteries die; remove the small central plate on the front door panel. Insert the key that came with your safe, and turn it in a counter-clockwise direction. Next turn the door release knob clockwise. This will manually open the safe at any time.

Fig. 2





This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.