



T.I.P. Troubleshooting Information on Power Gear

FUSE REPLACEMENT


Fuse replacement for semi-automatic control box.

NOTE : THIS IS FOR R.V.'S MANUFACTURED 1995 TILL 2000.

- XF1 = Front jack solenoid fuse 3.15 AMP. (F)
- XF2 = Right rear jack solenoid fuse 3.15 AMP. (CR)
- XF3 = Left rear jack solenoid fuse 3.15 AMP. (RR)
- XF4 = Dump solenoid fuse 3.15 AMP.
- XF5 = Power unit motor starter solenoid fuse 1.6 AMP
- XF6 = Auxilary output fuse 1.6 AMP.
- XF7 = Auxilary output fuse 1.6 AMP.

REMOVE: To remove fuse, use needle nose pliers and pull fuse straight out

INSTALL: To install fuse use needle nose pliers to insert the fuse making sure pins on fuse enter receptacle correctly

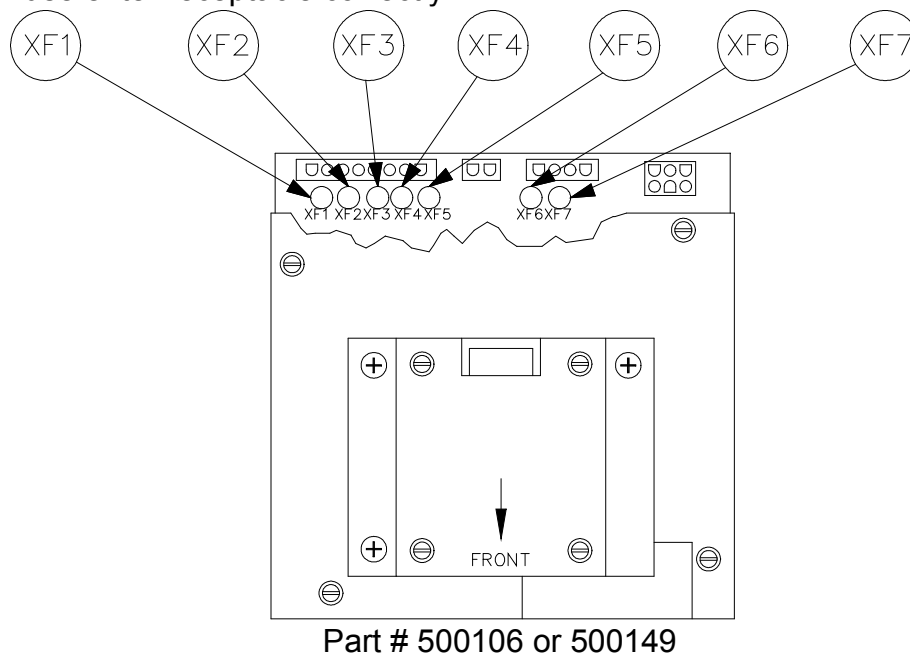



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.