




LIPPERT
COMPONENTS®

Purpose


Bracket Placement

The purpose of this Quick Reference (QR) is to identify landing gear stop tabs, and to show the different landing gear installation options available. The landing gear stop tabs prevent the landing gear from slipping through the landing gear bracket. This document applies to the landing gear bracket PN [113511](#), and all included hardware.

Landing Gear Bracket Inside Configuration

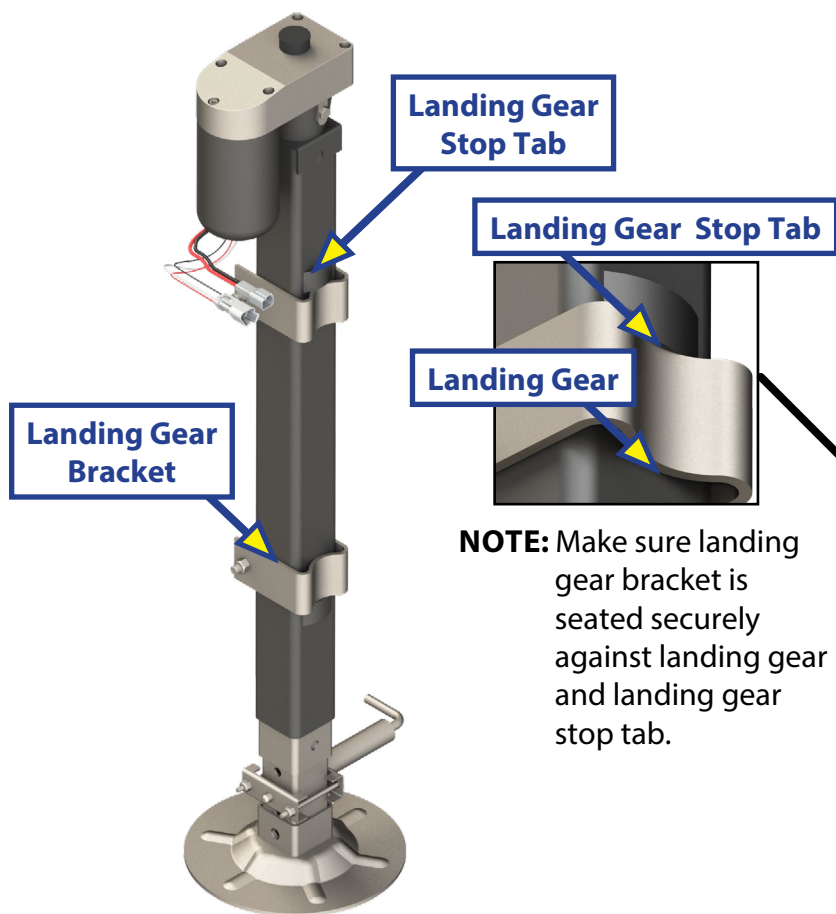

Landing Gear Bracket Outside Configuration

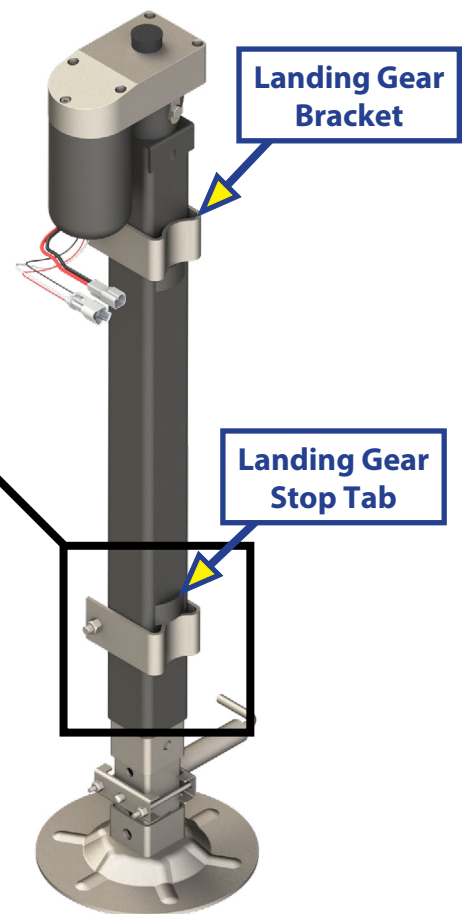


NOTE: Make sure landing gear bracket is seated securely against landing gear and landing gear stop tab.

Securing Bracket

After the bracket is seated correctly, the nut can be tightened. Tighten the landing gear bracket nut (A) to 10-18 ft-lbs. The landing gear bracket flanges should not measure less than 2 3/8" on the inside diameter.

NOTE: Bolt is not used as a stop.

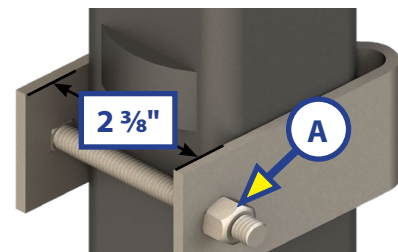



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.