


LEVELING AND STABILIZATION

Zero Point Calibration

1. Set a carpenter's level on the floor inside the unit and use the manual controls to manually level the unit according to the carpenter's level. Do this for front to back and side to side level.
2. Once the unit is level, press the "ON/OFF" button to turn off the interface (Fig. 1A).
3. With the interface turned off, press and release the "FRONT" button 10 times and then press and release the "REAR" button 10 times (Fig. 1B-C). The interface will flash and beep, and the display should read "ZERO POINT CALIBRATE" (Fig 1). To set this position in the memory, press "ENTER" (Fig. 1D).

4. The display should read "ZERO POINT STABILITY SUCCESSFULLY SET" (Fig. 2).

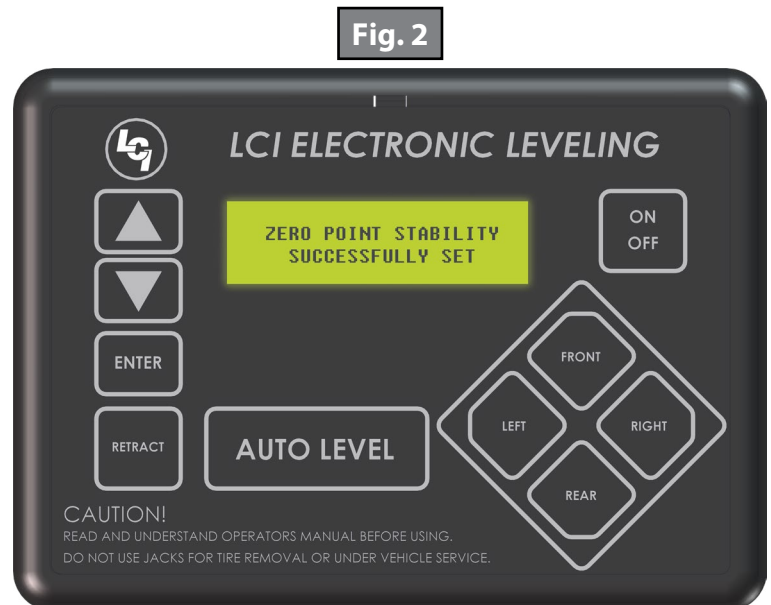

5. The Level Up system is now calibrated and ready to use.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.