

HYDRAULICS

Manual Override

1. Locate all valves that operate the leveling jacks and the slide-out. There will be four leveling jack valves and one slide-out valve. The slide-out valve will have two black hoses entering the port. The leveling jacks will only have one black hose each (Fig. 9).
2. Locate the hex head receptacle at the end of the valve. This is the manual override for the valve. It should normally be in the fully counterclockwise position (Fig. 1). By turning the manual override clockwise with a $\frac{1}{8}$ " hex wrench, the valve is manually overridden (Fig. 2).
3. Isolator Valve - Blue Knurled Knob in normal operation position (Fig. 3).
4. Push Blue Knurled Knob in towards manifold (Fig. 4).
5. Turn knob to the left until it stops; approximately $\frac{1}{4}$ turn (Fig. 5).
6. Release knob. Blue Knurled Knob should now be extended for manual override operation (Fig. 6).
7. Remove plastic cap (Fig 7A).
8. Disconnect power cables on the motor (Fig. 7B).
9. Using a $\frac{1}{2}$ " socket, insert into auxiliary drive device, i.e. cordless or power drill.
10. Insert $\frac{1}{2}$ " socket onto coupler found under plastic cap (Fig. 8).
11. Run drill in reverse or counterclockwise to retract jacks.
12. Once the leveling jacks and slide-out have completed their operation, turn all manual overrides to the normal or counterclockwise position to close the valves (Fig. 1).

Fig. 1



Fig. 2



Fig. 3

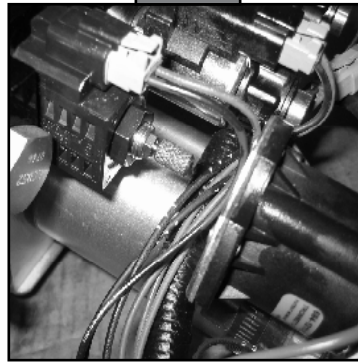


Fig. 4

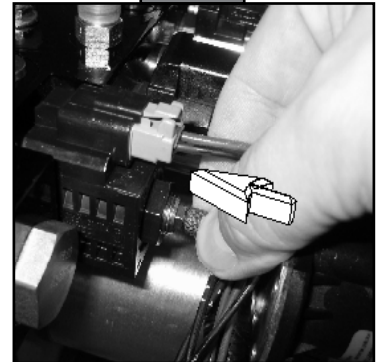


Fig. 5



Fig. 6



Fig. 7



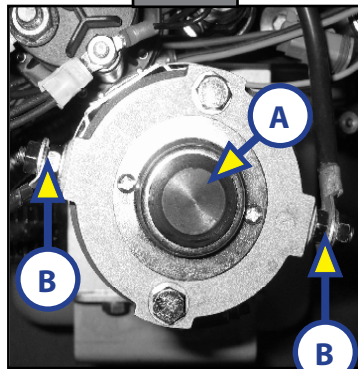


Fig. 8

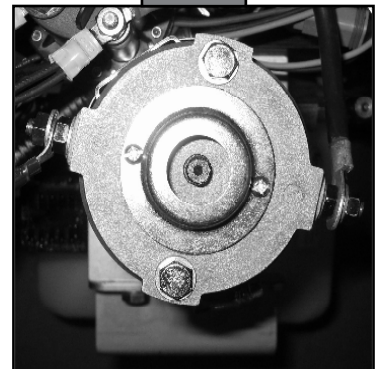

HYDRAULICS

Fig. 9

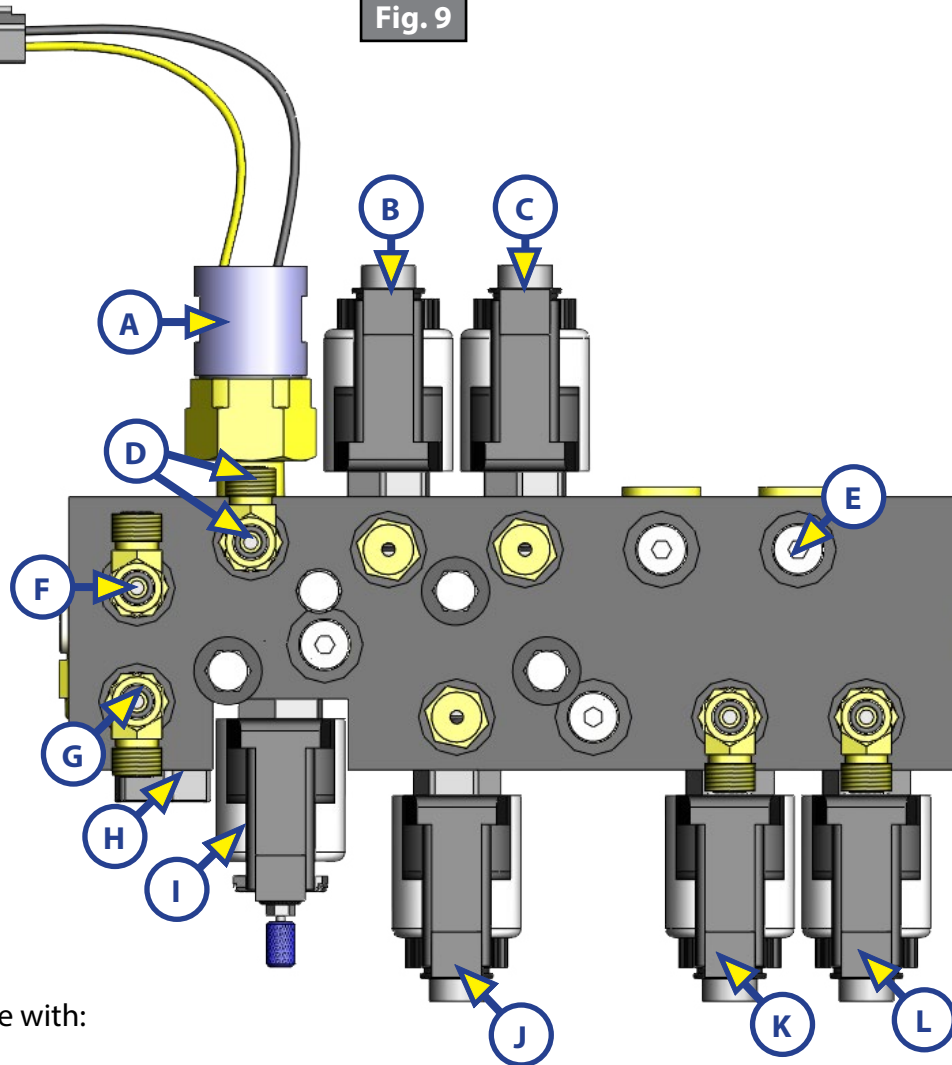


3-Point Leveling

3-Point Leveling is available with:

- 1 Slide-out
- 2 Slide-outs or
- 2 Slide-outs Plus 1 Generator Slide

- A.** Pressure Switch - Yellow & Black Wires connect to Yellow & Black Wires
- B.** Left Rear Extend Valve & Port- Leveling - Straight Fitting - Blue & Black Wires
- C.** Right Rear Extend Valve & Port- Leveling - Straight Fitting - Red & Black Wires
- D.** Retract Port - Leveling - "T" Fitting - Green & Black Hose Marker
- E.** Extend Valve & Port (Genslide Option) - Genslide for 3-point +3 Only - Straight Fitting - Purple & Black Wires
- F.** Front Retract Port - Slide-out - "T" Fitting
- G.** Rear Retract Port - Slide-out - "T" Fitting
- H.** Flow Divider
- I.** Isolator Valve - Green & Black Wires
- J.** Front Extend Valve & Port - Leveling - Straight Fitting - Green & Black Wires
- K.** Extend Valve & Port - Slide-out 1 - Straight fitting for single cylinder slide-outs; "T" fitting for dual cylinder slide-outs - Tan & Black Wires
- L.** Extend Valve & Port - Slide-out 2 - Straight fitting for single cylinder slide-outs; "T" fitting for dual cylinder slide-outs - Orange & Black Wires

HYDRAULICS

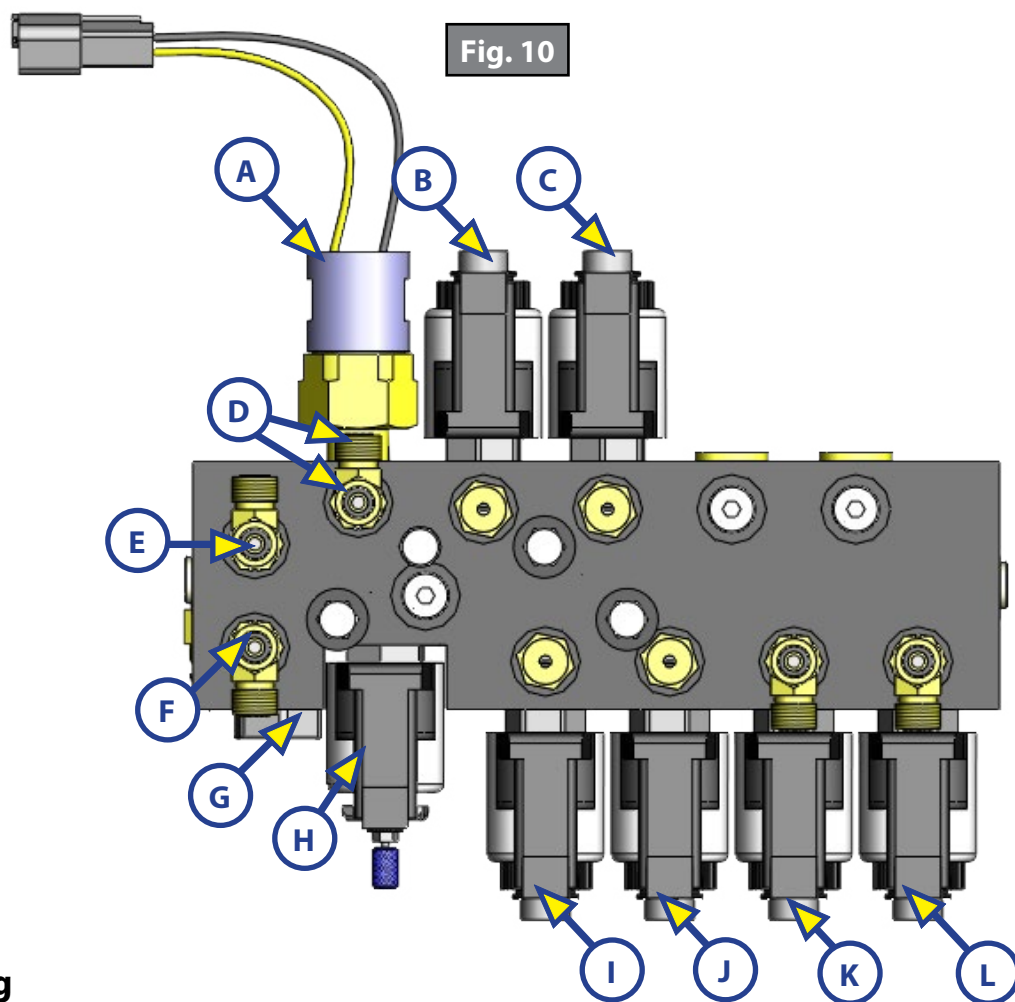

4-Point Leveling

4-Point Leveling is available with one or two slide-outs.

- A.** Pressure Switch - Yellow & Black Wires connects to Yellow & Black Wires
- B.** Left Rear Extend Valve & Port - Leveling - Straight Fitting - Blue & Black Wires
- C.** Right Rear Extend Valve & Port - Leveling - Straight Fitting - Red & Black Wires
- D.** Retract Port - Leveling - "T" Fitting - Green & Black Hose Marker
- E.** Front Retract Port - Slide-out - "T" Fitting
- F.** Rear Retract Port - Slide-out - "T" Fitting
- G.** Flow Divider
- H.** Isolator Valve - Green & Black Wires
- I.** Left Front Extend Valve & Port - Leveling - Straight Fitting - Green & Black Wires
- J.** Right Front Extend Valve & Port - Leveling - Straight Fitting - Purple & Black Wires
- K.** Extend Valve & Port - Slide-out 1 - Straight fitting for single cylinder slide-outs; "T" fitting for dual cylinder slide-outs - Tan & Black Wires
- L.** Extend Valve & Port - Slide-out 2 - Straight fitting for single cylinder slide-outs; "T" fitting for dual cylinder slide-outs - Orange & Black Wires

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.