

STORAGE AND CONVENIENCE

NOTE: The manual tire winch is designed to be operated by manual crank or wrench only.

By using the manual crank or with a hand wrench, the spare tire can be lowered or raised for stowing by simply cranking the manual crank extension (Fig. 1A).

Part Numbers:

[146384](#) - 69" Spare Tire Carrier

[159041](#) - 71" Spare Tire Carrier

[216793](#) - 77" Spare Tire Carrier (w/ Crank Handle)

Fig. 1

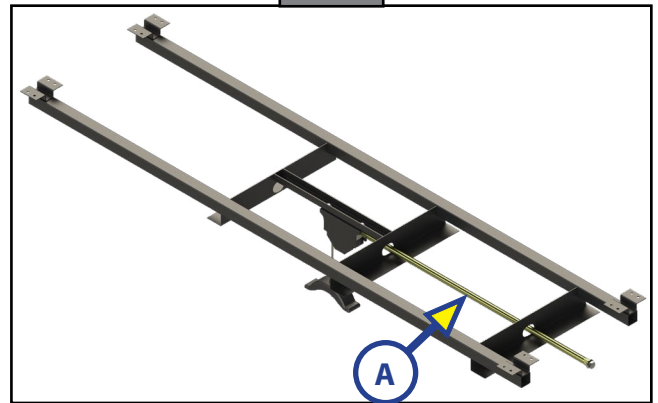


Fig. 2



NOTE: The spare tire **MUST** be raised to the stow position by manual hand crank only. The tire should be raised to the point that the tire's sidewall contacts the angle brackets firmly (Fig. 2B).

CAUTION

DO NOT over crank it or use a power drill or impact wrench to raise the spare tire as it may damage the winch or cable causing the spare tire to drop from its stowed position and damage the vehicle.



As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.