

AXLES AND SUSPENSION

Single Axle Toe-in Alignment

At the "10" and "2" positions on each tire (Fig. 1), measure the distance between the center tread of the tire and the main rail of the frame at both the front side (Figs. 2 and 3) of the tire (A) and the rear side (Figs. 2 and 3) of the tire (B). The (A) position measurement should be smaller or equal to the (B) position measurement.

Fig. 1

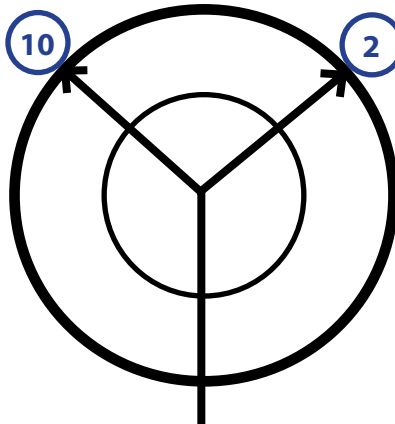


Fig. 2


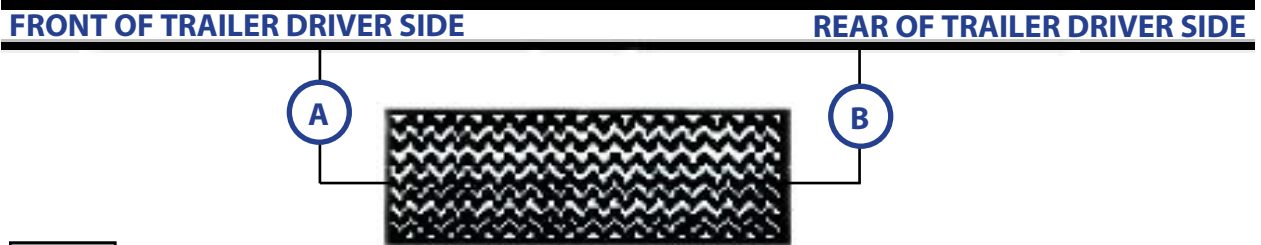


Fig. 3

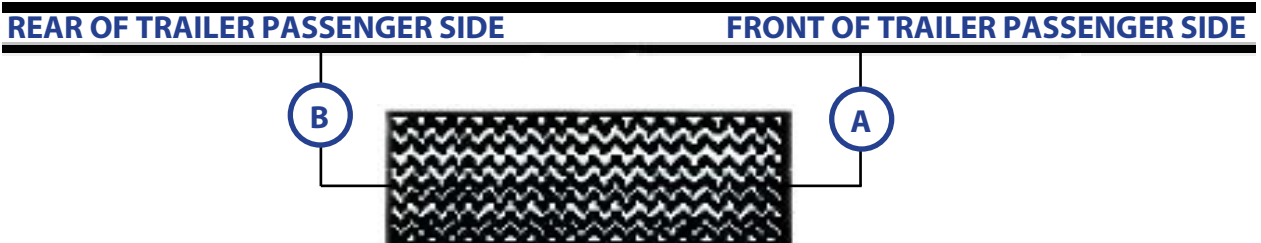

Measurement Location	A	B
DRIVER SIDE TIRE		
PASSENGER SIDE TIRE		

AXLES AND SUSPENSION

Double Axle Toe-in Alignment

At the "10" and "2" positions on each tire (Fig. 4), measure the distance between the center tread of the tire and the main rail of the frame at both the front side (Figs. 5 and 6) of the tire (A) and the rear side (Figs. 5 and 6) of the tire (B). The (A) position measurement should be smaller or equal to the (B) position measurement. The (C) measurements (Figs. 4, 5 and 6) are to be equal.

Fig. 4

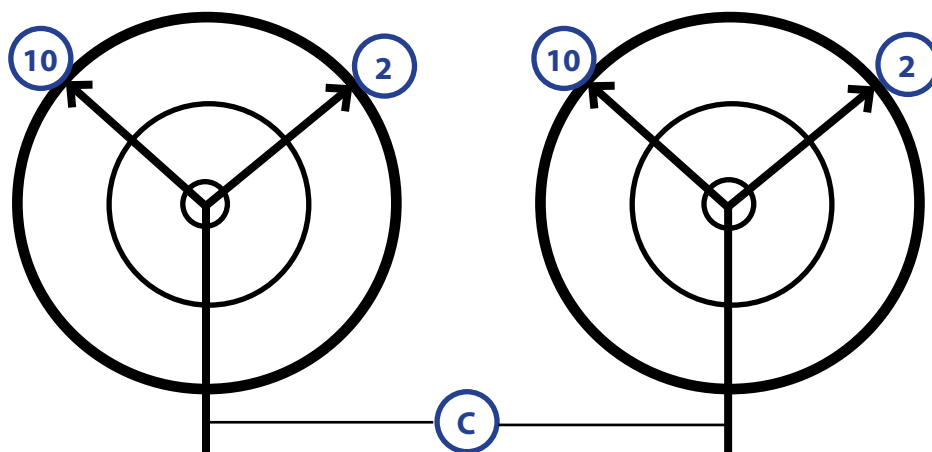


Fig. 5


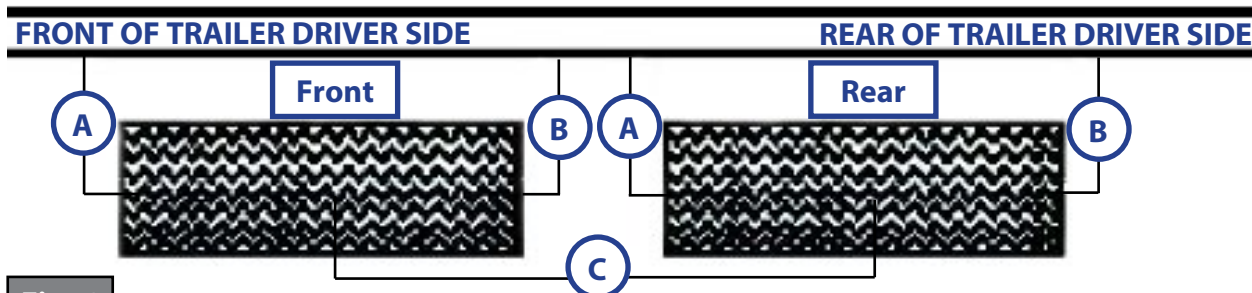


Fig. 6

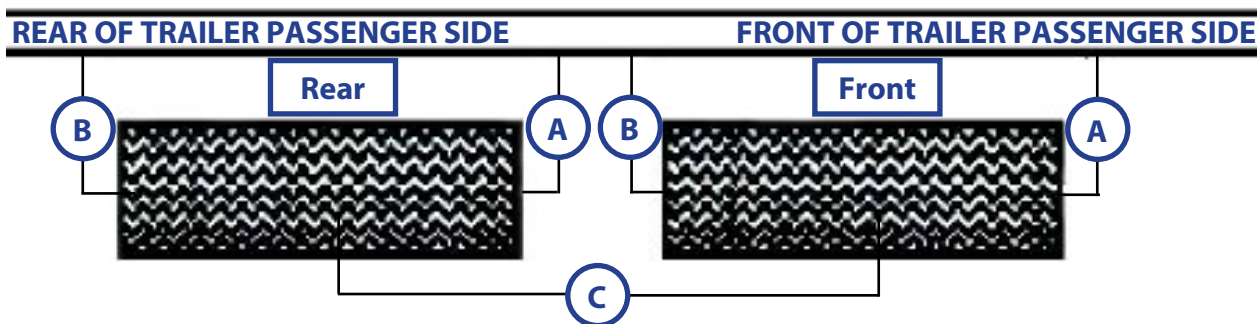

Measurement Location	A	B	C
DRIVER SIDE FRONT TIRE			
DRIVER SIDE REAR TIRE			
PASSENGER SIDE FRONT TIRE			
PASSENGER SIDE REAR TIRE			
DRIVER SIDE (C)			
PASSENGER SIDE (C)			

AXLES AND SUSPENSION

Triple Axle Toe-in Alignment

At the "10" and "2" positions on each tire (Fig. 7), measure the distance between the center tread of the tire and the main rail of the frame at both the front side (Figs. 8 and 9) of the tire (A) and the rear side (Figs. 8 and 9) of the tire (B). The (A) position measurement should be smaller or equal to the (B) position measurement. The (C) measurements (Figs. 7, 8 and 9) are to be equal. The (D) measurements (Figs. 7, 8 and 9) are to be equal.

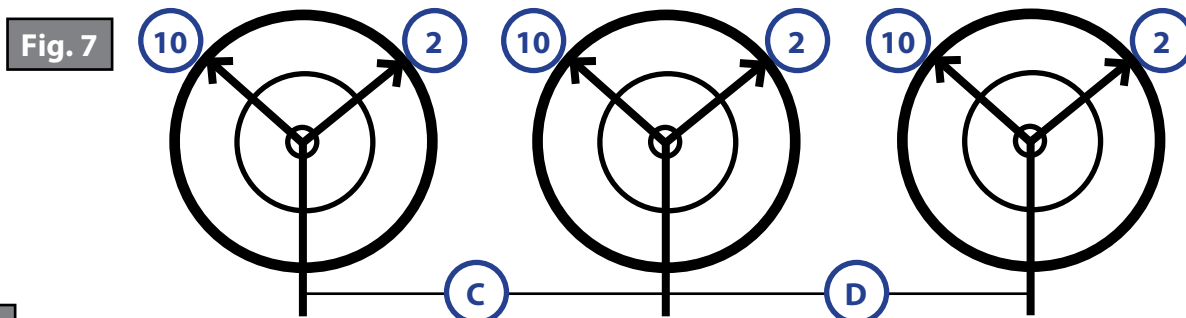


Fig. 8


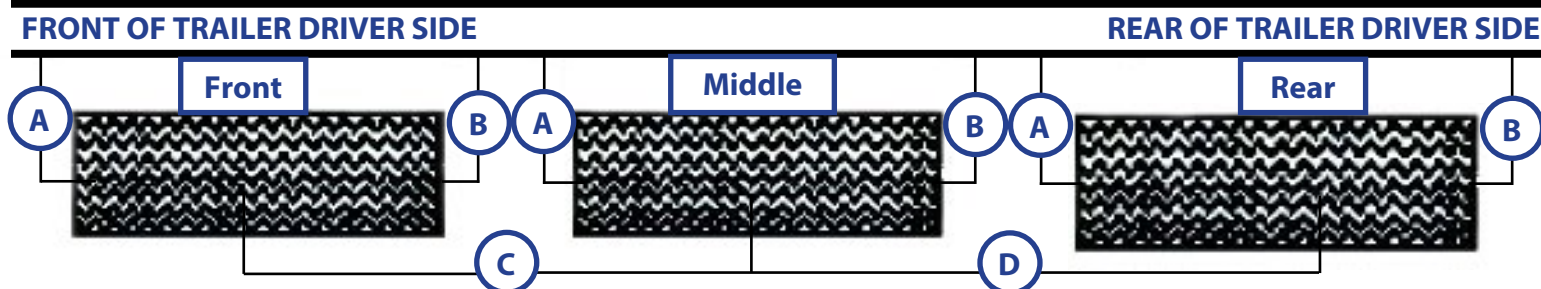


Fig. 9



Measurement Location	A	B	C	D
DRIVER SIDE FRONT TIRE				
DRIVER SIDE MIDDLE TIRE				
DRIVER SIDE REAR TIRE				
PASSENGER SIDE FRONT TIRE				
PASSENGER SIDE MIDDLE TIRE				
PASSENGER SIDE REAR TIRE				
DRIVER SIDE (C and D)				
PASSENGER SIDE (C and D)				

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.

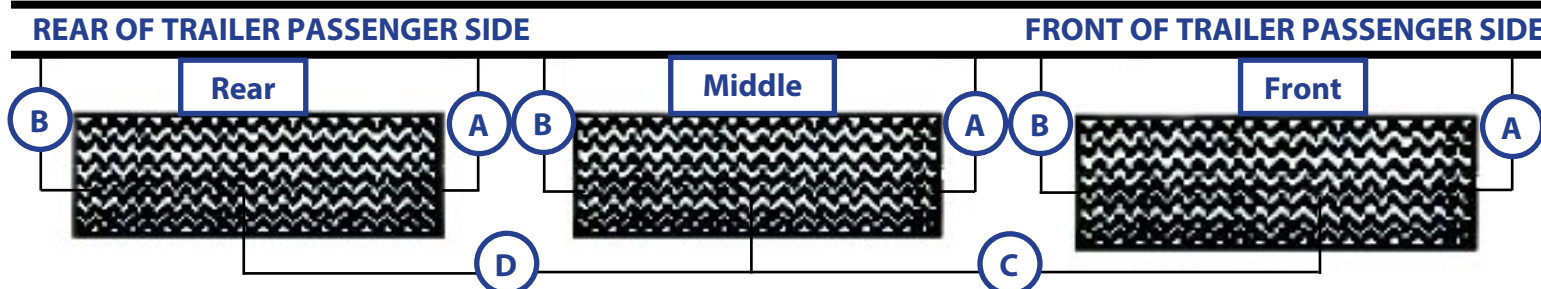

This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.