

POWER AND MOTION

⚠ WARNING

Failure to act in accordance with the following may result in death or serious personal injury.

NOTE: Always make sure that the EZ Bedlift path is clear of people and object before and during operation of the slide-out room.

NOTE: Always keep away from the bedlift rails when the room is being operated. The chain assembly may pinch or catch causing personal injury.

NOTE: Install lock pins on the bedlift during the storage and transportation.

Fig. 1 Key Switch



Fig. 2 Momentary Switch



To operate EZ Bedlift:

1. Park and level the unit.
2. Verify the battery is fully charged and hooked-up to the electrical system.
3. Remove the Lock Pins.
4. Turn key in Key Switch (Fig. 1) counterclockwise or press and hold the Switch (Fig. 2) in the down position until the beds are lowered into final location and stops moving.
5. Release the key or the switch.
6. To move the beds back up into travel or storage position, turn key in key switch clockwise or press the UP position on the momentary switch until beds reach the desired location.
7. Release the key or the switch.
8. Replace Lock Pins for travel and storage.

NOTE: Both key switch and momentary switches are spring loaded and will return to the off position when released.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.