

DOORS

Purpose

This document outlines the procedure for replacing the patio Wall Armor flap seal.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

⚠ CAUTION

The "CAUTION" symbol above is a sign that a procedure has a safety risk involved and may cause personal injury, product and/or property damage if not performed safely and within the parameters set forth in this document.

⚠ CAUTION

Use appropriate personal protective equipment (PPE) for the procedure being performed.

⚠ CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Resources Required


- Cordless or electric drill or screw gun
- Appropriate drive bits
- (2) #8 -18 x ½ PNH screws
- Blue sealant stick or flat head screw driver
- Cutting tool

Procedure

Removal of Flap Seal if Applicable

1. To replace the wall armor flap seal, open the patio doors (Fig. 1A) and work from inside the unit.
2. Remove the screws at the top (Fig. 1C) and bottom (Fig. 1D) of the doorframe, holding the flap seal in place.
3. Pull the old flap seal out of the slot (Fig. 2A) in the doorframe.

Fig. 1

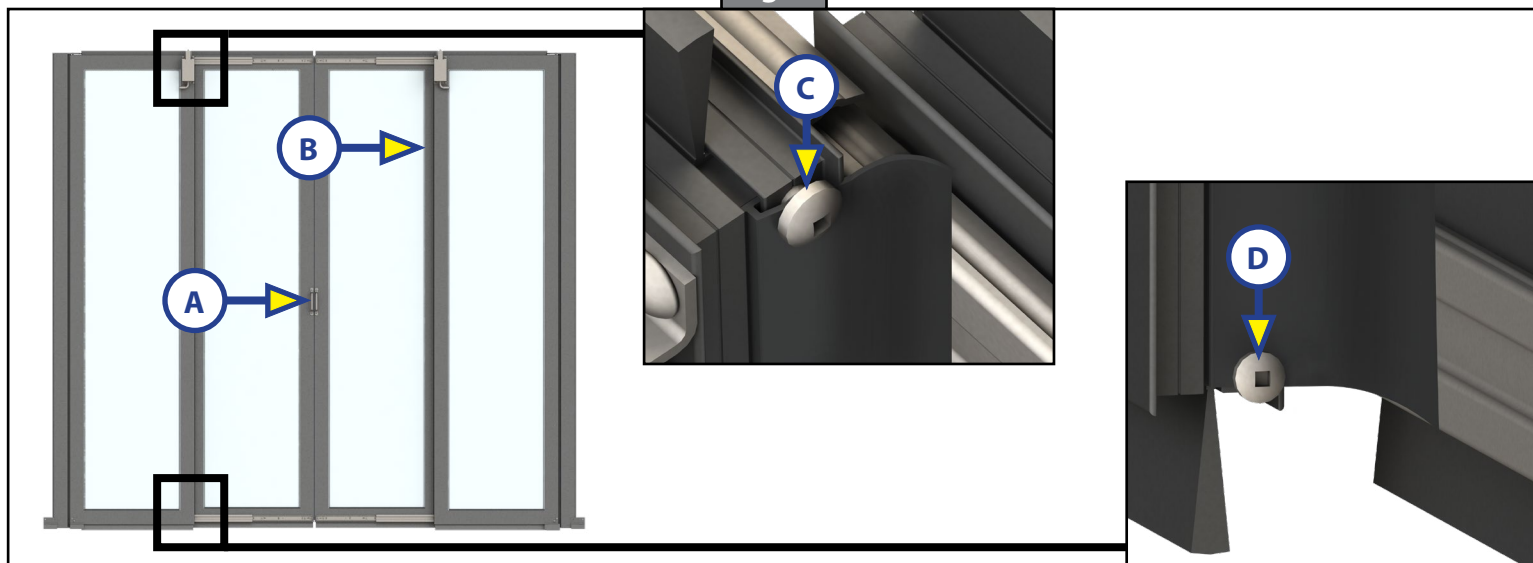

DOORS

Installation of Flap Seal

1. For new flap seal installation, insert the top leg of new flap seal (Fig. 3A) into the slot at the top of the door frame (Fig. 2A).

Fig. 2


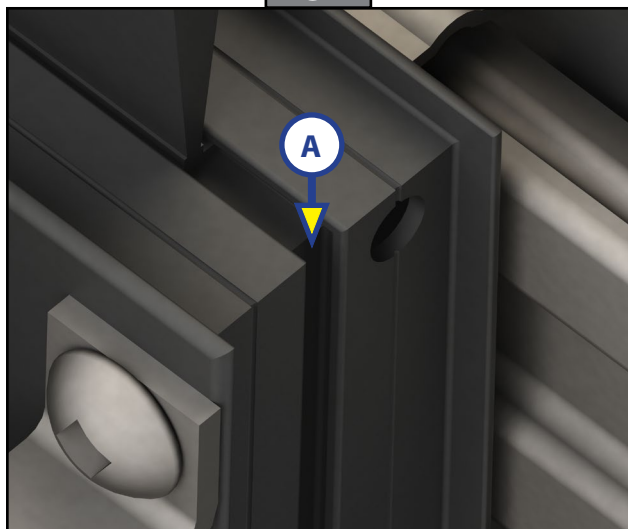


Fig. 3

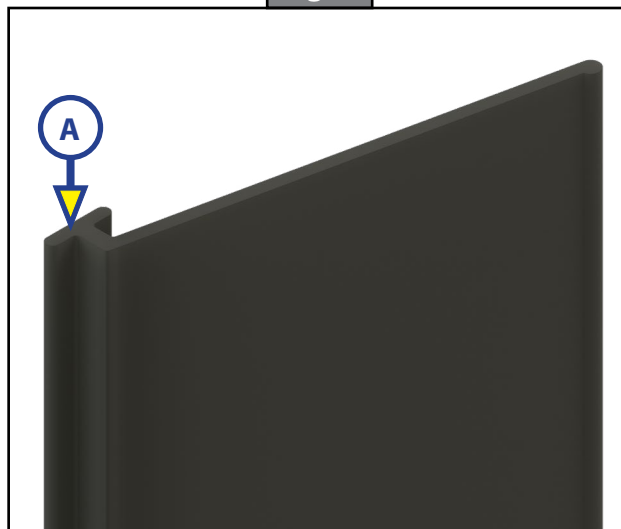

2. Start at the top and use a blue sealant stick or flat head screw driver to push the leg into the slot in the doorframe. Work downward to insert the flap seal into the slot in the doorframe.

NOTE: Be careful not to push the flap seal into the slot of the doorframe too hard or the flap seal might tear.

3. When the flap seal is almost all the way in, go back to the top and install a #8 -18 x ½ PNH screw through the flap seal into the doorframe close to the slot (Fig. 1C).
4. Once the screw is in place, go back to the bottom of the door and lightly pull the flap seal until the ripples are out of the flap seal.
5. Cut the flap seal to be flush with the slot at the bottom of the door.
6. Finish putting the flap seal in the slot — the flap seal will be slightly short of the end. Pull the flap seal to the end of the slot and insert another screw at the bottom of the doorframe (Fig. 1D).
7. If needed, repeat the steps outlined in this document for the opposite side of the doorframe (Fig. 1B).

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.