

 


T.I.P. Troubleshooting Information on Power Gear

MANUAL LEVELING CONTROL **SET-UP PROCEDURE**

Note: The following set-up procedure is for Power Gear control part number 500731

Note: The auxiliary connector is a four pin connector on the back of the control that looks like this.

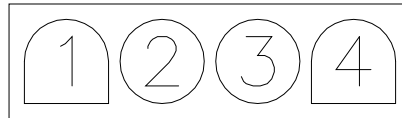

View of Auxiliary Connector

If the control is flashing the ON/OFF light indefinitely, the control is in configuration mode. To exit configuration mode, simply do one of the following:

- **If the auxiliary connector is being utilized** press the right button three times within 10 seconds
- **If the auxiliary connector is not being utilized** press the left button three times within 10 seconds

If you want to get back into configuration mode, do the following:

- Turn the ignition ON and make sure the touch pad is OFF.
- Press the "FRONT JACKS" and "REAR JACKS" buttons simultaneously.
- The ON/OFF light will blink for 10 seconds indicating it is in configuration mode.
 - **If the auxiliary connector is being utilized** press the right button three times within 10 seconds
 - **If the auxiliary connector is not being utilized** press the left button three times within 10 seconds
 - **If nothing is pressed** for 10 seconds, it will exit configuration mode and turn off.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.