




# **T.I.P. Troubleshooting Information on Power Gear**

## **LEVELING CONTROL SYSTEM**


LOGIC VOLTAGE LEVELS ON POWER GEAR, MANUAL AND SEMI-AUTOMATIC LEVELING CONTROLS FOR AUTOMATIC SAFETY RETRACTION OF JACKS ARE:

HIGH = 12 TO 15 VOLTS  
LOW = 0 TO 1 VOLTS

NOTE: ALL PIN POSITION ARE ON 6-PIN CONNECTOR

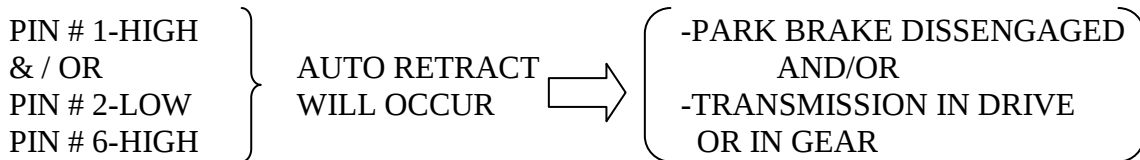

FOR THE LEVELING CONTROL TO BE OPERATIONAL, ONE OF THE FOLLOWING LOGIC CONDITIONS MUST OCCUR. IF, AT ANY TIME, THE ABOVE CONDITION IS MET, THE CONTROL WILL START TO AUTO RETRACT.

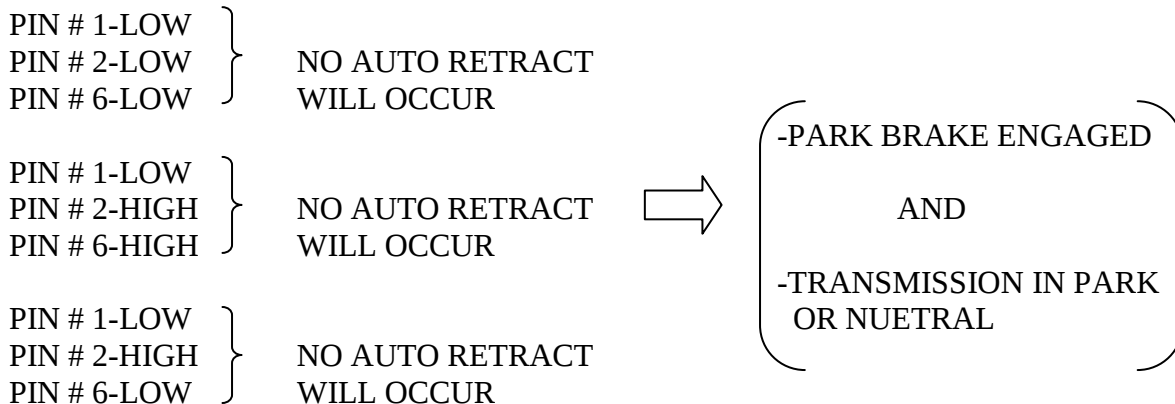

---



---

# This manual is provided courtesy of **RV Tech Cheat Sheet**



**Professional resources for the whole RV industry — free.**

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.

---



---

**[rvtechcheatsheet.com/manuals](https://rvtechcheatsheet.com/manuals)**

**Find thousands more RV manuals, wiring diagrams and parts lists**

**RV techs:** share fixes, ask questions and learn from each other.

**Join our free Facebook group →**

---



---

Follow proper safety practices. If in doubt, consult a professional RV technician.