



T.I.P. Troubleshooting Information on Power Gear

FUSE REPLACEMENT

Fuse replacement for manual control touch pad

NOTE : THIS IS FOR R.V.'S MANUFACTURED AFTER 12-1-95.

XF1 = Power unit motor starter solenoid fuse 1.6 AMP.

XF2 = Dump solenoid fuse 3.15 AMP.

XF3 = Left rear jack solenoid fuse 3.15 AMP. (RR)


XF4 = Right rear jack solenoid fuse 3.15 AMP. (CR)

XF5 = Front jack solenoid fuse 3.15 AMP. (F)

REMOVE: To remove fuse, use needle nose pliers and pull fuse straight out

INSTALL: To install fuse use needle nose pliers to insert the fuse making sure pins on fuse enter receptacle correctly

View shown is back of semi-automatic touch pad.

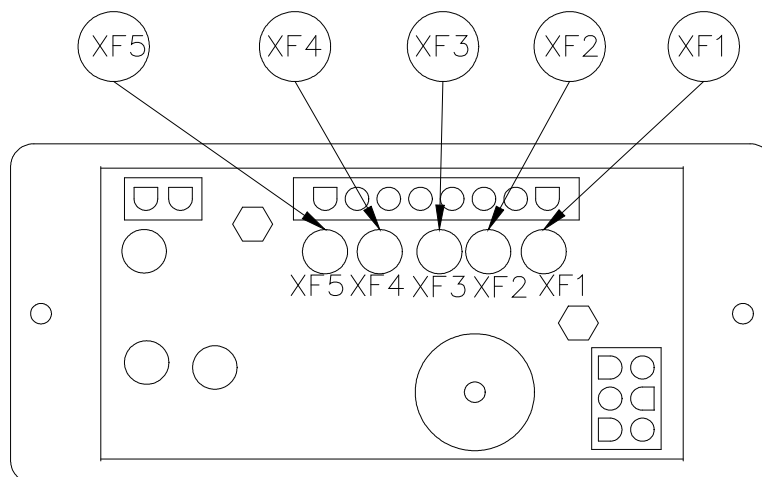

Part # 500089 or 500210



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.