



T.I.P. Troubleshooting Information on Power Gear

"JACKS DOWN" DASH LIGHT NORMAL OPERATION **1993 - 1998**

The Power Gear Manual and Semi-Automatic Leveling systems are equipped with a "Jacks Down" dash light which flashes when and only when the jacks are down and the operator either releases the parking brake or shifts the transmission into gear.

The Jacks Down dash light does not illuminate when jacks are down, park brake is set, and transmission is in neutral or park.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.