




T.I.P. Troubleshooting Information on Power Gear

Inner Rail Realignment

1. Remove cotter hairpin from idler drive shaft.
2. Push the idler drive shaft toward inner rail to disengage the gear from the gear rack.
3. Adjust the room by sliding the idler rail side of the room to the proper position (same distance from the frame as the drive rail side).
4. Push the idler drive shaft back into position engaging the gear and the gear rack.
5. Reinstall cotter hairpin in idler drive shaft.
6. Extend and retract room a couple of times and check for proper room flange sealing.
7. If room is not aligned properly, repeat steps 1 thru 6.

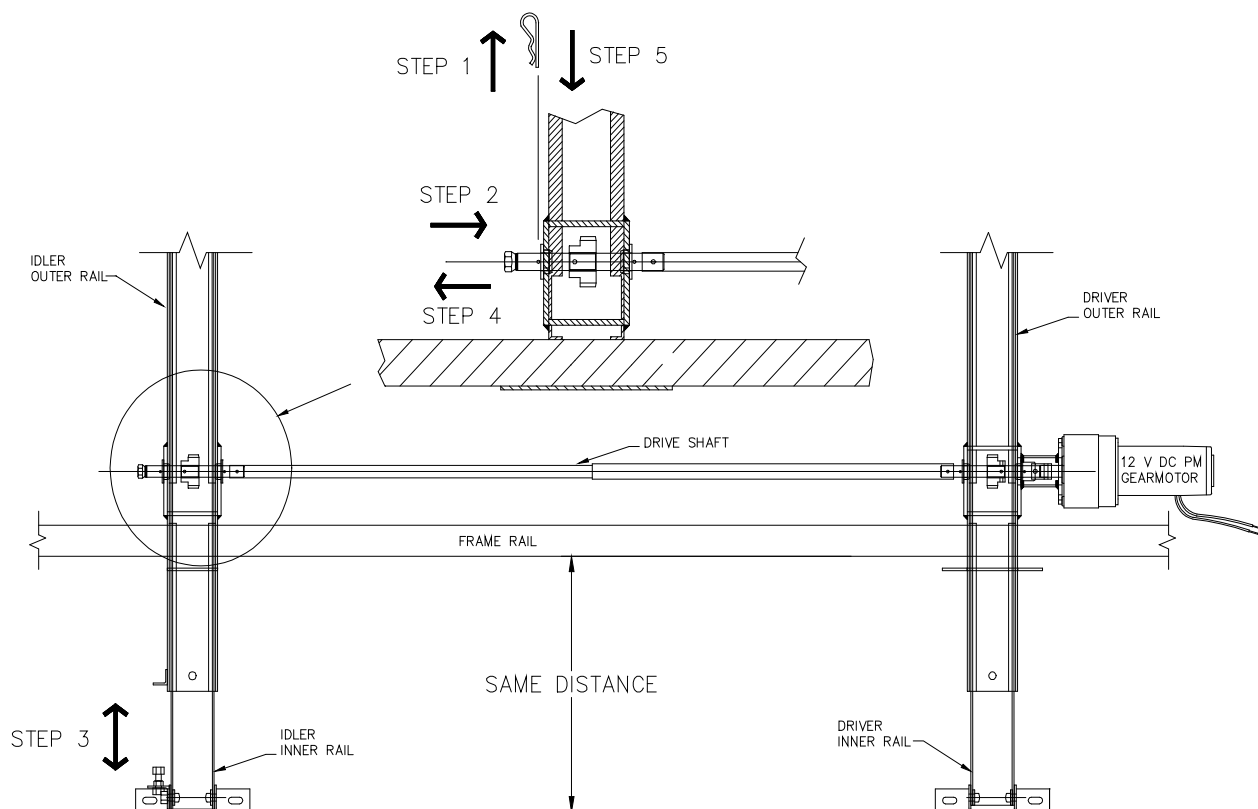



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.