

Purpose

This document outlines how to replace the pull down bullet faucet head.

Safety

Shut off the hot and cold water outlet supply valves for the faucet, typically located below the sink

Procedure

1. Gently pull nozzle head (Fig. 1A) down from faucet, exposing the nozzle head base (Fig. 2A).

Fig. 1


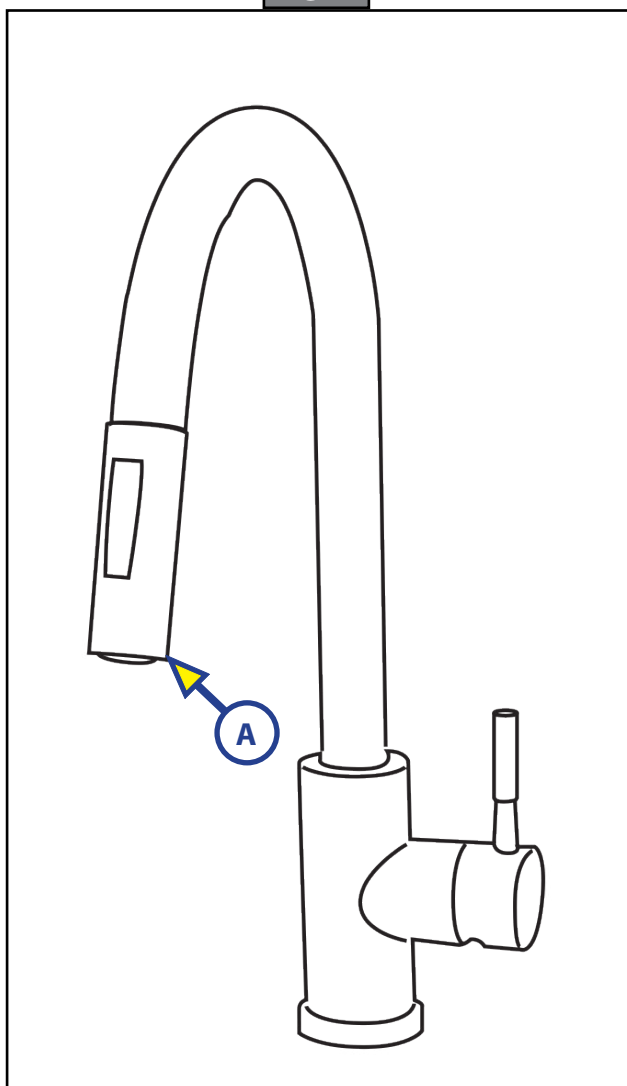



Fig. 2

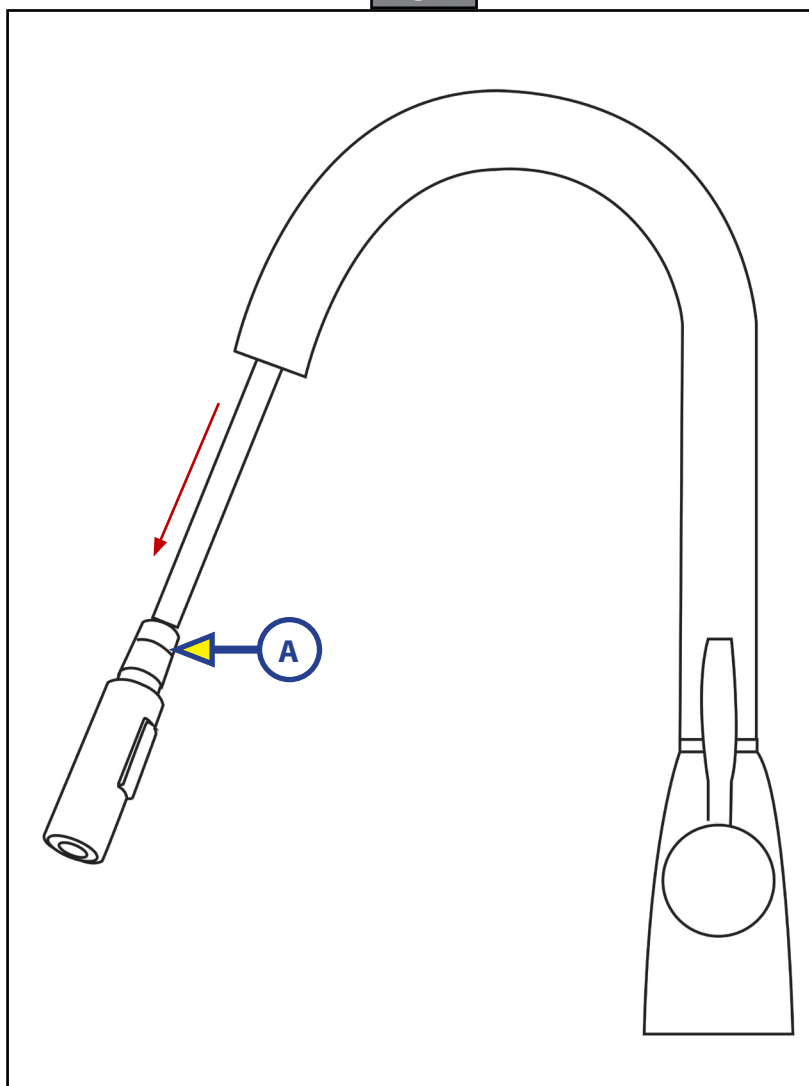

KITCHEN AND BATH


- Firmly grip the nozzle head base (Fig. 3A) that the nozzle head (Fig. 3B) is threaded onto.

Fig. 3

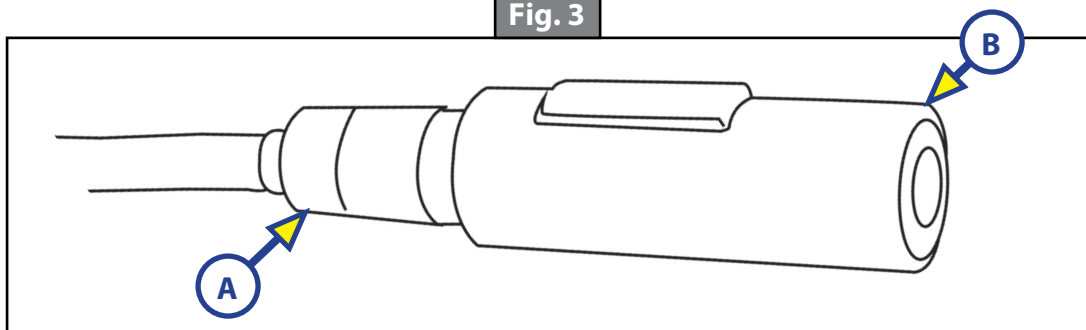

- Twist the nozzle head (Fig 4B) counter clockwise to remove it from the nozzle head base (Fig. 4A).


Fig. 4

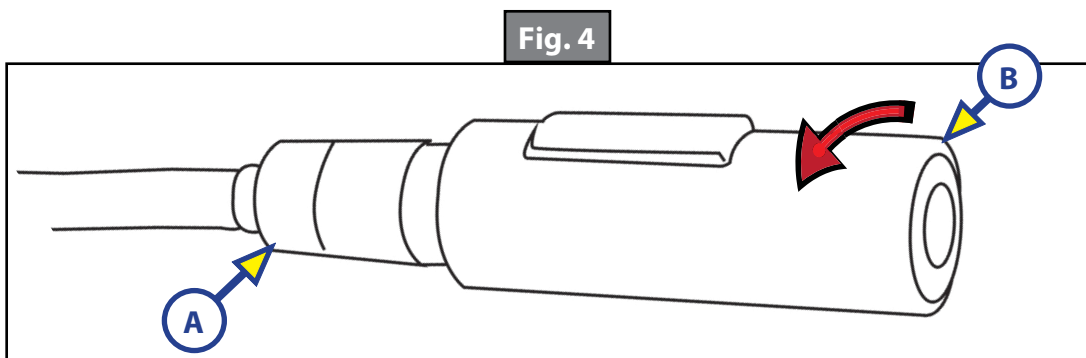

NOTE: DO NOT release your grip on the nozzle head base.

- Thread the new nozzle head (Fig. 5B) onto the nozzle head base clockwise (Fig. 5A). Be careful not to cross thread the nozzle head.

Fig. 5

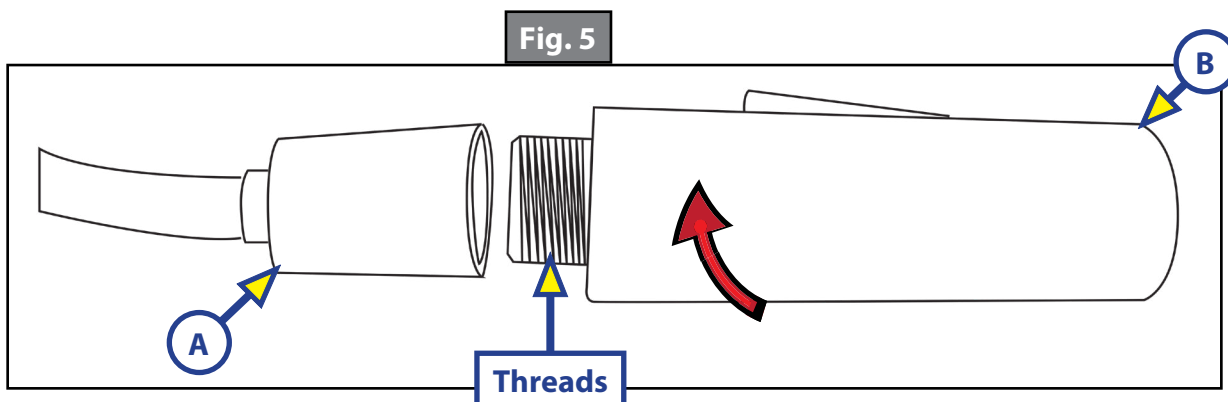

- Tighten the new nozzle head securely but do not overtighten. Overtightening may damage the threads of the nozzle head and lead to leaks.
- Turn water back on and inspect for any leaking.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.