


DOORS

Weld On


1. Tube must be added to the hinge attachment area of the ramp door. Tube must be 1" x 3" - 8 ga. tube minimum (Fig. 1A).

Fig. 1

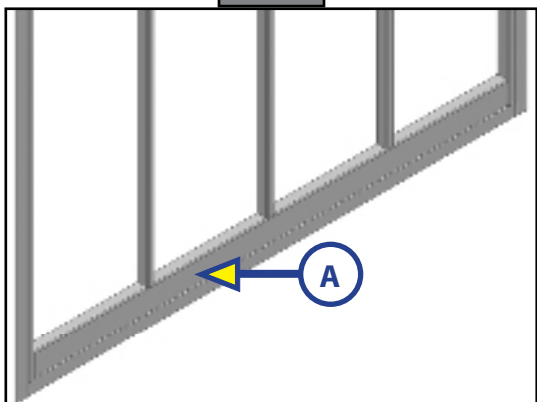


2. Rear cross member must be tied to the next forward cross member. A support tube must be tied into the frame directly forward of the adjustment bracket at minimum. Forward of each hinge assembly is suggested. Support tube must be 2" x 3" - 8 ga. tube minimum (Fig. 2).

Fig. 2

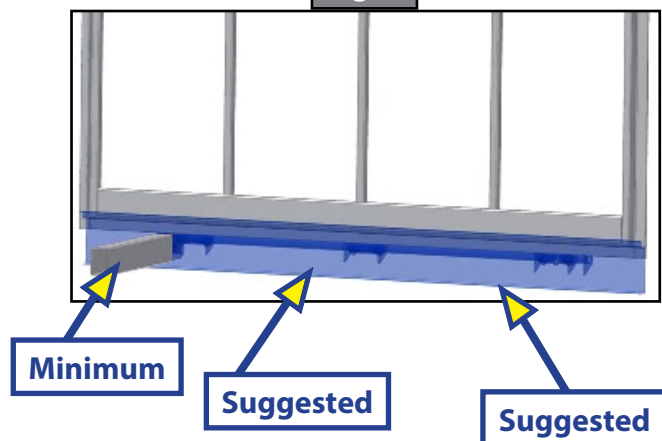


3. Hinge brackets weld locations noted below. Full welds over the length of each weld surface. Weld both sides of bracket (Fig. 3).

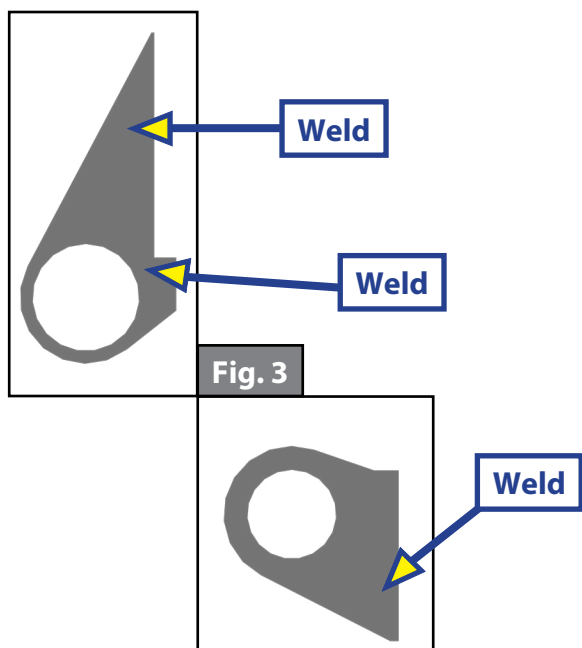

4. Bumper or rear cross member must be 8 ga. minimum (Fig. 4A). Reinforcing welds are to be applied to the 1" x 3" tube opposite of the hinges to ensure the torque on the hinges does not pull the door frame apart.

NOTE: Weld location highlighted in red.

Fig. 4

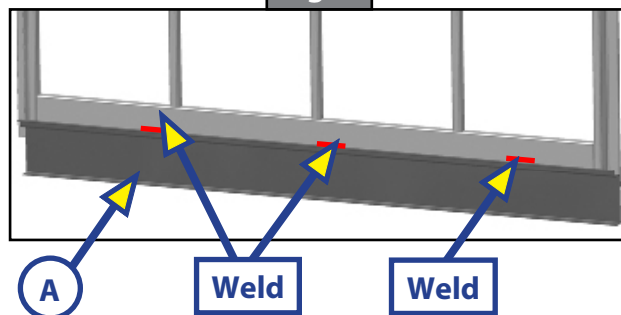

DOORS

Weld On

NOTE: Installation requirements and instructions for Torsion Hinge are for 5 - 8 ½ wide Trailers. The operation of this hinge will apply 5,000 – 9,000 in/lb of force to your Trailer.

The hinge and all components **MUST** be welded to the Trailer strong enough to withstand the in/lb forces being applied to the door and frame. Read and fully understand Instructions before Installing Hinge. Failure to adhere to these instructions and requirements shall void the limited warranty.

Installation and Requirements

1. The rear cross member and door of the trailer/frame must be designed, built and braced to eliminate any flexing. The same must be able to withstand the force applied to them by the torsion hinge while the door is being operated.
2. All Door Hinge Brackets (Fig. 5A) must rest completely against the door without any gaps prior to welding. The Hinge must be centered on the door. The welds must be strong enough to withstand the in/lb forces applied. (Soldering and Brazing are not acceptable.)
3. As the door is being installed, the Frame Hinge Brackets (Fig. 5B) must be rotated until full contact is made with the rear cross member. The welds must be strong enough to withstand the in/lb forces applied. (Soldering and Brazing are not acceptable.)
4. Insert the Hinge End Tube Assembly (Fig. 5A – see diagram) into the end of the hinge.

DOORS

NOTE: 14 brackets on a double system,
7 brackets on a single system.

Fig. 5A - Bracket Detail

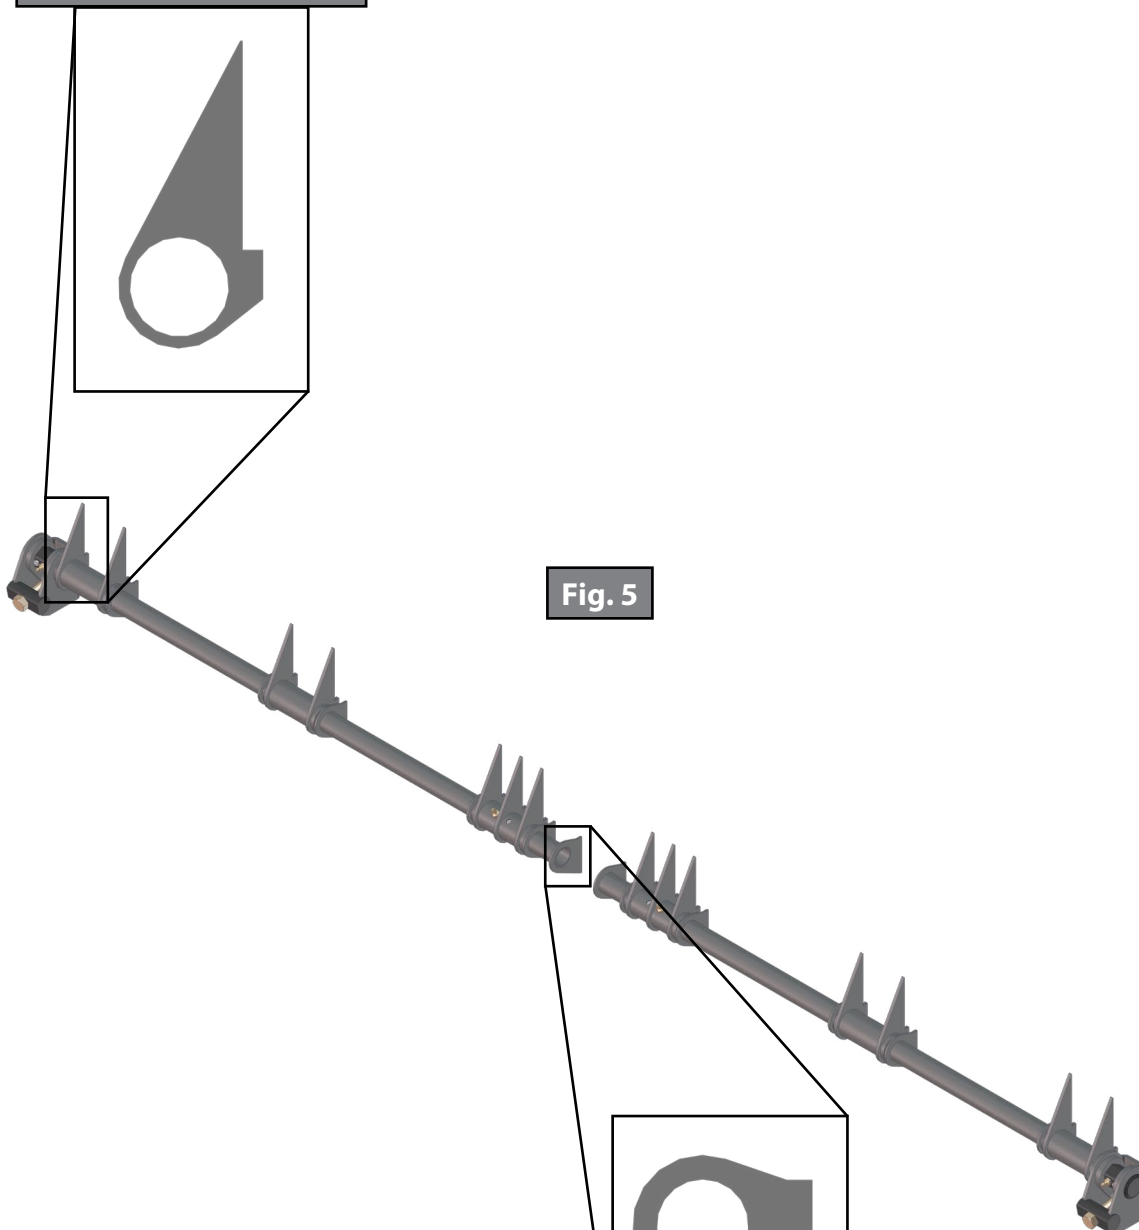


Fig. 5B- Bracket Detail

DOORS

Weld On

1. Maintain proper alignment with the hinge assuring that the End Tube is installed on the same centerline as the Hinge. The welds must be strong enough to withstand the in/lb forces applied. (Soldering and brazing are not acceptable.)
2. Weld the Frame Torsion Bracket Assembly (Fig. 5B) to the rear cross member with the back surface of the bracket making full contact with the rear cross member. The welds **MUST** be strong enough to withstand the in/lb forces applied. (Soldering and brazing are not acceptable.)
3. Turn Adjustment bolt (Bolt "A" - Fig. 7) clockwise to add preload as desired and lock the jam nut (Nut "B" - Fig. 7) to the Pivot shaft (Shaft "C" - Fig. 7) after adjustment is made.

NOTE: Adding preload will lessen the force required to raise the ramp door, however it will increase the closing force of the door.

NOTE: Hinge does NOT come from LCI pre-adjusted.

CAUTION

All attachment points *MUST* have sufficient welds. Any flexing of the frame will result in fatigue fracture at attachment point. Do not attach the torsion hinge to a frame or door that flexes at the point of attachment. Do not open the door with the infinite hinge only tacked, it *MUST* be fully welded before operation.

Do not stand behind the door while operating. Keep all body parts clear of the door while closing.

Maintenance

Add grease during torsion hinge installation - final assembly. General purpose chassis grease is recommended. Annual maintenance should be performed and documented with a visual inspection for any damage and application of lubricant at grease points.

DOORS

Fig. 6 - Assembly A


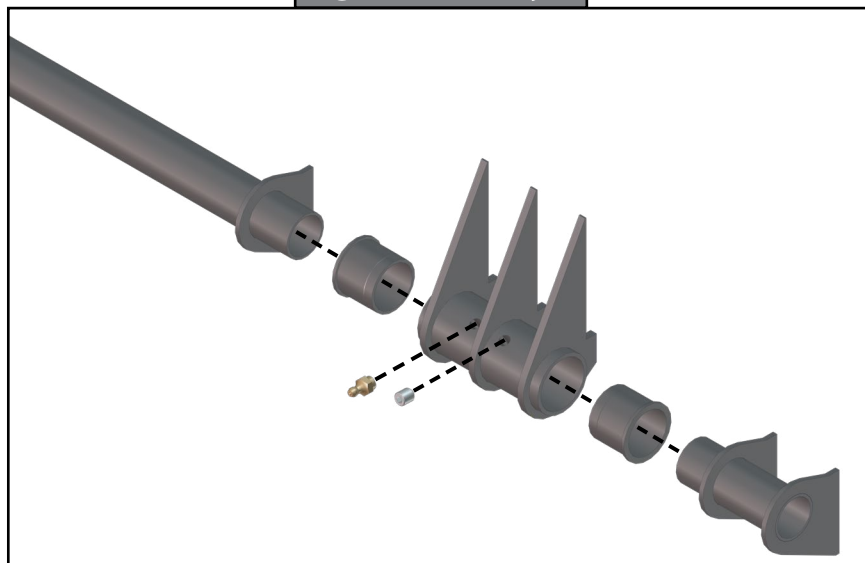



Fig. 7 - Assembly B

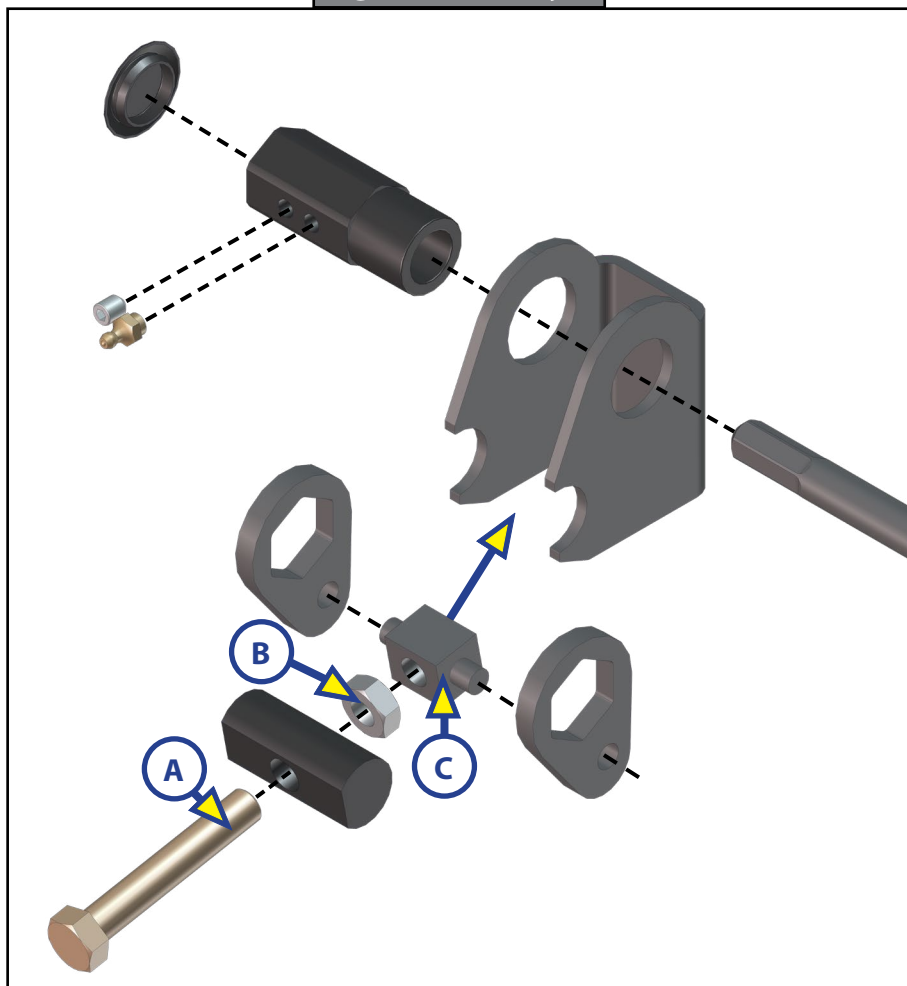


DOORS

Bolt On



1. Tube must be added to the hinge attachment area of the ramp door. Tube must be 1" x 3" - 11 ga. tube minimum (Fig. 8).

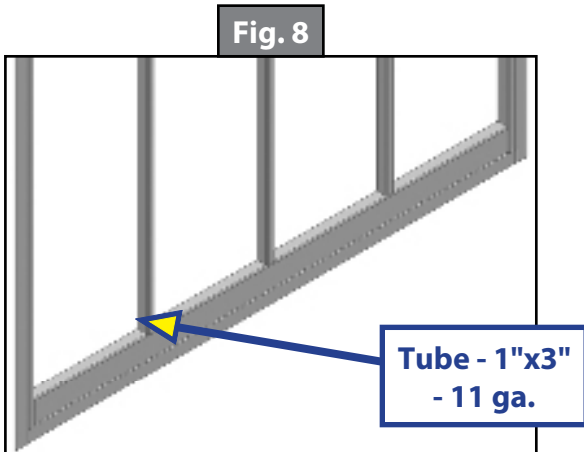


2. Rear cross member must be tied to the next forward cross member. A support tube must be tied into the frame directly forward of the adjustment bracket at minimum. Forward of each hinge assembly is suggested. Support tube must be 2" x 3" - 11 ga. tube minimum (Fig. 9).

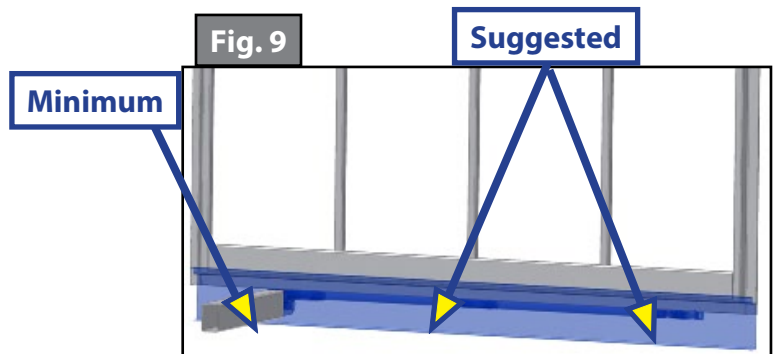

3. Hinge brackets are bolted using Torx barrel nut and hex cap screw and washers (Fig. 10A).

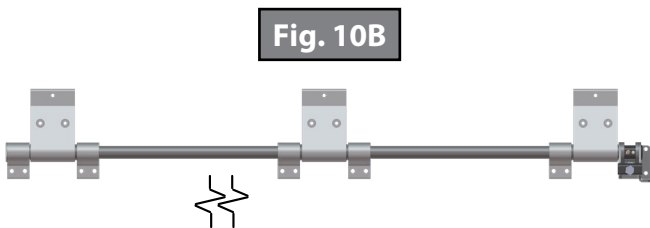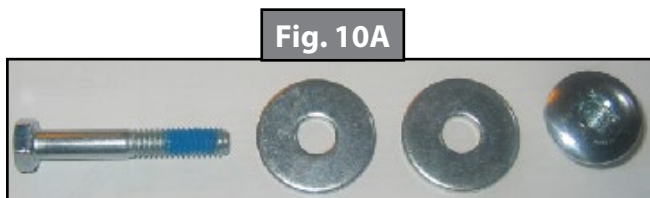

4. Bumper or rear cross member must be 11 ga. minimum (Fig. 10B). Reinforcing welds are to be applied to the 1" x 3" tube opposite of the hinges to ensure the torque on the hinges does not pull the door frame apart. Note weld location highlighted in red.

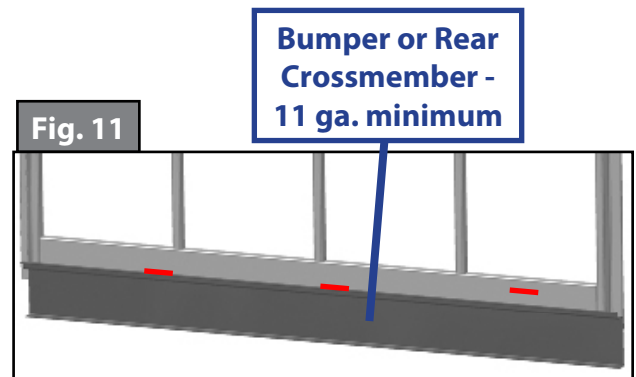

DOORS


Bolt On

NOTE: Installation requirements and instructions for Torsion Hinge are for 5 and 8 ½ wide trailers. The operation of this hinge will apply 5,000 – 9,000 in/lb of force to your trailer. The hinge and all components **MUST** be bolted to the Trailer strong enough to withstand the in/lb forces being applied to the door and frame. Read and fully understand instructions before installing hinge.

Failure to adhere to these instructions and requirements shall void the limited warranty.

Installation and Requirements

1. The rear cross member and door of the trailer/frame must be designed, built and braced to eliminate any flexing. The same must be able to withstand the force applied to them by the torsion hinge while the door is being operated.
2. All Door Hinge Brackets (Bracket "A" – Fig. 12) must rest completely against the door without any gaps prior to bolting. The hinge must be centered on the door. The bolts must be strong enough and torqued to withstand the in/lb forces applied.
3. As the door is being installed, the frame hinge brackets (Bracket "B" – Fig. 12) must be rotated until full contact is made with the rear cross member. The bolts must be strong enough and torqued to withstand the in/lb forces applied.

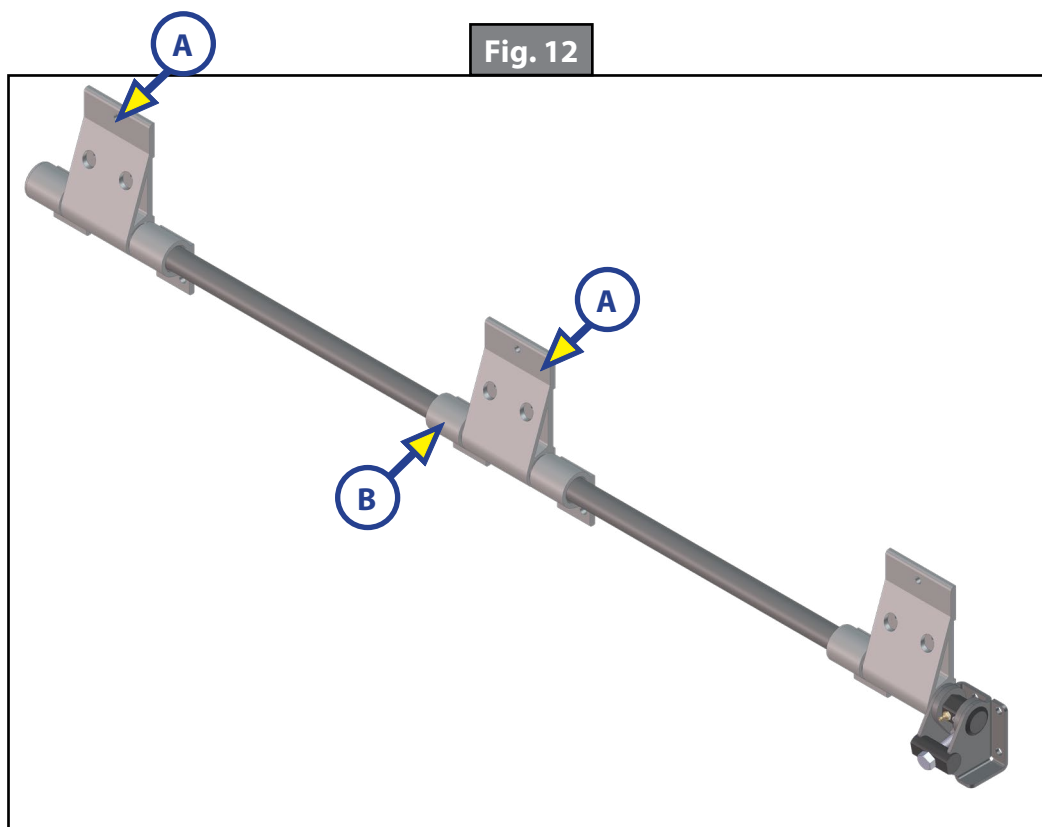

DOORS

Bolt On

1. Insert the Hinge End Tube Assembly (Assembly "A" – see diagram) into the end of the hinge. Maintain proper alignment with the hinge assuring that the end tube is installed on the same centerline as the hinge. The bolts must be strong enough and torqued to withstand the in/lb forces applied.
2. Bolt the Frame Torsion Bracket Assembly (Assembly "B" – see diagram) to the rear cross member with the back surface of the bracket making full contact with the rear cross member. The bolts must be strong enough and torqued to withstand the in/lb forces applied.
3. Turn adjustment bolt (Bolt "A" - see Fig. 14) clockwise to add preload as desired and lock the jam nut (Nut "B" - see Fig. 14) to the pivot shaft (Shaft "C" – see Fig. 14) after adjustment is made.

NOTE: Adding preload will lessen the force required to raise the ramp door, however it will increase the closing force of the door.)

NOTE: Hinge does NOT come from LCI pre-adjusted.

CAUTION

All attachment points MUST have Grade 8 bolts torqued correctly.


Any flexing of the frame will result in fatigue fracture at attachment point. Do not attach the torsion hinge to a frame or door that flexes at the point of attachment.

Do not stand behind the door while operating. Keep all body parts clear of the door while closing.

Maintenance


Annual maintenance should be performed and documented with a visual inspection for any damage and application of lubricant at grease points.

Fig. 13 - Assembly A

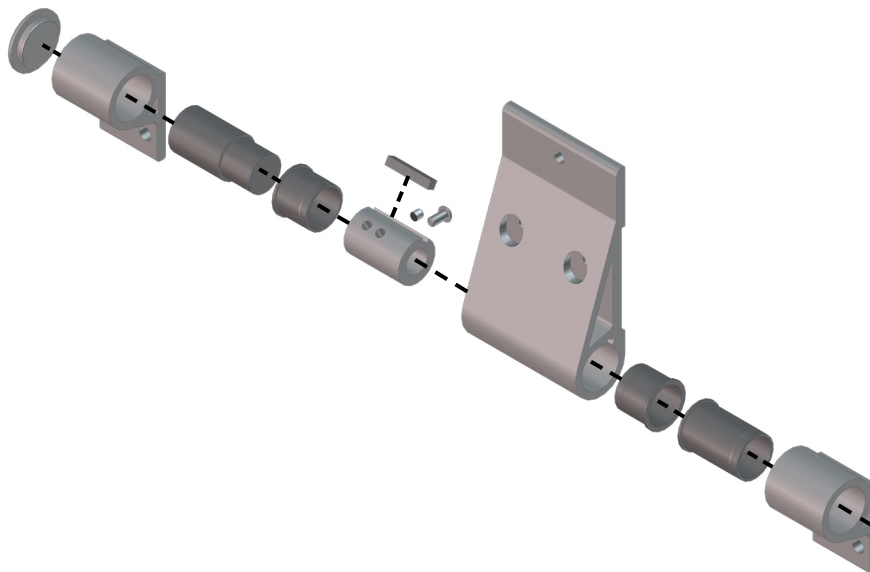

DOORS

Fig. 14 - Assembly B

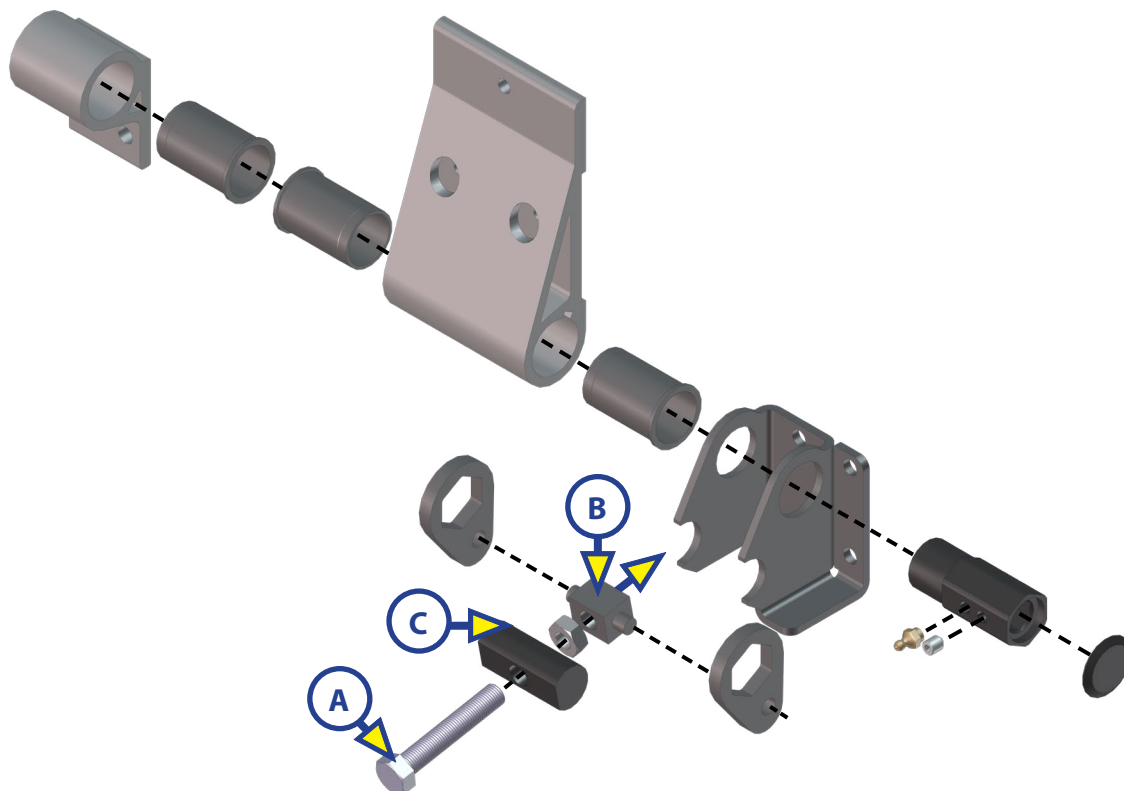

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.