



RAMP DOOR INFINITE HINGE® OPERATING INSTRUCTIONS AND MAINTENANCE REQUIREMENTS

TI-151

DOORS

NOTE: Failure to adhere to the operating instructions and maintenance requirements shall void the limited warranty.

Operating Instructions

Do not operate the ramp door on uneven ground.
Always lower ramp door onto level ground.
Do not release the ramp door until it rests completely on the ground.

Maintenance Requirements

Annual maintenance **MUST** be performed and documented with a visual inspection for any damage and application of lubricant at grease points.

CAUTION

Do not stand behind the ramp door while operating.
Keep all body parts clear of the ramp door while closing.
Do not lower ramp door into a ditch or gully.

**Do not operate if the ramp door begins to be heavy to lift. If this occurs,
contact your Original Manufacturer or your dealer.**

Failure to heed CAUTION may result in serious bodily injury or component and/or property damage.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.