

DOORS

Purpose

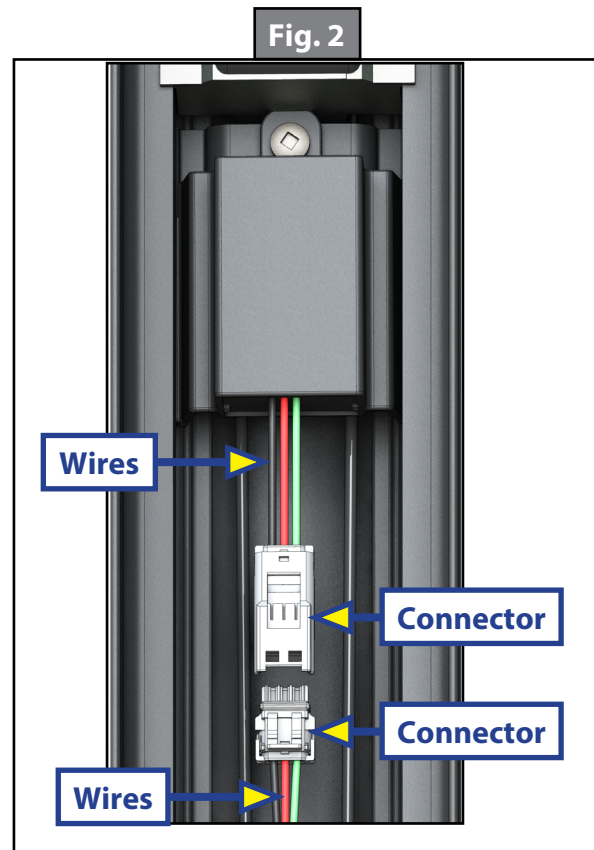
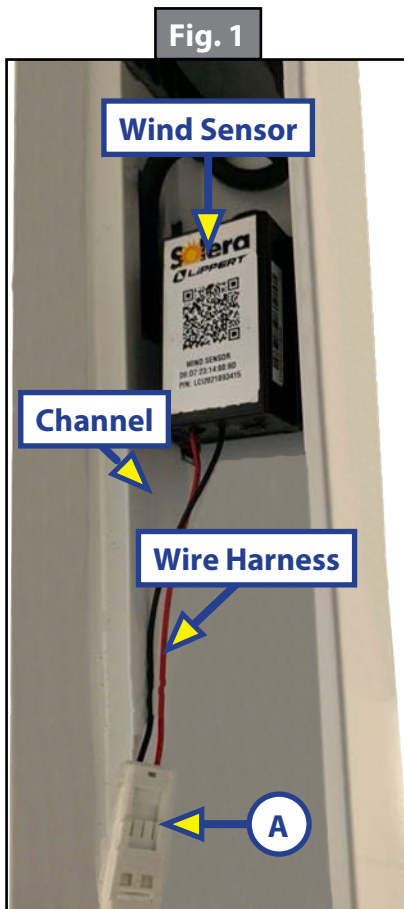
The purpose of this document is to address the issue of a continuous tone emitted by the wind sensor.

Procedure

If the tone is sounding continuously, the sensor can be reset by disconnecting it from power using one of the two options below.

Option 1: Disconnecting the Sensor Connector In the Awning Arm

With the awning extended, disconnect the connector (Fig. 1A) attaching the wind sensor to the wire harness running down the channel of the awning arm. This should detach easily by gripping the two connector halves (Fig. 2A) between the thumb and index fingers and pulling them apart. No tools are needed. Wait five seconds, then reconnect.

**Option 2: Disconnect 12 V Power From the RV**

Disconnect the converter and the battery from the RV. Wait fifteen seconds for the converter to de-energize, then reconnect.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.