

DOORS

Purpose

This document outlines the procedure to replace an RV entry door outer frame pile seal (PN 2020222295).

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

⚠ CAUTION

The "CAUTION" symbol above is a sign that a procedure has a safety risk involved and may cause personal injury, product and/or property damage if not performed safely and within the parameters set forth in this document.

⚠ CAUTION

Use appropriate personal protective equipment (PPE) for the procedure being performed.

⚠ CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Resources Required

- Cordless or electric drill or screw gun
- Appropriate drive bits
- Non-marking pry tool
- Lubricant spray
- Blunt pushing tool
- Safety knife
- Ladder, if applicable

Procedure

1. Open entry door (Fig. 1A) and screen door (Fig. 2A).

NOTE: Secure entry and screen doors to restrict movement while working. Access will be needed to both sides of the exterior frame screw track, which secures the door assembly to the unit.

Fig. 1


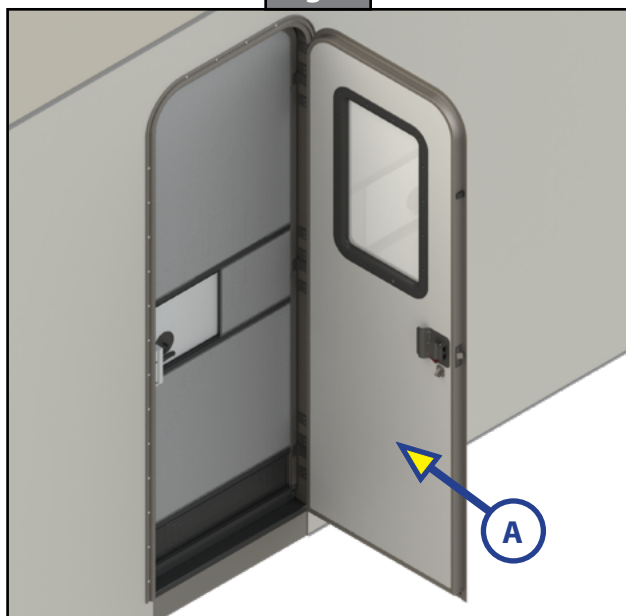




Fig. 2

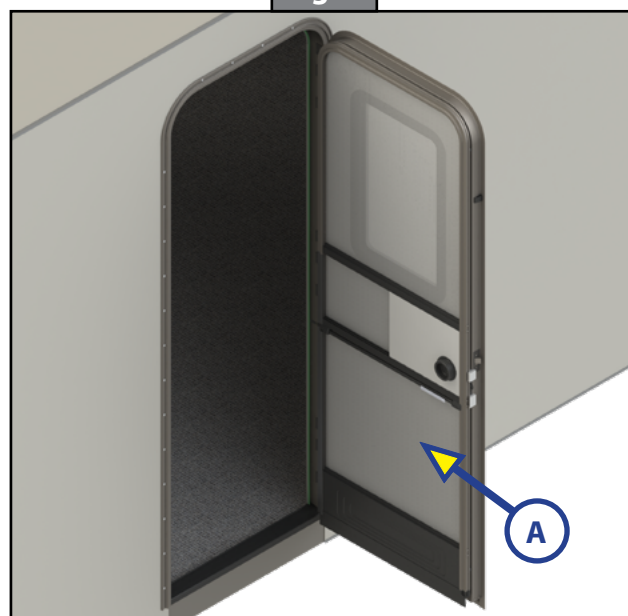

DOORS




- Remove the screw covers by gently prying out on the cover at the bottom (Figs. 3A and 3B). There is one cover on each side of the door frame.

Fig. 3

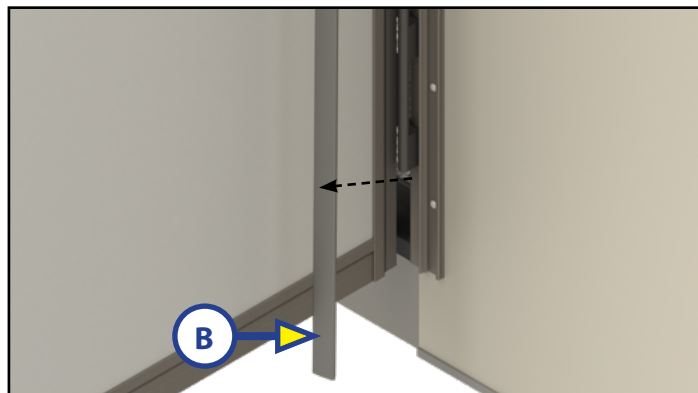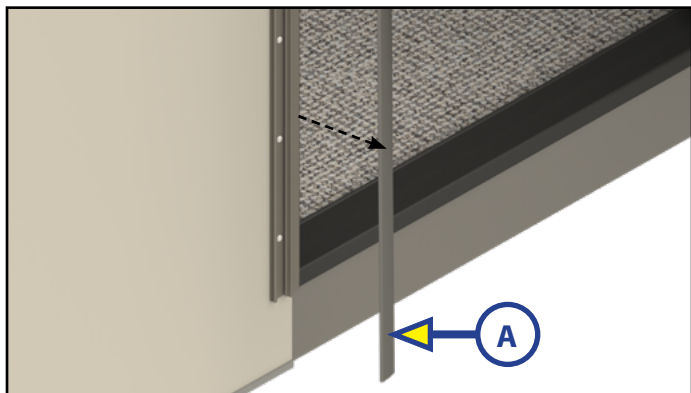

- Remove the screws (Fig. 4A) and set aside, starting from the bottom of the screw track of the exterior door frame (Fig. 4B). The top screws and one screw before the curve of the screw track, (Fig. 4C red box area), should **NOT** be removed. Figure 4D green boxed area shows where the screws need to be removed from the screw track on the exterior door frame.

Fig. 4

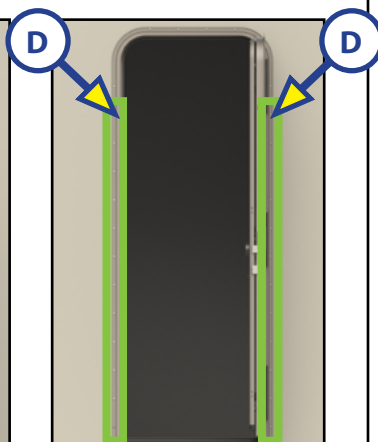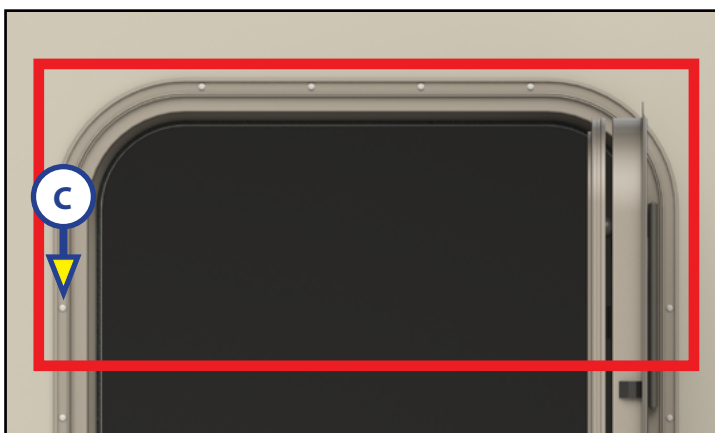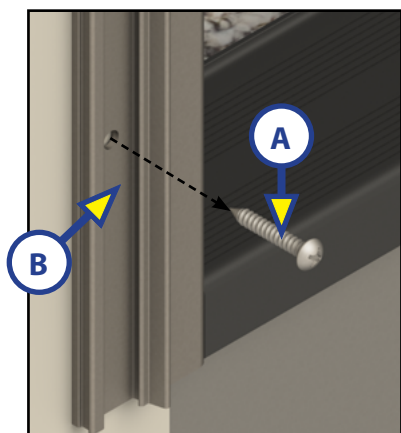


DOORS

4. If applicable, remove any secondary fasteners securing the outer frame to the interior walls of the unit. These fasteners may be found in either the friction hinge components (Fig. 5A) or possibly in the exterior frame at random anchor points.

NOTE: DO NOT remove any rivets that secure the screen/entry door to the outer frame (Fig. 5B).

Fig. 5

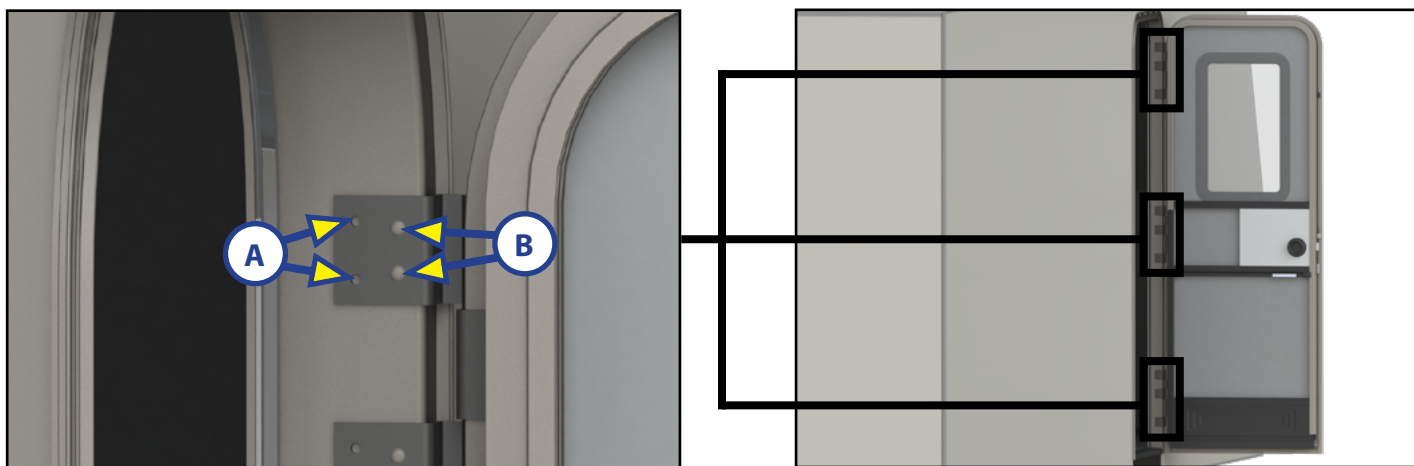

5. Remove and set aside the threshold transition cover (Fig. 6A) from the door assembly, exposing the transition between the floor material and interior threshold side.

Fig. 6



DOORS

6. If applicable, remove the strut from the threshold.
7. If applicable, remove the step assembly from the unit. If the installed step is a Lippert SolidStep, see the link for instruction on how to remove the steps <https://support.lci1.com/steps-support-solidstep>. For entry steps not made by Lippert, see the manufacturer's instructions for removal.
8. With a non-marking pry tool, from the exterior of the unit, gently pry the threshold lip (Fig. 7A) up and away from the side of the unit. Work both directions on the threshold until you reach the outer frame. There may be foam tape or sealant material under the exterior lip of the threshold.
9. On the outer frame, gently pry the frame (Fig. 8A) away from the side of the unit (Fig. 8B). There should be some foam tape or other sealant material behind the screw track channel, which is meant to provide weatherproofing capability. Pry slowly and evenly, working up both sides of the exterior frame until you reach the last screw still anchored into the side of the unit.

NOTE: When prying the door away from the wall you may need to take a knife and score the sealant to help it pull free. Take care not to scratch the door frame.

Fig. 7


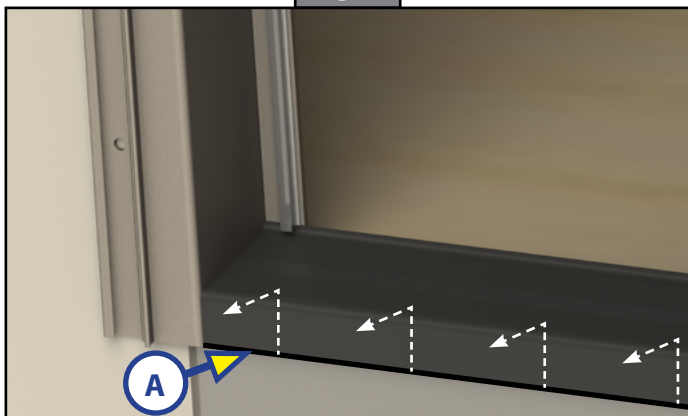


Fig. 8

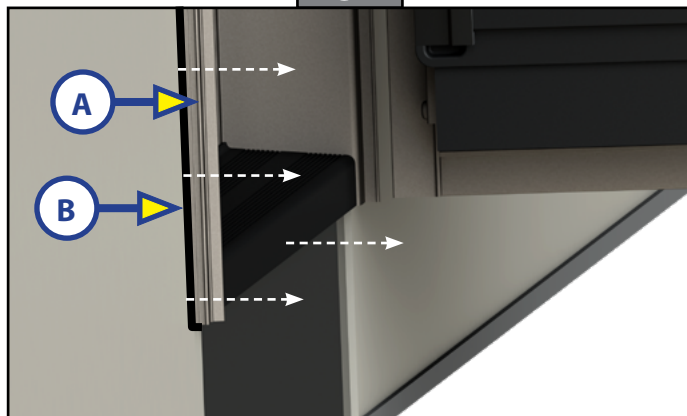

10. Gently pull the bottom latch side of the threshold away from the door frame (Fig. 9A), far enough to get to access to the two threshold screws (Fig. 9B), securing the threshold to the exterior frame.
11. Remove and set aside the two threshold screws (Fig. 10A) from the latch side of the exterior frame. This will give access to the pile seal track.

Fig. 9


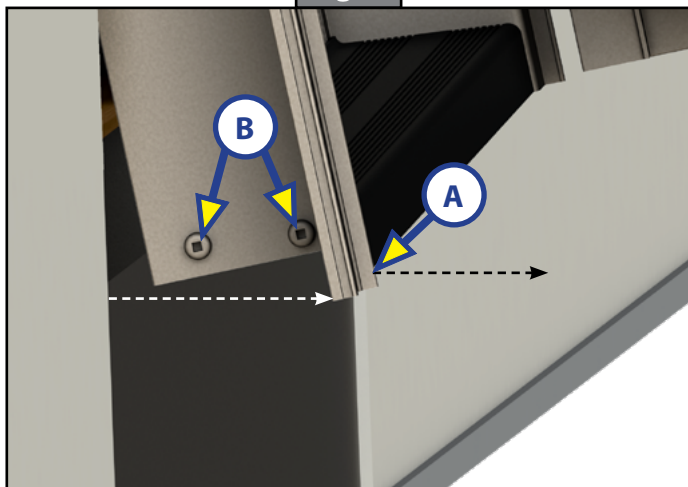


Fig. 10

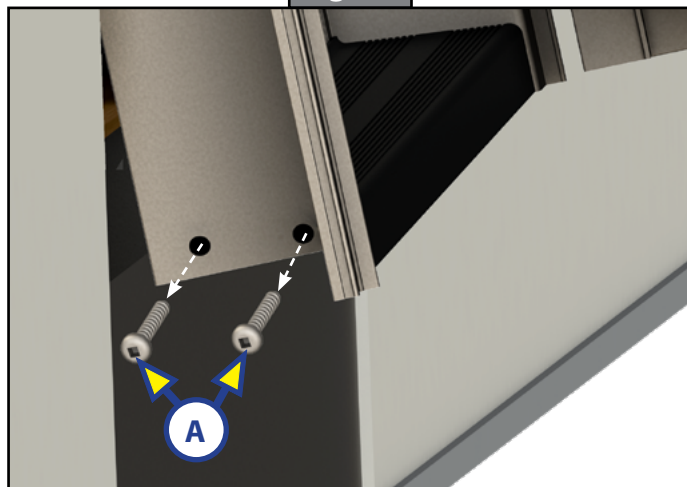


DOORS

12. Remove the old pile seal (Fig. 11A) from the exterior frame by gently pulling down the remaining old pile seal.

NOTE: Pile seal may need to be fed or pushed out of the exterior frame.

Fig. 11

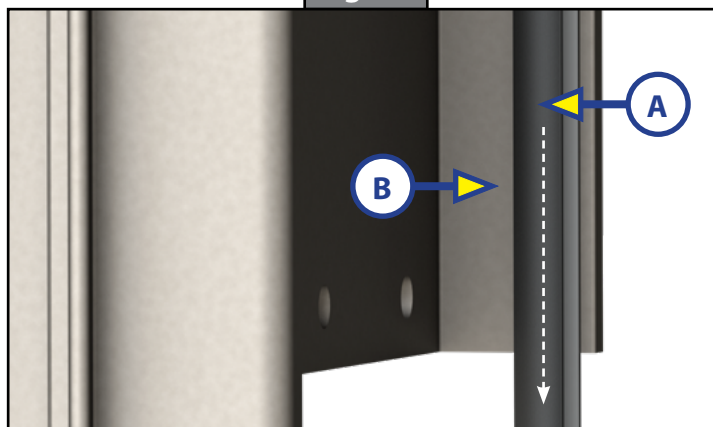

13. Verify that the pile seal track is free of any old pile seal or obstructions. Lubricant such as silicone spray may be added to the pile seal radii, to facilitate the installation of the new pile seal.
14. Feed the replacement pile seal (Fig. 12A) into the pile seal track (Fig. 12B), taking care **NOT** to tear or rip the new pile seal.
15. Make sure the new pile seal (Fig. 13A) is properly seating into the track, and not jumping out of the pile seal track. If pile seal is jumping out of the track, a flat screw driver or blunt pushing tool can be utilized to reseat the pile seal into the track. Take care **NOT** to scratch the exterior frame or damage the pile seal.

Fig. 12


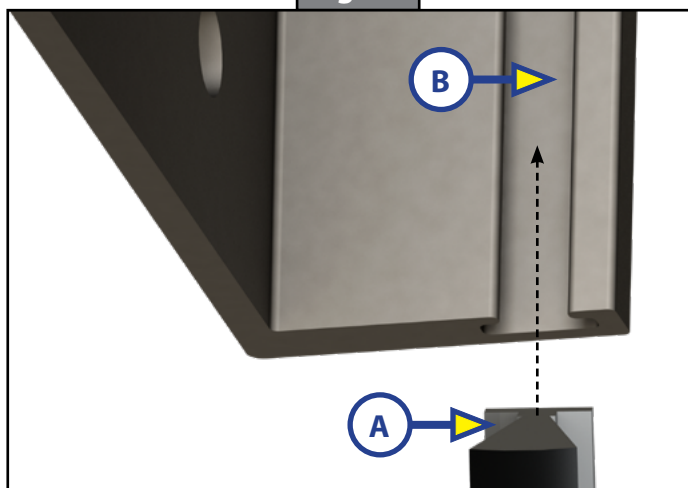


Fig. 13

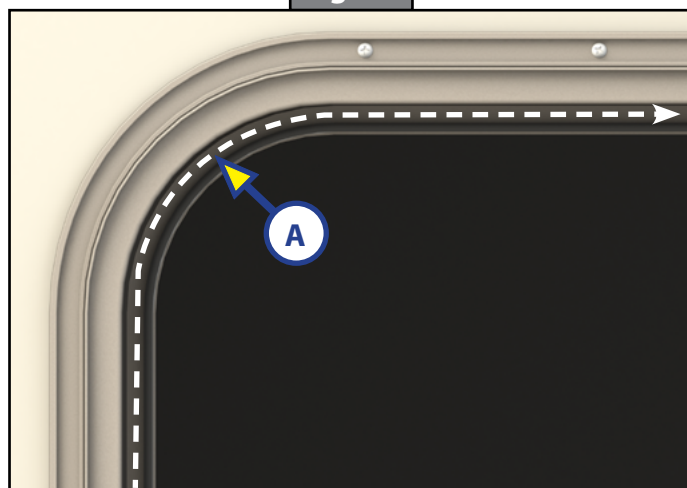

DOORS

16. Pile seal should feed into the exterior frame through the entirety of the pile seal track, ending on the opposite side of the threshold (Fig. 14A), which is still secured to the exterior frame.
17. Trim the remaining pile seal (Fig. 15A) from the bottom edge of the exterior frame (Fig. 15B) on the latch side.

Fig. 14


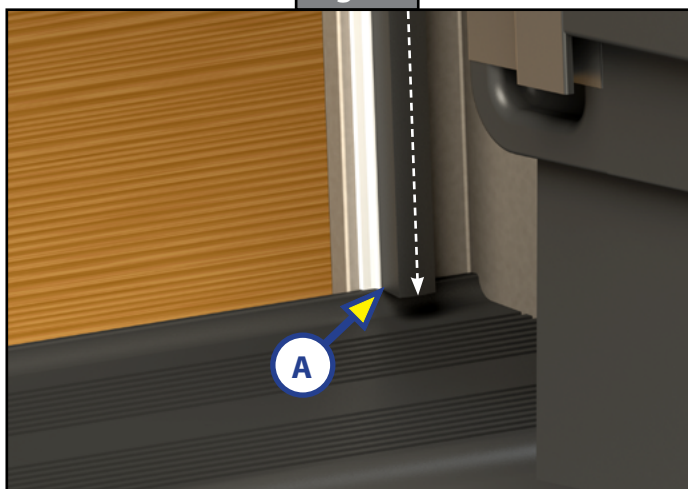


Fig. 15

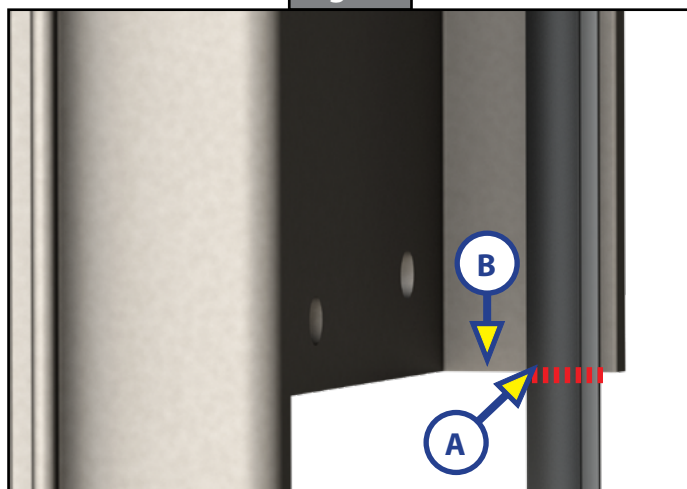

18. Align the latch side of the threshold side screw holes to the exterior frame screw holes and install the two previously removed screws (Fig. 16A).

NOTE: When sliding the door frame back into the wall, make sure not to cut the floor or that the floor does not curl up.

19. Gently push the latch side bottom of the threshold into the door frame (Fig. 17A). Make sure the exterior frame is back in place on both sides of the door frame (Fig. 17B).

Fig. 16


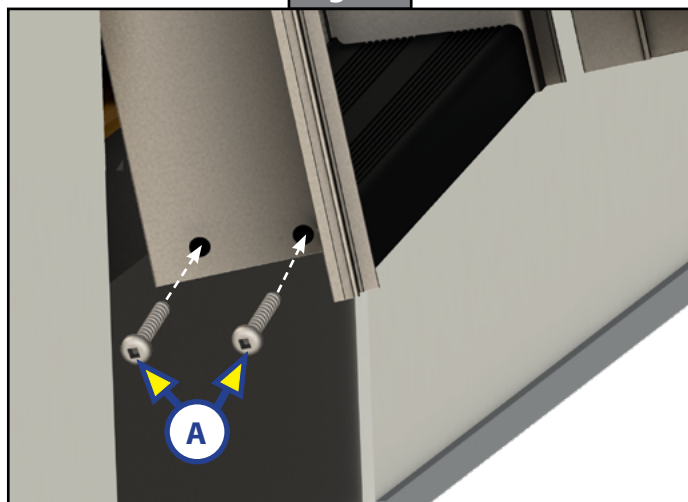



Fig. 17

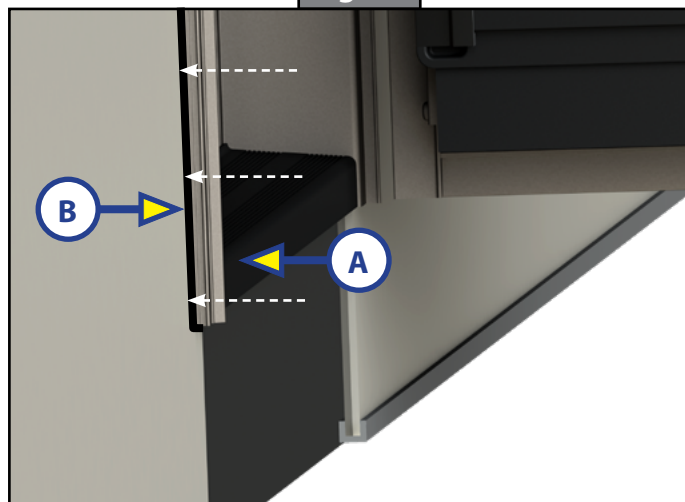

DOORS



20. Install the previously-removed screws (Fig. 18A), starting from the bottom of the screw track of the exterior door frame (Fig. 18B) on both sides.

Fig. 18

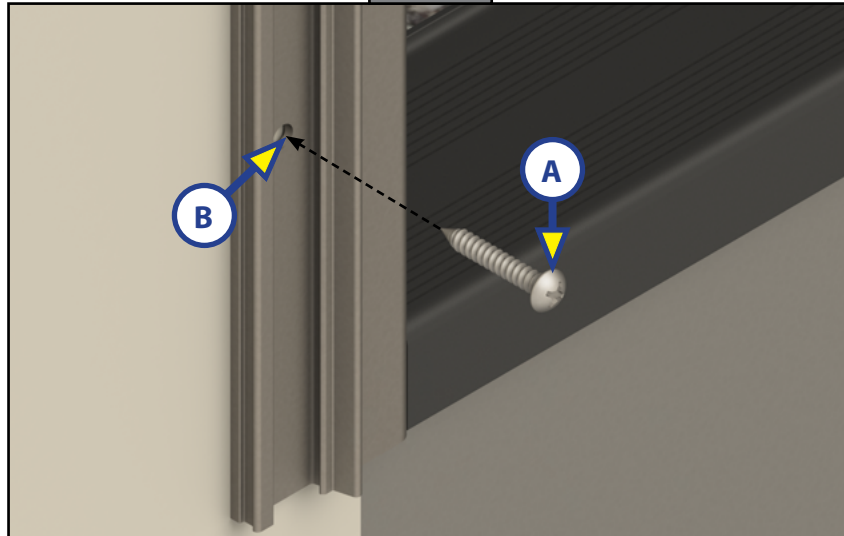

21. Install the screw covers (Figs. 19A and 19B), one on each side of the door frame.


Fig. 19

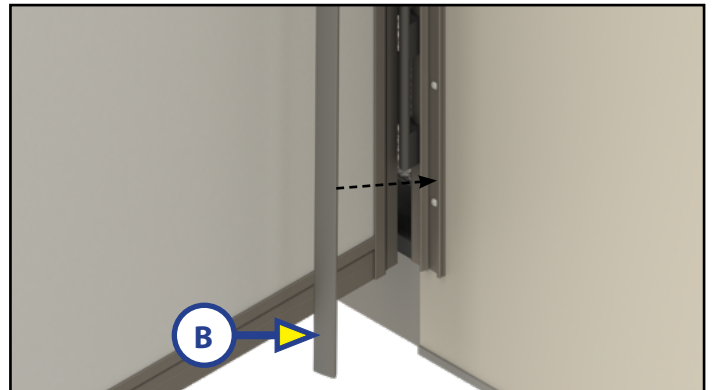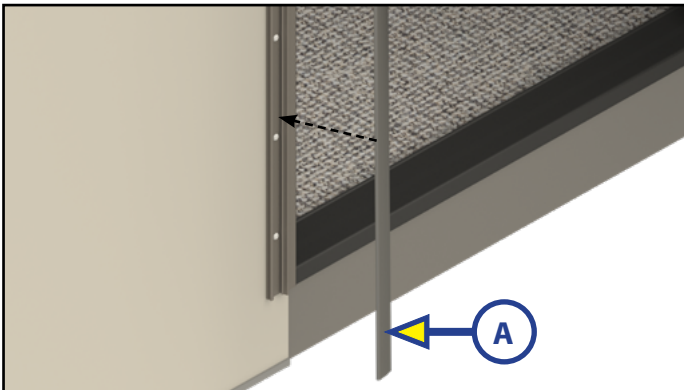

DOORS

- 22.** If applicable, reinstall any secondary fasteners securing the outer frame to the interior walls of the unit. These fasteners may be found in the either the friction hinge components (Fig. 20A) or possibly in the exterior frame at random anchor points.

Fig. 20

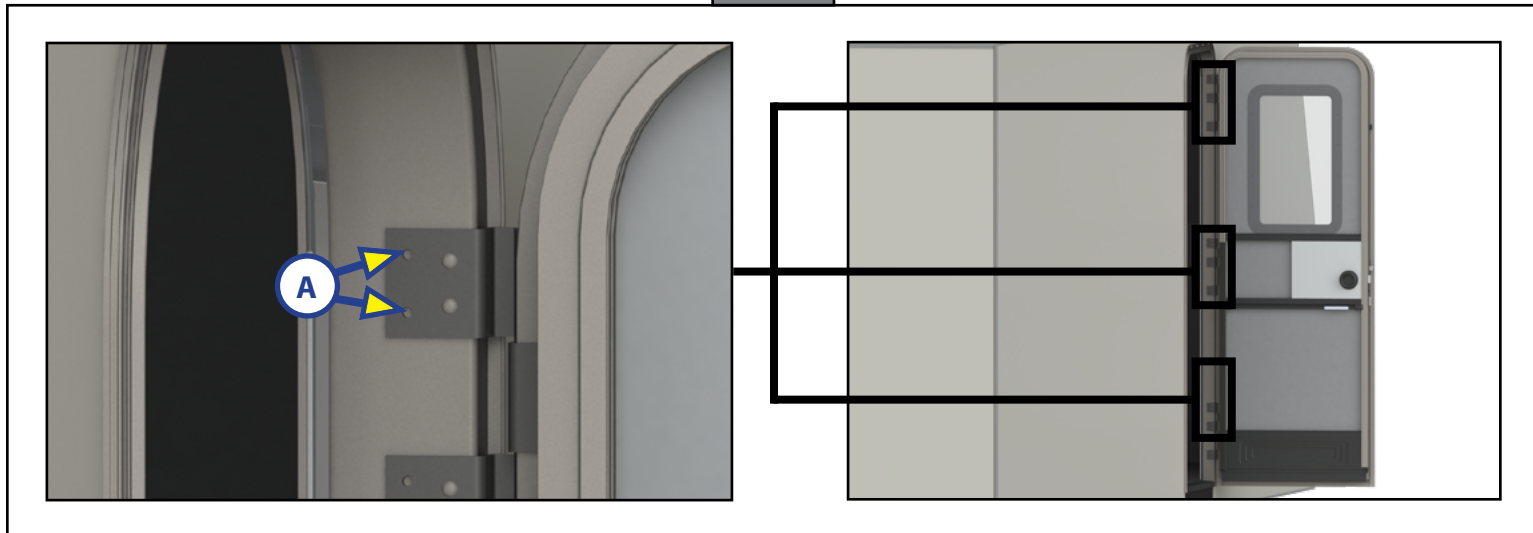

- 23.** Reinstall the threshold transition cover (Fig. 21A) to the threshold door assembly.

Fig. 21



- 24.** If applicable, reinstall the step assembly to the unit.
25. If applicable, reinstall the strut to the threshold.
26. Release the secured screen and entry doors. Make sure they properly close and do not scrape the door frame.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lippert.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.