



**SCREEN DEFENDER
OEM INSTALLATION MANUAL**

L I P P E R T
C O M P O N E N T S®

TABLE OF CONTENTS

Introduction	2
Safety	2
Installation	3

Introduction

The Screen Defender is a metal mesh insert that will be attached to the interior of an RV entry screen door to prevent accidental damage to the screen.

For information on the assembly or individual components of this product, please visit:

<https://support.lci1.com/entry-doors> .

NOTE: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels. This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage.





The “CAUTION” symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.



Moving parts can pinch, crush or cut. Keep clear and use caution.

Installation

1. Completely open the RV entry and screen doors and place them flush against the unit.
2. Tilt the Screen Defender and direct one side of the Screen Defender toward the back window channel of the screen door (Fig. 1).
3. Insert the channel guide at the bottom of the Screen Defender into the back window channel of the screen door.
4. Insert the channel guide on the other side of Screen Defender into the back channel of the screen door and push down on the Screen Defender until it is seated in the screen door channel.
5. Squeeze the retractable latches on the top of the Screen Defender (Fig. 1) and push the Screen Defender into the back of the screen door.
6. Release the Screen Defender latches.
7. The Screen Defender is installed (Fig. 2).

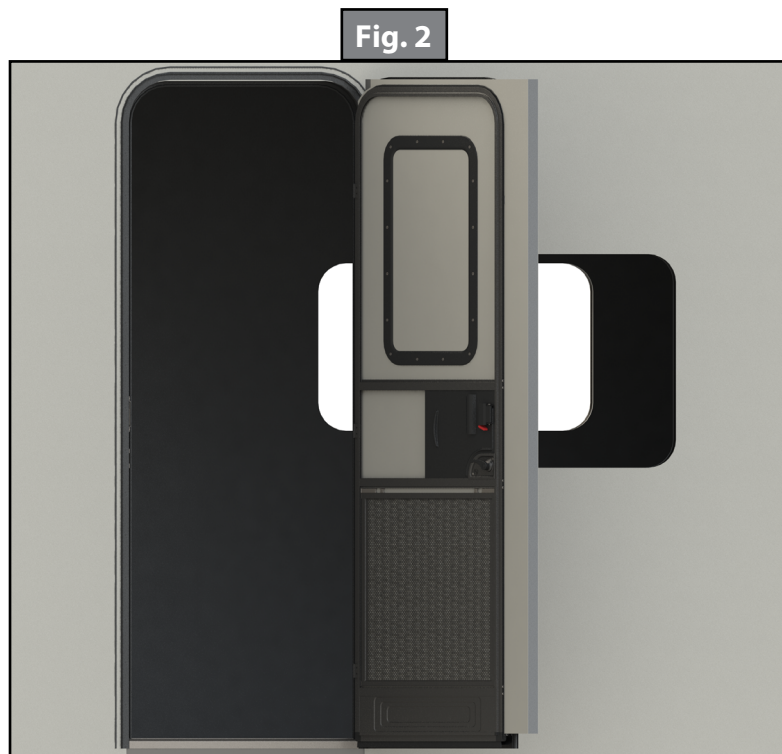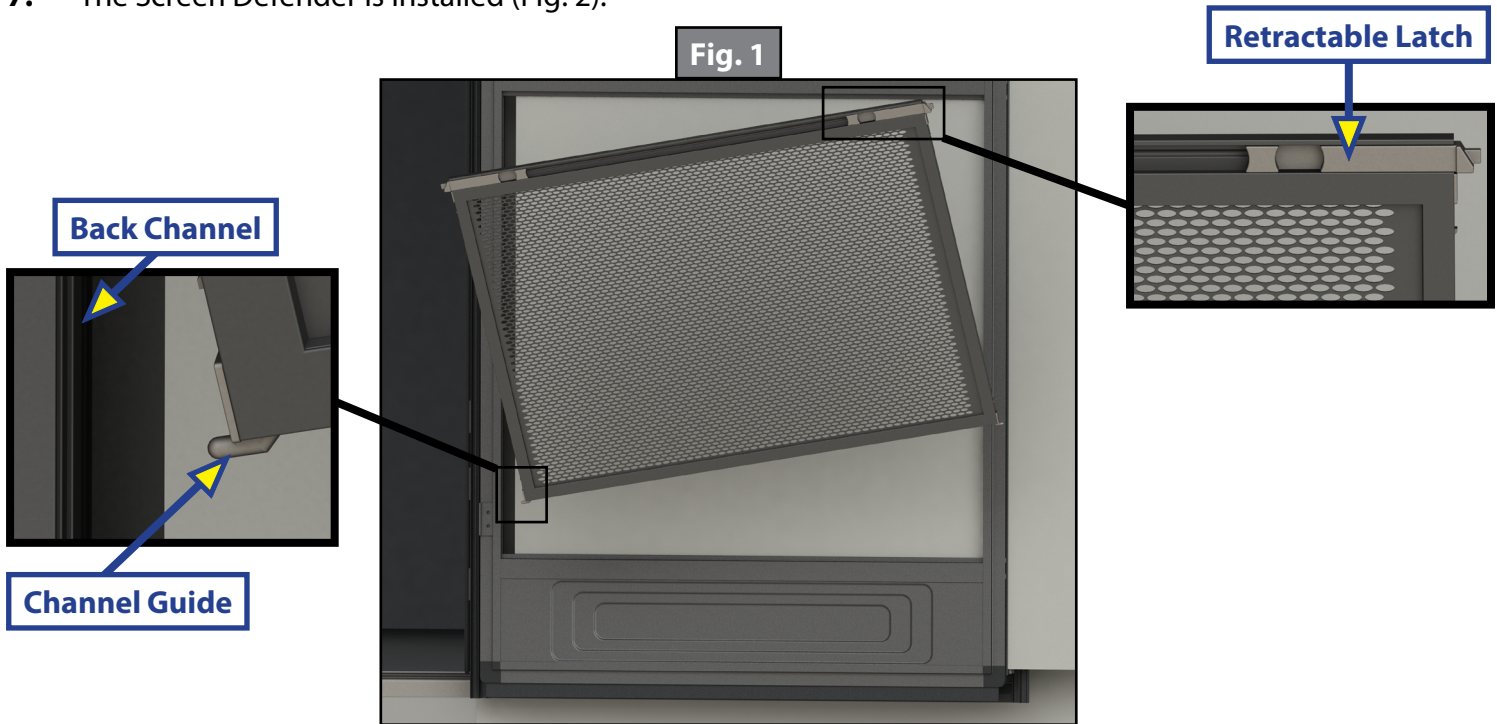



L I P P E R T C O M P O N E N T S®

The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. (LCI). LCI prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized LCI representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of LCI.

Revised editions are available for free download from lci1.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: (574) 537-8900 | Web: lci1.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.