


LEVELING AND STABILIZATION

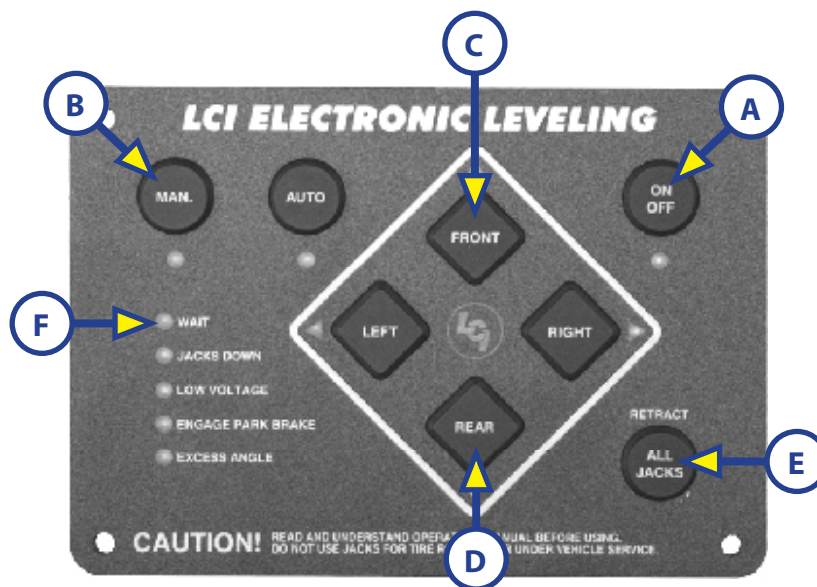

1. Turn system on by pressing the "ON/OFF" (A). The "ON/OFF" indicator light will illuminate.
2. Press the "MAN" (B) and hold for 2-3 seconds. The indicator light will then illuminate.
3. Level coach in "MANUAL" mode by using a carpenter's level on the floor. Level front to rear and then left to right.
4. Turn Touch Panel "OFF" (A); then turn it on again.
5. With the coach leveled, press "FRONT" (C) 5x.
6. Press "REAR" (D) 5x. At this time, ALL lights on the "TOUCH PANEL" will flash.
7. The "TOUCH PANEL" is now in "IDLE" mode. If the coach has come out of it's level condition, it can be reset into level condition by pressing the directional buttons to get the coach level again. If the coach is in "LEVEL CONDITION," Press the "RETRACT ALL" (E) 3x.
8. WAIT approximately 2-3 seconds. The "WAIT" light (Fig. 1F) will begin to flash. Within 20 seconds of the "WAIT" light beginning to flash, press "RETRACT ALL" (E) 3x again. This tells the brain that the air bag function is needed. The key here is that the "RETRACT ALL" button cannot be pressed to pick the airbag feature immediately after the "RETRACT ALL" button is pushed initially to program the level condition.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.