

Quick Start Guide

SKYLINE

Lippert eBike



CCD-0005474



SKYLINE

Lippert eBIKE

Introduction	2
Resources Required	3
Preparation	3
Installation	4
Operation	10
App Information	11

Introduction

For up-to-date instructions on the assembly of the Lippert Skyline eBike, in-depth instructions on operating the bike and navigating the Lippert eBike app, and complete safety information, please use the link below or the QR code to navigate to the Owner's Manual.

<https://support.lci1.com/convenience-and-leisure/>



Resources Required

- 6mm Hex Key
- 4mm Hex Key
- 10mm Wrenches (2)
- 15mm Box End

Preparation

1. Unpack bike from box (Fig. 1).

NOTE: Image for reference only. Actual eBike may be different.



Fig. 1

2. Remove battery keys around seat post (Fig. 2).




Fig. 2

NOTE: Keep battery keys in a safe place. Battery keys do not start eBike, but lock and unlock battery from eBike so it can be removed for charging purposes.

Installation


1. Install handlebars.

- A. Insert handlebar neck into front stem (Fig. 3).
- B. Adjust to desired height and center with front fork (Fig 4).

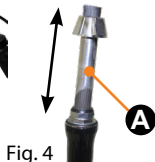

NOTE: Do not raise above max height marking on neck (Fig. 4A).

- C. Tighten with 6mm hex (Fig. 5).

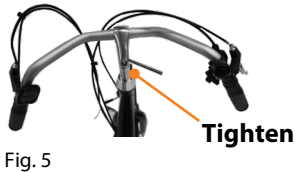

- D. Loosen handlebars and pivot (rotate up) to desired riding position (Fig. 6). Tighten with 6mm hex.



Fig. 6

2. Install seat.

- A. Flip quick lock open (Fig. 7A) to allow the seat post to be inserted into the frame.



Fig. 7

- B. Insert seat into the seat post (Fig. 8).
- C. Flip quick lock to secure seat (Fig. 8A).

NOTE: As seat is positioned, do not adjust outside of the range of the alignment marks.

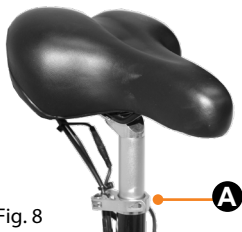


Fig. 8

- 3. For the next steps, it will be necessary to carefully maneuver eBike so the handlebars and seat are on the ground supporting the bike.

4. Install mudguard.

NOTE: Nuts and bolts are installed in the frame for the mudguard.

- A. Use two (2) 10mm wrenches to loosen nut from bolt. Remove nut, leaving the bolt and front reflector in place (Fig. 9).
- B. Place top tab of the mudguard onto the bolt and reinstall the nut removed in Step A. Tighten using two (2) 10mm wrenches (Fig. 10).
- C. One at a time, remove the screws in the front fork (Fig. 11A) and place through the mudguard support arm (Fig. 11B). Secure into fork using 4mm hex key.



Fig. 9



Fig. 10

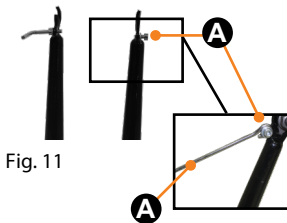


Fig. 11

5. Install front wheel.

- A. Place front wheel into fork, paying close attention to the position of the security washers into the designated retaining holes (Figures 12 and 13).
- B. Verify front wheel security washers are in proper position (Fig. 12A).

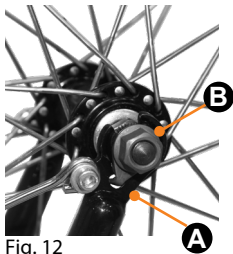


Fig. 12

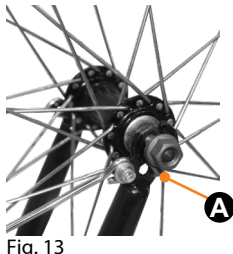


Fig. 13

NOTE: Fig. 13A shows the front wheel security washer out of place for reference.

- C. Tighten nuts using 15mm wrench (Fig. 12B).

6. Install pedals.

A. Insert pedals into crank arm (Fig. 14).



Fig. 14

NOTE: Left (L) pedal is
REVERSE THREADED.

NOTE: Pedals are labeled
right and left and must be
put on the appropriate side
(Fig. 15).



Fig. 15

7. Install front brake.

- A. Squeeze the right and left brake arms together (Fig. 16).
Brake pads should be contacting the rim.



Fig. 16

- B. Insert the brake cable into quick-release lever (Fig. 17A).
- C. Test brake function.

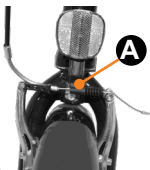


Fig. 17

Operation

1. Charge the battery.
2. Insert the battery then turn the key to lock (Fig. 18).



Fig. 18

3. Push ON/OFF switch to I position (Fig. 19A).



Fig. 19



Fig. 20

4. Hold until on (Fig. 20) and select assistance level.
5. Pedal to start.

SKYLINE

Lippert eBike

The Lippert eBike app is an advanced app fully compatible with the Lippert Skyline eBike. Download the app on smart devices that are greater than Android 8.0 or IOS 12.1. When the app is launched, create a new login or sign in with an existing login. From there, continue to follow app instructions to complete setup and pairing.

To download the Lippert eBike app for Apple devices (IOS), click the AppStore icon or scan QR Code.

Search for: **Lippert eBike**



To download the Lippert eBike app for Android smart devices, click the GooglePlay icon or scan QR Code.

Search for: **Lippert eBike**



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert

Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.