




LIPPERT
COMPONENTS®

Operation

1. Fully retract the slide room.
2. Place the travel lock against the outer wall of the slide room (Fig. 1).

Fig. 1

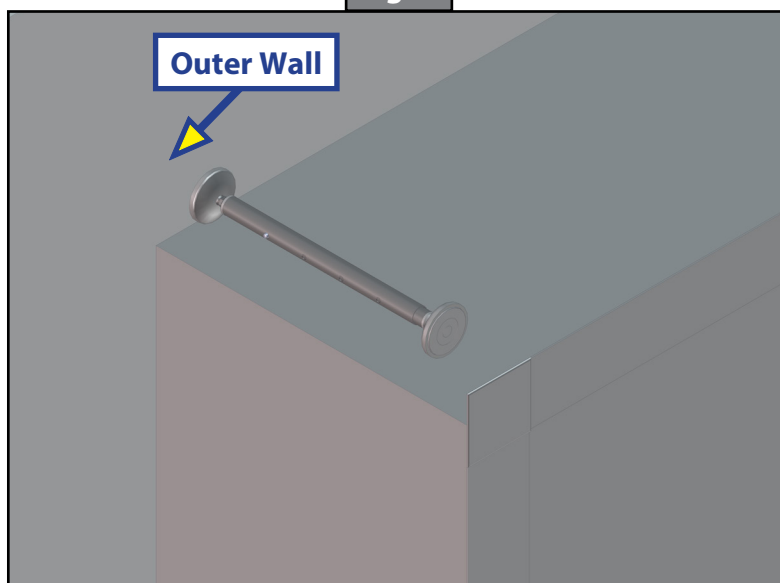

3. Press both sides of the two-button quick-release connector (Fig. 2A) to extend the travel lock to the inner fascia of the coach (Fig. 3). The travel lock should lock into position.

Fig. 2


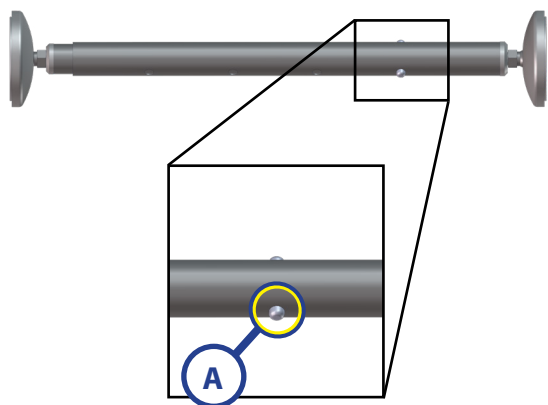


Fig. 3



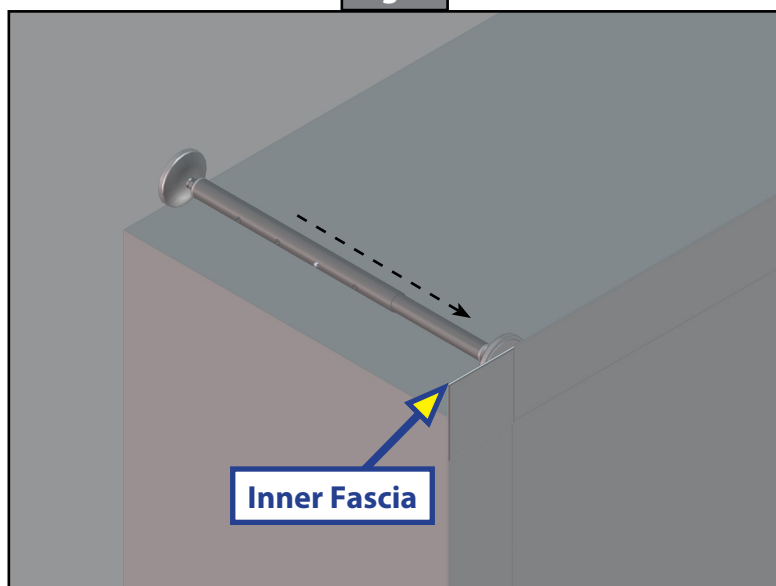

LIPPERT
COMPONENTS®

4. If the travel lock does not fit snugly against the inner fascia, turn the swivel pad (Fig. 4) to extend the threaded rod (Fig. 5A) until the travel lock fits tightly against the inner fascia of the coach (Fig. 6).

Fig. 4

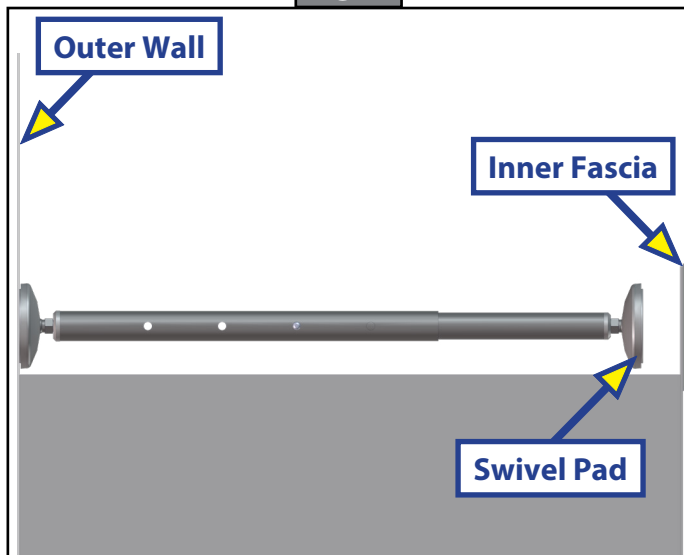


Fig. 5


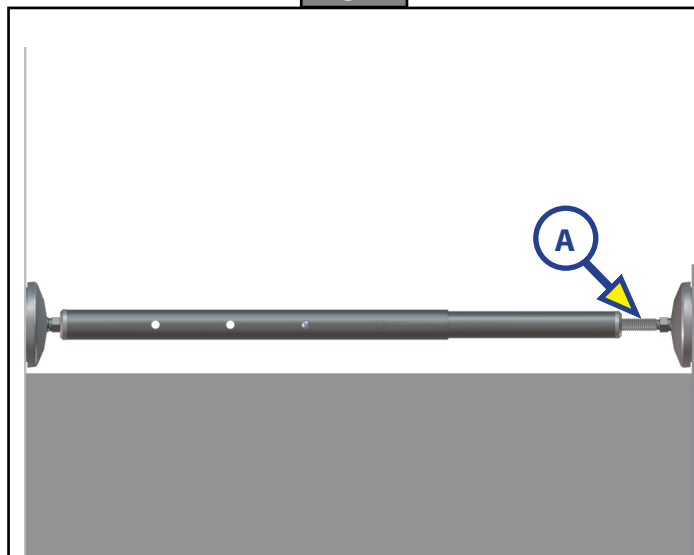


Fig. 6



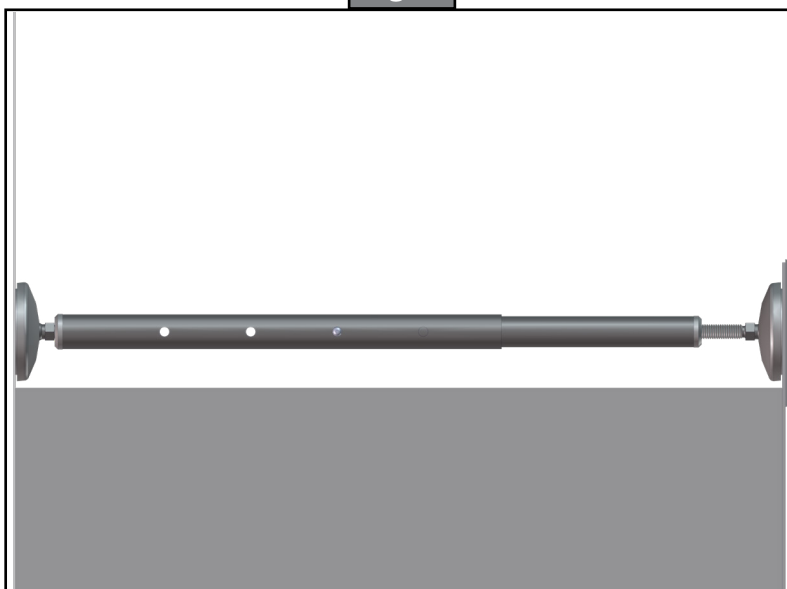

LIPPERT
COMPONENTS®

Removal

⚠ WARNING

Failure to remove the slide-out travel lock prior to operation may result in serious injury or property damage.

1. To remove the travel lock, turn the swivel pad nut (Fig. 7) to retract the threaded rod (Fig. 8) until the travel lock can be removed (Fig. 9).

Fig. 7

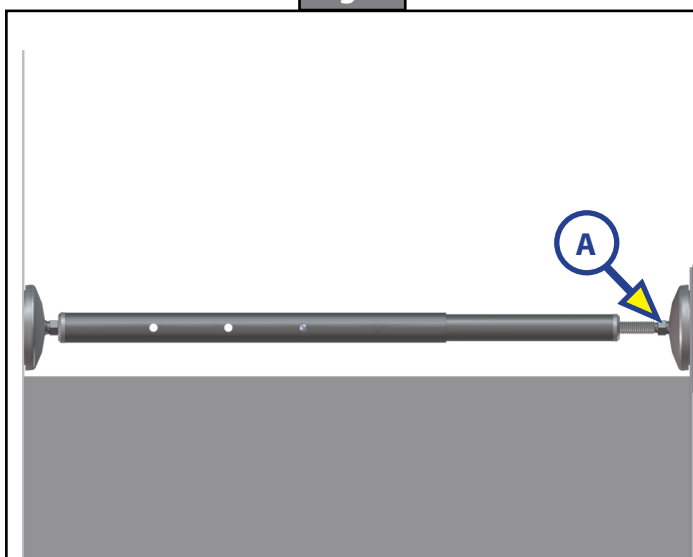


Fig. 8


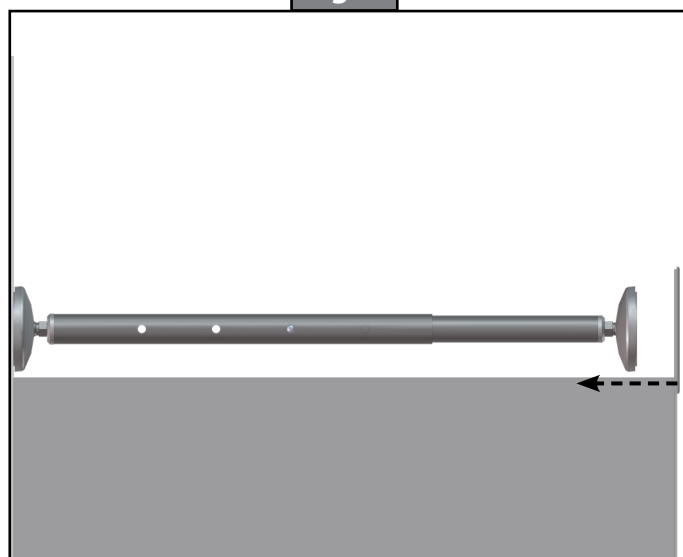


Fig. 9





This manual is provided courtesy of **RV Tech Cheat Sheet**

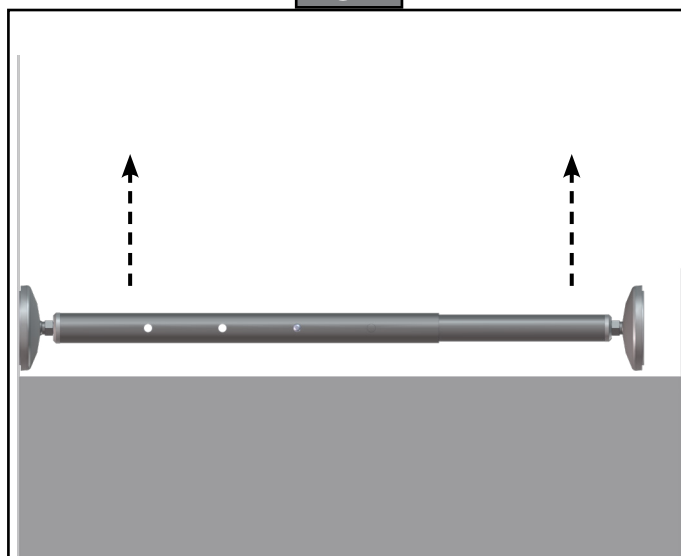

Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.