



SOLIDSTEP® 3.0
OWNER'S MANUAL

L I P P E R T
C O M P O N E N T S®

TABLE OF CONTENTS

System Information.....	2
Safety Information.....	2
Operation.....	3
Release Steps.....	3
Storage of Steps.....	3
Adjust Leg Extension.....	3

System Information

The SolidStep® 3.0 is a trailer entry step assembly mounted to the side of any trailer, providing an ease of entry, regardless of level ground.

NOTE: Step identification tags are located under one of the step extrusions, typically the top full step.

Safety information

WARNING

Failure to follow the instructions provided in this manual may result in death, serious personal injury, product or property damage or voiding of the component warranty.

CAUTION

Always wear eye protection when performing service or maintenance to the trailer. Other safety equipment to consider would be hearing protection, gloves and possibly a full face shield, depending on the nature of the service.

CAUTION

No repairs should be attempted by anyone other than a qualified professional. The deployment and retraction of the step assembly can cause injury if proper precautions are not taken. The step assembly was designed for an operational weight rating of 400 lbs.

CAUTION


Moving parts can pinch, crush or cut. Keep clear and use caution.

Operation

Release Steps

1. Disengage transport lock (Fig. 1).
2. Firmly grasp and pull out the vertically stored SolidStep® and firmly rest it on the ground.
3. Adjust leg extensions as needed, see Leg Extension Adjustment section.

Fig. 1

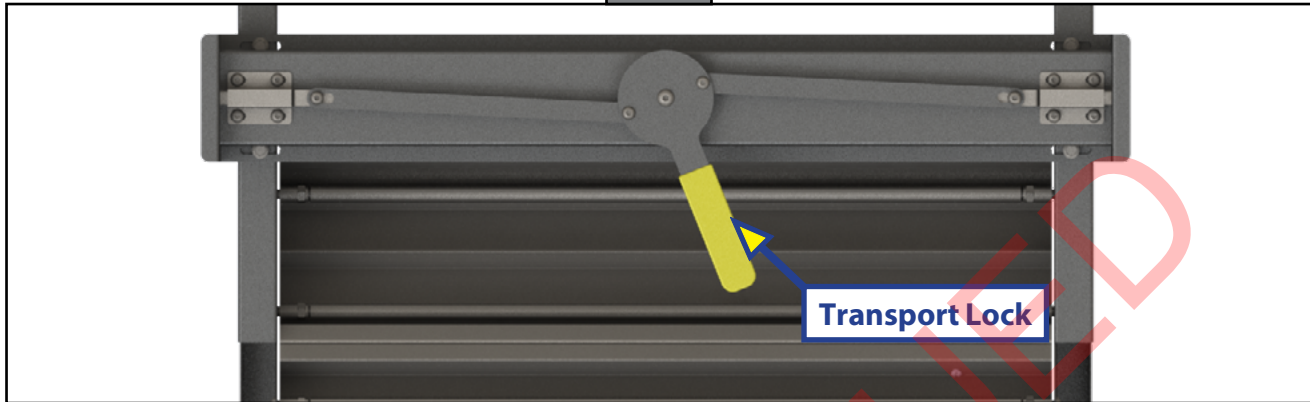

Storage of Steps


1. Retract leg extensions, if desired.
2. Lift up SolidStep® to its stored position and make sure the transport lock has been engaged.

Adjust Leg Extension

The leg extension is secured with a quick release clevis pin. Adjustments can be made to the leg extensions in 1" increments by extending or retracting the inner leg for the optimal angle and to adjust for the ground surface angle.

1. To extend the inner leg (Fig. 2B):
 - A. Remove the quick release clevis pin (Fig. 2A) from the tube and the slot in the angle.
 - B. Extend the inner leg to the ground and at an angle so the steps are parallel to the ground and level.
 - C. Reinsert the quick release clevis pin into the tube and slot closest to where the inner leg and tube (Fig. 2C) meet.
2. To retract the inner leg:
 - A. Remove the quick release clevis pin from the tube and slot.
 - B. Retract the inner leg.
 - C. Reinsert the quick release clevis pin into the tube and slot.

Fig. 2

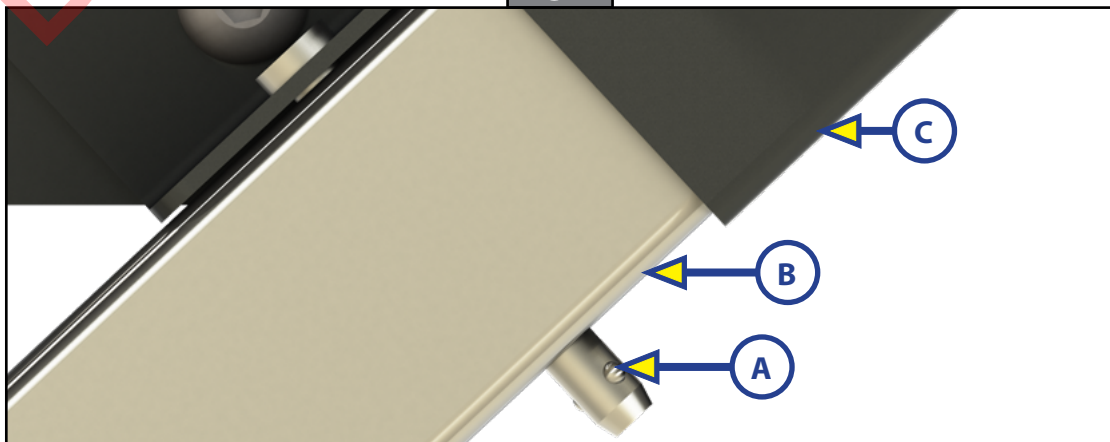



LIPPERT COMPONENTS®

The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. ("LCI"). LCI prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized LCI representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of LCI.

Revised editions are available for free download from lci1.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: (574) 537-8900 | Web: lci1.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.