



STORAGE AND CONVENIENCE

The tire carrier winch should be mounted so the sidewalls of the tires rest tightly and evenly against both tire bumpers, see Fig. 2(C) for location of tire bumpers.

Fig. 1 shows the tire winch mounted in the proper location, indicated by the bolts in the bracket at location (A). Location (B) shows the coupling end of the manual crank. This coupler should protrude approximately 3-4" outside the main rails of the tire carrier.

Fig. 2 shows the proper location for the winch cable and tire mounting bracket. The tire winch cable **MUST** be located equal distance from both tire hangers.

If the tire winch is mounted in the bracket holes (E) in Fig. 1, the tire winch **MUST** be unmounted from this location and mounted into the holes found in location (A).

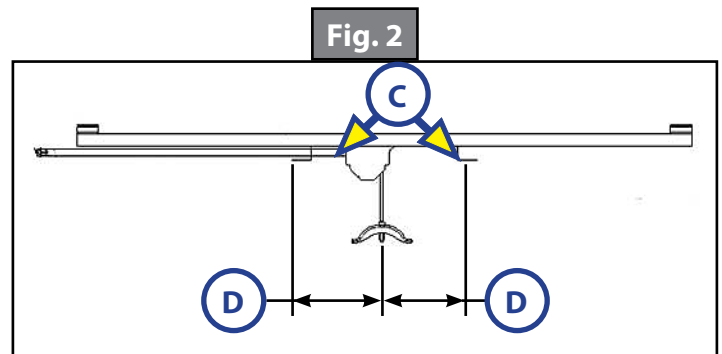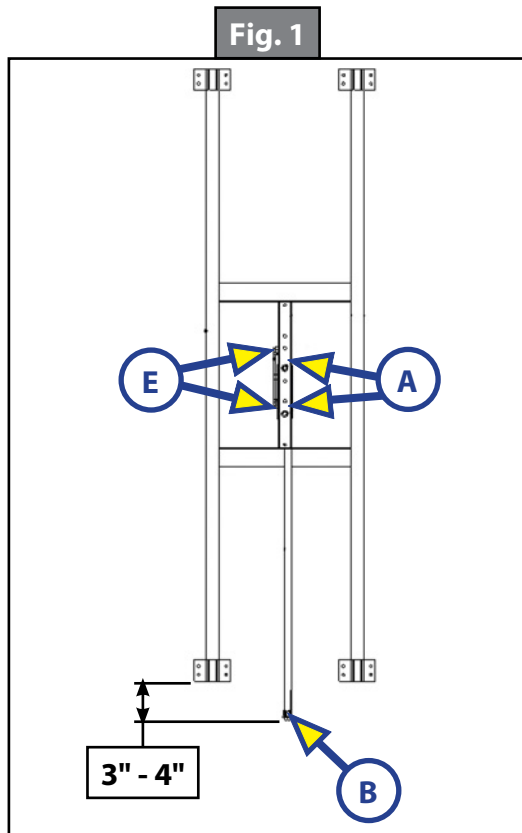



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.