

ELECTRONICS

1. Pictures must be located on the root of the storage device, not located in folders on the drive. (Most cameras place pictures within a folder, making it impossible for the user to take their card directly from their camera to the Touch Audio.)
2. Place the picture files directly on a clean USB flash drive. This will assure that the pictures are easily accessible for the Touch Audio. Otherwise, you will have to make sure that the picture files are located outside of folders on the SD card.
3. Press the power button.
4. Insert a DVD into the Touch Audio to avoid the unit going into an infinite loop of searching for a disk.
5. Once the DVD loads and begins to play, press the stop button.
6. Insert the SD card or USB flash drive into the appropriate slot.
7. Press and hold the button labeled USB/SD until the screen reads "CARD".
8. The unit will begin playing a slideshow of the pictures located on the card or flash drive.

Fig. 1



As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.