


HYDRAULICS

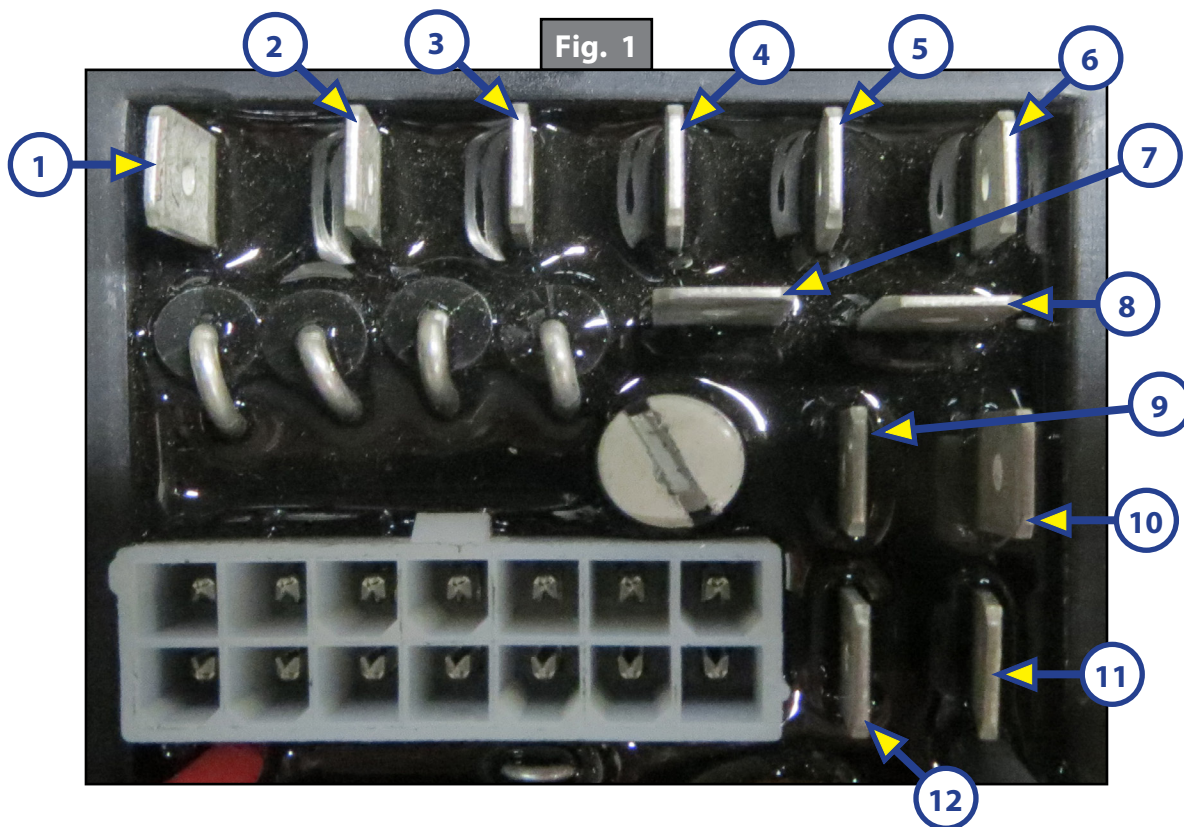

1. Right Rear Jack Valve (+)
2. Left Rear jack Valve (+)
3. Front Jack Valve(s) (+)

NOTE: Front jacks operate together. They will be linked together either through wiring or plumbing. If the valve manifold has five valves and only one slide-out room, the front jacks are linked through wiring. If there are two slide-out rooms, and the manifold has two hoses for front jack extend and two hoses for front jacket, the front jacks are linked through the plumbing.

4. PSI Switch (Green Wire from PSI) (+)
5. Pump Retract (Green Wire to Solenoid) (+)
6. Pump Extend (Yellow Wire to Solenoid) (+)
7. Valve Ground (-)
8. PSI Switch (Black Wire from PSI) (-)
9. Valve Ground (-)
10. Valve Ground (-)
11. Valve Ground (-)
12. Valve Ground (-)

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.