


POWER AND MOTION

Fig. 1



Fig. 2

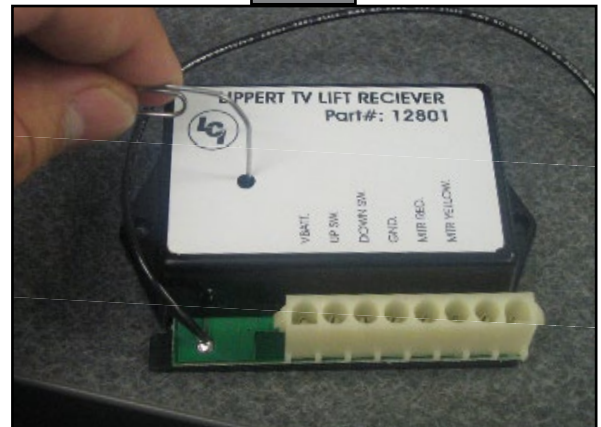


To sync a new TV Lift Remote to the receiver perform the following steps:

1. The manual reset button (Fig. 1) is inside the hole located in the top of the TV Lift Receiver. The button can be depressed using a paper clip or small Allen Wrench. Depress the button with the paper clip or Allen Wrench and hold the button down (Fig. 2).
2. While the button on the receiver is depressed, press any button on the replacement remote (Fig. 3).
3. Release the receiver button.
4. The TV Lift Remote is now ready for use.

To Operate the TV Lift Remote Switch (Fig. 3)

1. To operate the TV Lift Remote, push the "UP" (Fig. 3A) button once and release. The TV Lift will raise the TV with "One Touch" operation of the remote.
2. To lower the TV, push and hold the "DOWN" (Fig. 3B) button until TV Lift is fully lowered into cabinet.

Fig. 3

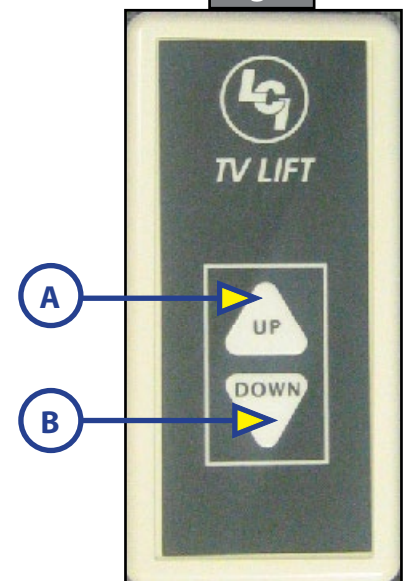



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.