

ELECTRONICS

Introduction

After successful activation of WiFi On-the-Go™, use a smart device or a personal computer to connect to the 4G LTE wireless hotspot*.

NOTE: For the best security, the settings should be configured with the WiFi On-the-Go wired via Ethernet cable and a personal computer.

CAUTION

Pressing RESET on the back of the cellular gateway will make the device inoperable. DO NOT press RESET. Contact LCI Customer Service.

Do not press the RESET button on the back of the cellular gateway unless directed by LCI Customer Service. Pressing RESET will take the device back to factory settings and make the device inoperable.


System Requirements

- AT&T® or Rogers™ nano SIM card
- Android, iOS smart device or personal computer
- Ethernet cable (optional)

Connecting to WiFi On-the-Go™

1. From the device's Wi-Fi settings, select the WiFi On_the_Go_XXXX (where XXXX means the numbers at the end will vary). The password will be blank.
2. To change the administrator password, rename the hotspot (ESSID) and set the security settings with a login password:
 - A. Open a web browser.
 - B. Type 192.168.1.1 into the address bar.
 - C. When prompted, enter the following default Username (Fig. 1A) and Password (Fig. 1B), then click Login (Fig. 1C):
 - I. Username: root
 - II. Password: admin


Fig. 1

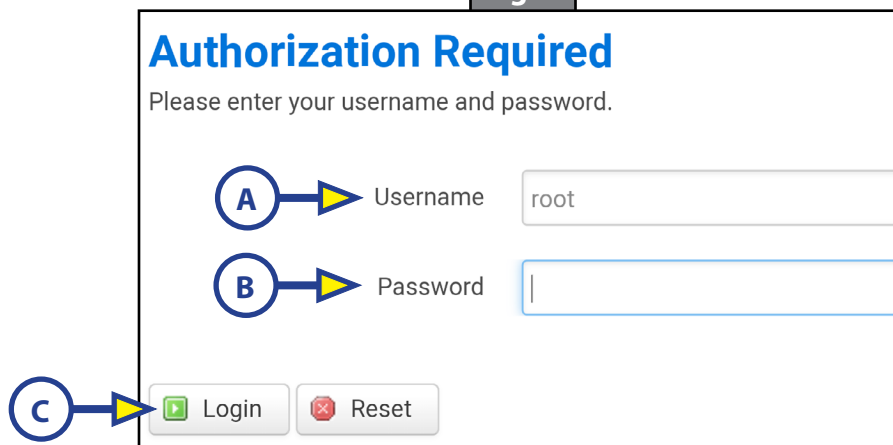


* Internet access is not provided. Product usage may incur extra data and/or connection charges.

ELECTRONICS

- At the top menu bar, select "System" dropdown menu (Fig. 2A), then select "Administration" (Fig. 2B).

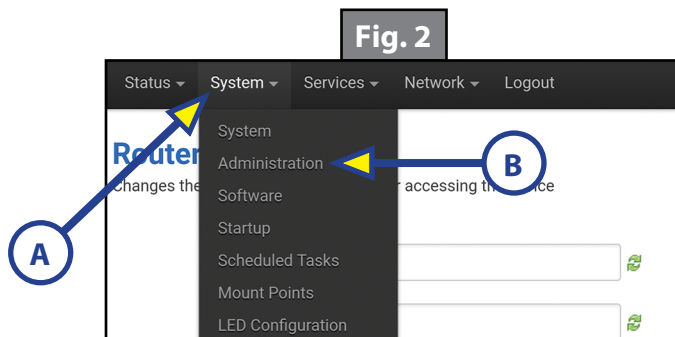


- Enter a new administrator "Password" (Fig. 3A), then re-enter password in the "Confirmation" field (Fig. 3B).
NOTE: For security purposes, use a strong password.

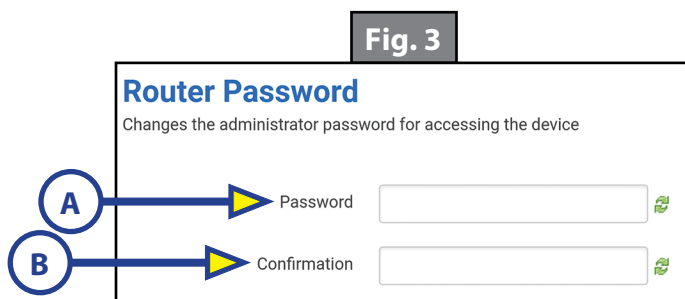

- Click Save & Apply button (Fig. 4A) located at the bottom of the screen.




- At the top of the menu bar, select "Network" dropdown menu (Fig. 5A), then select "Wifi" (Fig. 5B).

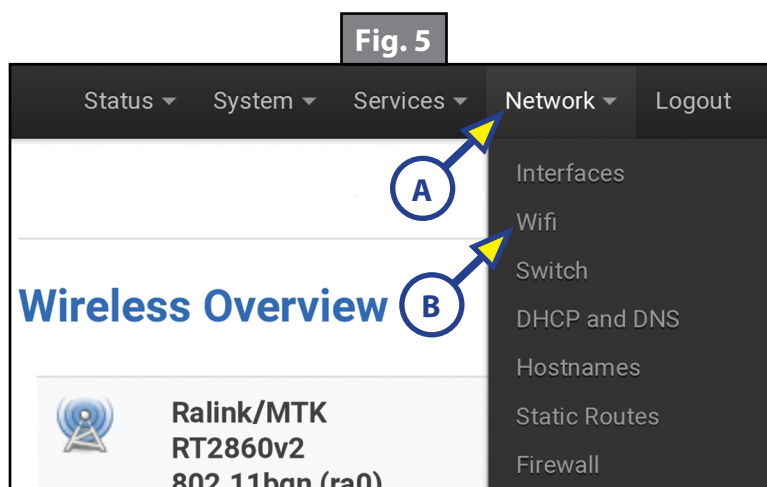

ELECTRONICS

- A.** Click on the Edit button (Fig. 6A) under the Wireless Overview section, then scroll to the Interface Configuration at the bottom of the page.

Fig. 6

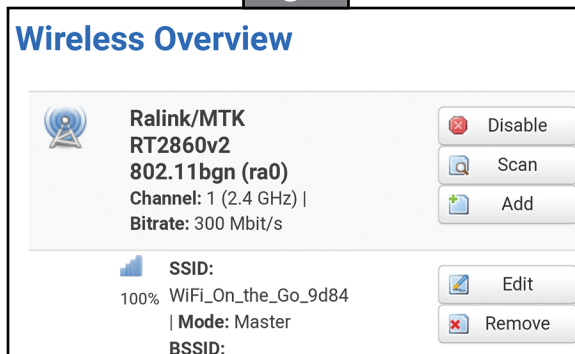

- B.** Make sure the "General Setup" tab is selected to rename the hotspot (ESSID) (Fig. 7A), if desired.
C. Click on Save button (Fig. 8A).

Fig. 7


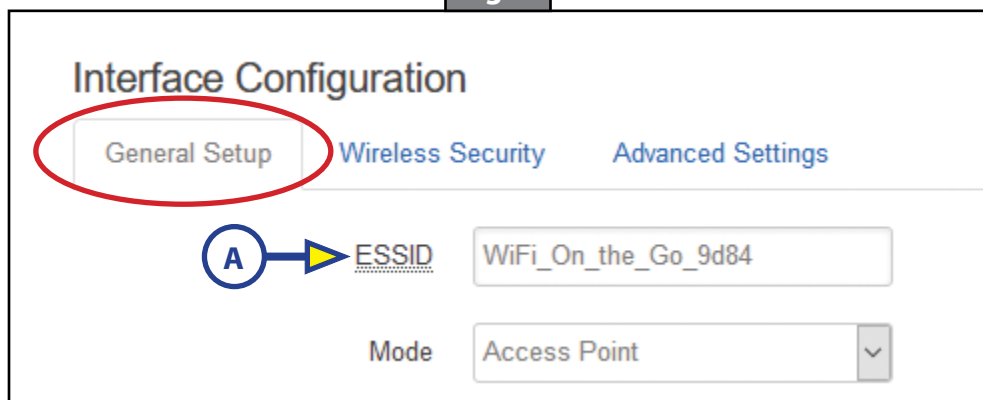


Fig. 8

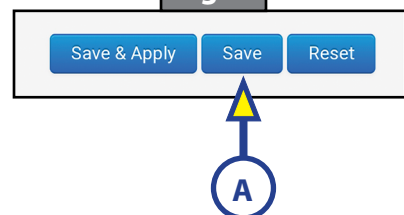

- D.** Click on the "Wireless Security" tab (Fig. 9A) to ensure Wi-Fi security.
I. From the menu, select the desired level of security. LCI recommends WPA2-PSK (Fig. 10A)

Fig. 9


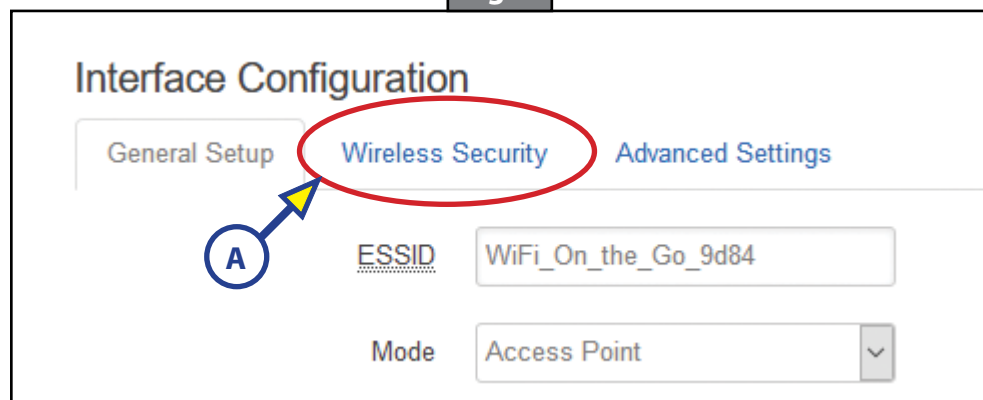


Fig. 10

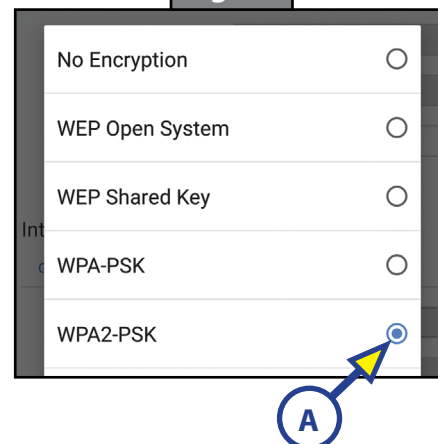


ELECTRONICS

II. Enter a login password in the "Key" field (Fig. 11A). The password **MUST** be at least eight characters.

E. Click on Save & Apply button (Fig. 11B).

NOTE: "Waiting for changes to be applied" dialog window may be visible until sign-in is complete.

Fig. 11

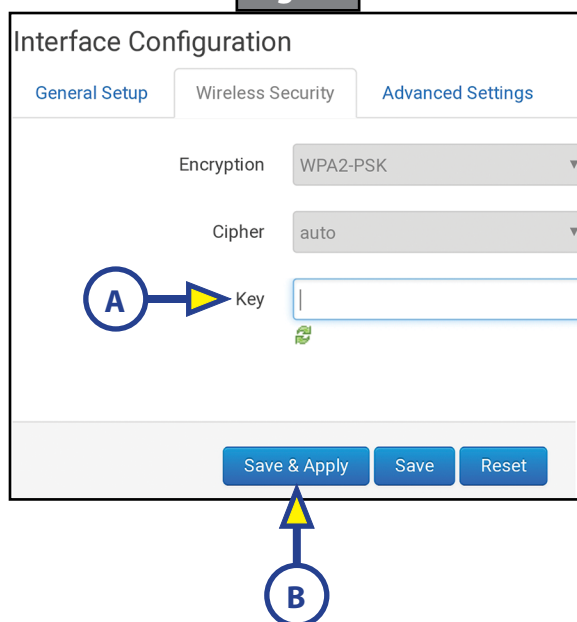

7. Sign-in to the hotspot again by selecting the hotspot from the smart device's Wi-Fi settings.

NOTE: This will be the default hotspot name or the new name given in step 6.

8. If the security setting was changed and a security (login) password was added (step 6.D.II.), enter the new password to complete the system configuration.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.