

FURNITURE

Purpose

This document outlines the procedure for removing and replacing the theater seating mechanism.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

⚠ CAUTION

The "CAUTION" symbol above is a sign that a procedure has a safety risk involved and may cause personal injury, product and/or property damage if not performed safely and within the parameters set forth in this document.

⚠ CAUTION

Use appropriate personal protective equipment (PPE) for the procedure being performed.

⚠ CAUTION


Moving parts can pinch, crush or cut. Keep clear and use caution.

Resources Required

- 1 to 2 people depending on task
- Cordless or electric drill or screw gun
- Appropriate drive bits
- Drill bit extension
- 10mm Ratchet
- Cutting tool
- Zip ties

ProcedureRemoving the Seating Mechanism Base

1. Unplug the theater seat from its power source.
2. Place the theater seat on a clean soft surface.
3. Make sure the foot rest (Fig. 1A) is in the extended position.
4. Raise the back flap (Fig. 2A) of the theater seat to expose the backrest wires and latches.

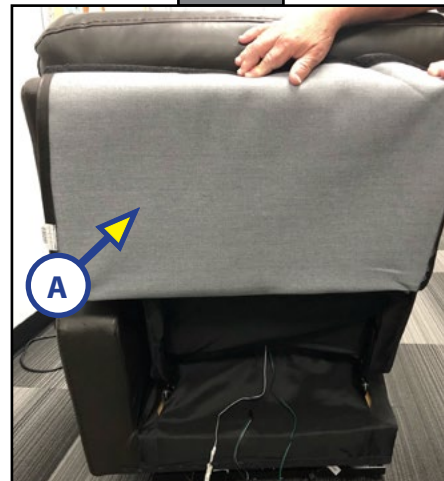Fig. 1**Fig. 2**

FURNITURE

5. Located in between the back and seat cushions are connecting power wires (Fig. 3A). Disconnect the two wire connections.
6. Utilizing another person, pull the tab on the latches (Fig. 4A) out on both sides of the seat cushion (Fig. 5A) while lifting the back cushion up and off from the theater seat. Place the back cushion (Fig. 5B) aside, on a clean surface for re-installation.
7. Flip the theater seat cushion (Fig. 5C) upside down to work on removing the base mechanism.

Fig. 3


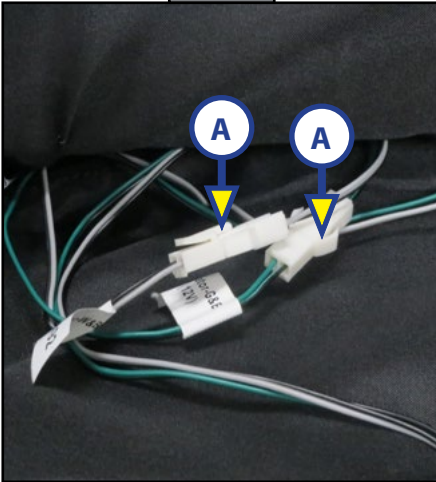


Fig. 4



Fig. 5

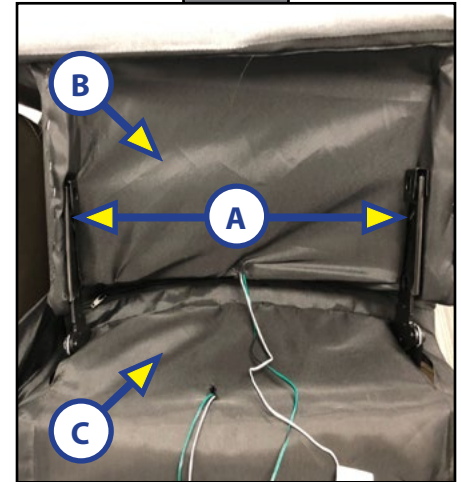

8. Remove the four bolts holding the mechanism base to the foot rest kick plate, two on each side (Fig. 6A).
9. To remove the LED light (Fig. 7B), cut the zip ties (Fig. 7A) holding the wire to the mechanism base.
10. Slide the LED light (Fig. 8A) down and off the mechanism base.

Fig. 6

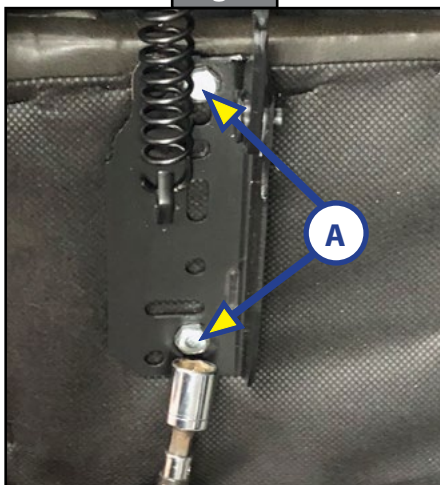


Fig. 7


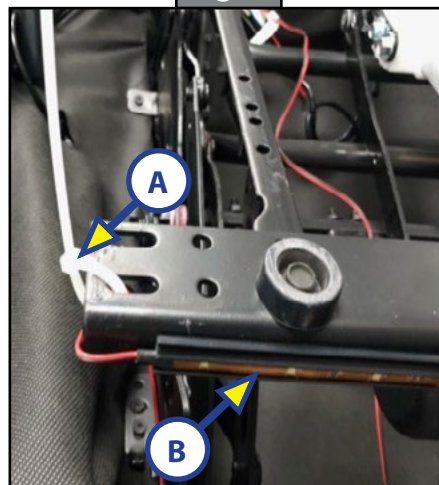


Fig. 8

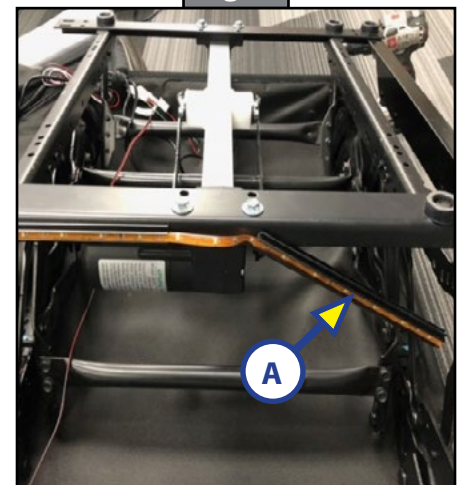

FURNITURE

11. Disconnect the LED wire (Fig. 9A) from the power harness.
12. Disconnect the AC/DC power adapter wire (Fig. 10A).
13. Disconnect the motor wire (Fig. 11A) and remove from the zip ties holding it in place to the mechanism base.

Fig. 9

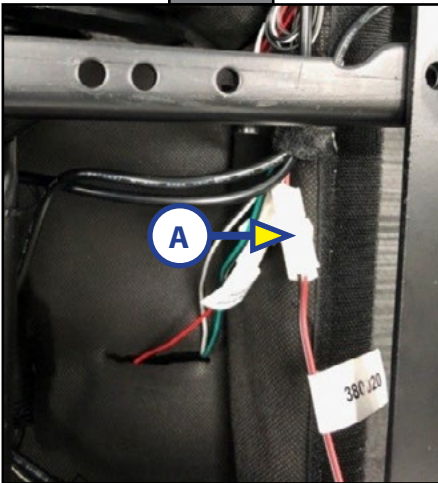


Fig. 10


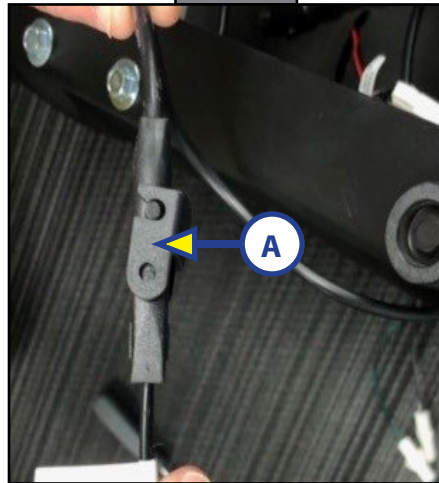


Fig. 11

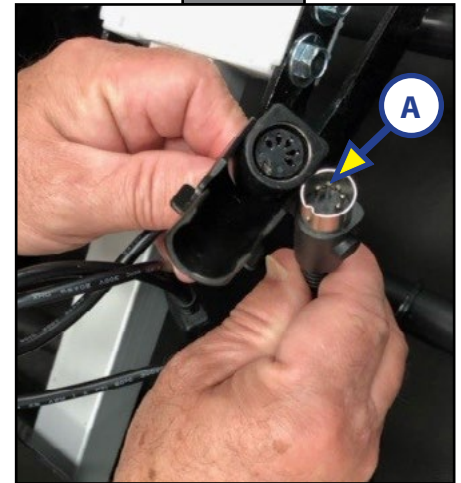

14. Remove the screws (Fig. 12A), two on the side of the theater seat without the arm, holding the base mechanism to the theater seat. Place the screws aside for installation of the new mechanism base.
15. Remove the screws (Fig. 13A) three on the side of the theater seat with the arm, holding the base mechanism to the theater seat. Place the screws aside for installation of the new mechanism base.
16. Lift the base mechanism up and set aside.

Fig. 12


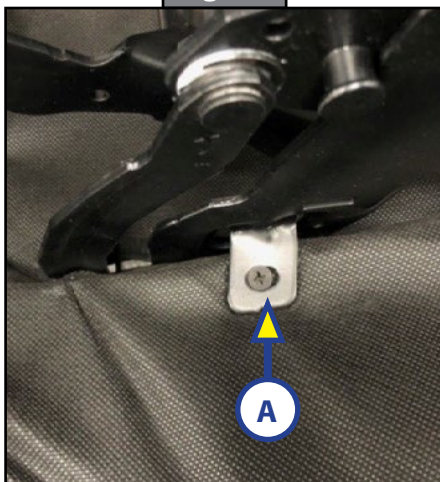



Fig. 13

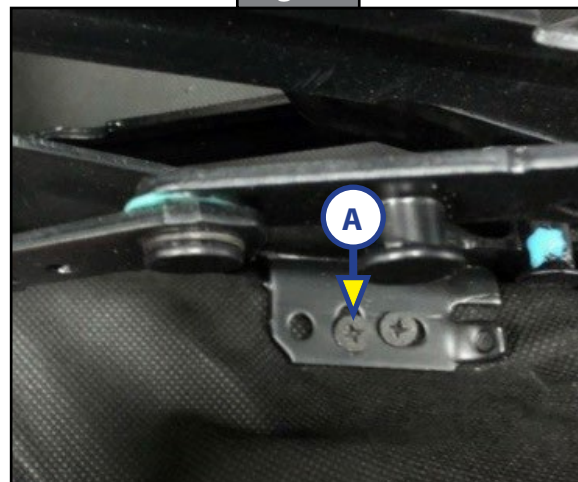

FURNITURE

17. Remove the two screws (Fig. 14B) holding the foot rest stabilizer (Fig. 14A) to the mechanism base. Set aside the stabilizer and screws to re-install onto the new mechanism base.

Fig. 14

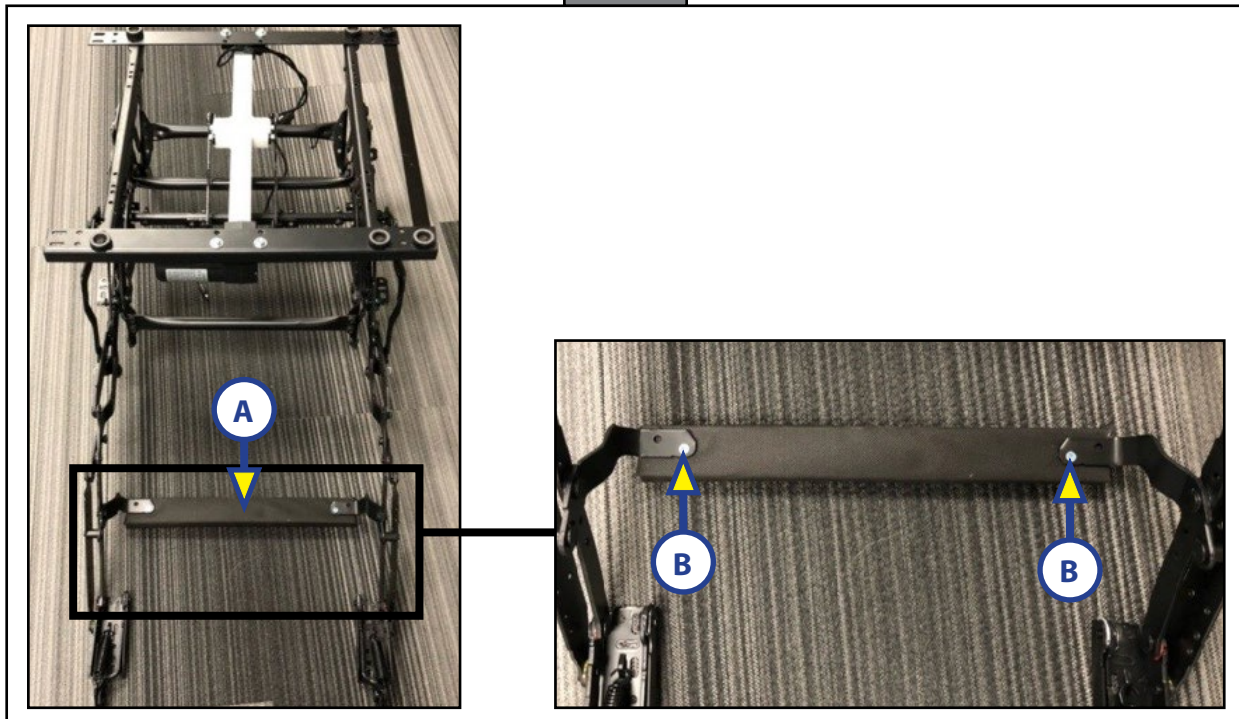

Replacing the Seating Mechanism Base

1. Place the new mechanism base upside down with the footrest extended, on a soft clean surface.
2. Install the previously removed foot rest stabilizer (Fig. 14A) and two screws (Fig. 14B) from the old base mechanism onto the new base mechanism.
3. Place the new base mechanism upside down, onto the seat cushion, aligning the screw holes in the theater seat cushion with the mechanism's base screw holes.
4. Install the three previously removed screws (Fig. 13A) from the base mechanism on the side with the armrest.
5. Install the two previously removed screws (Fig. 12A) on the side of the base mechanism, without the arm.
6. Connect the motor wire (Fig. 11A) and zip tie the wire, holding it in place to the mechanism base.
7. Connect the AC/DC power adapter wire (Fig. 10A).
8. Slide the LED light back up onto the base edge of the mechanism (Fig. 7B) and zip tie the LED light wire to the mechanism base to keep it in place.
9. Connect the LED light wire to the power harness. (Fig. 9A).
10. Install the four bolts, two on each side (Fig. 6A), holding the foot rest kick plate to the mechanism base.
11. Flip the seat right side up to install the back rest. Slide the back cushion down into the seat latches (Fig. 4A) until they click into place.
12. Reconnect the two power wire connections (Fig. 3A) in between the back and seat cushion.
13. Hook and loop the back flap closed.
14. Plug the theater seat into a power source and test the functions.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lippert.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.