

TIRE LINC® 1.0 COMPONENTS


ELECTRONICS



Callout	Part #	Description
A	273273	Tire Linc® Receiver (Charger included callout E)
B	273275	Tire Linc® Repeater (OBSOLETE, replaced by 363095)
C	363095	Weather-Resistant Tire Linc® Repeater
D	371113	Tire Linc® Initiator (Not included in standard kits.)
E	379057	Tire Linc® Receiver Charger
F	281798	Tire Linc® Sensor Assembly (40 PSI)
	329588	Tire Linc® Sensor Assembly (55 PSI)
	273295	Tire Linc® Sensor Assembly (70 PSI)
	273276	Tire Linc® Sensor Assembly (100 PSI)

TIRE LINC® 1.0 COMPONENTS

ELECTRONICS

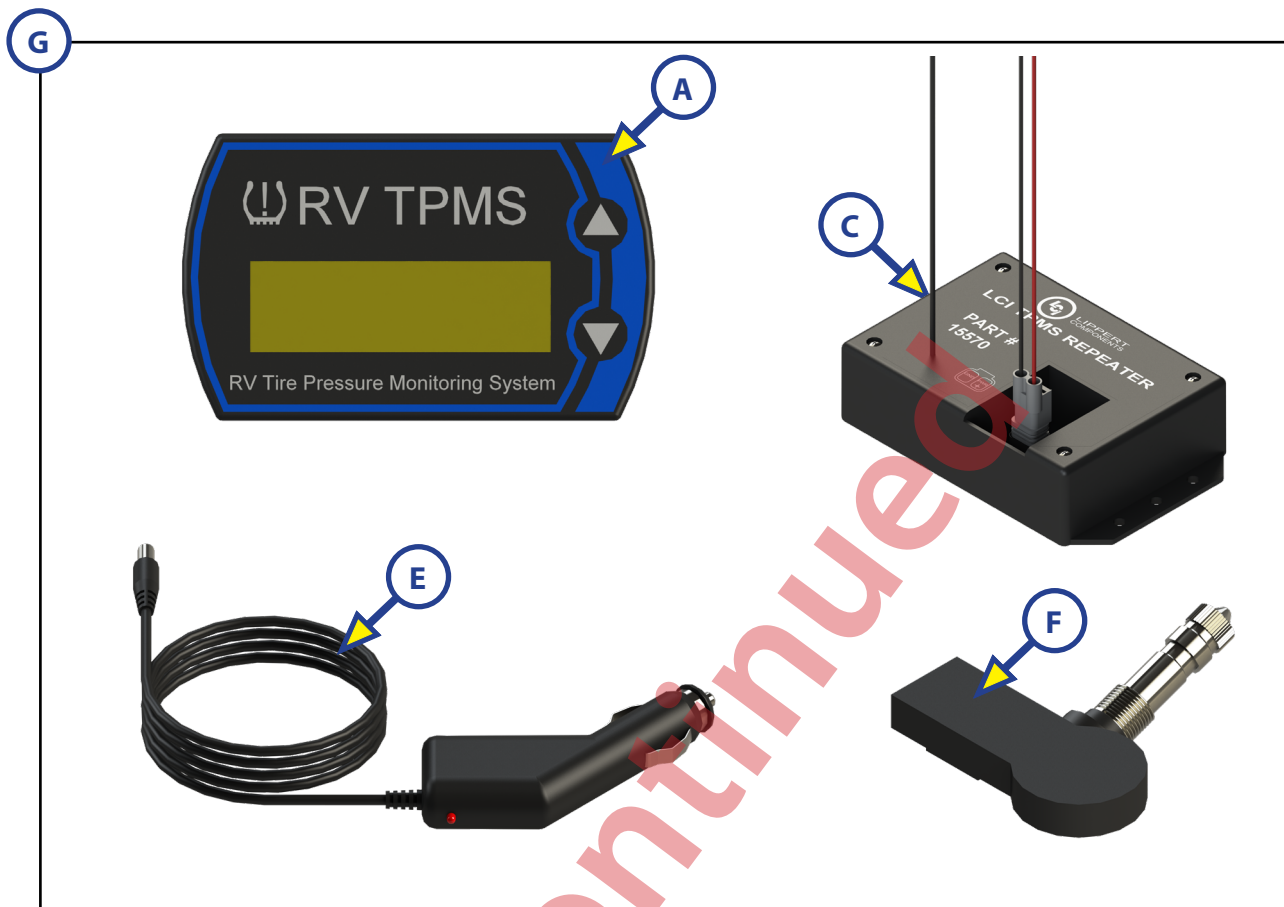

Callout	Tire Linc® System Kit #	Quantity of Appropriate Sensor Assemblies
NOTE: The kits below include 1 each of A, B, and E (see above) as well as the quantity of the appropriate Sensor Assemblies (F) listed below.		
G	281802 - 40 psi	4
	281803 - 70 psi	4
	331280 - 70 psi/3 Axle	6
	306890 - 70 psi/8 Tire	8
	281804 - 100 psi	4



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.