



TOOLBOX LATCH & SAFETY STOP REPLACEMENT

Parts Inventory

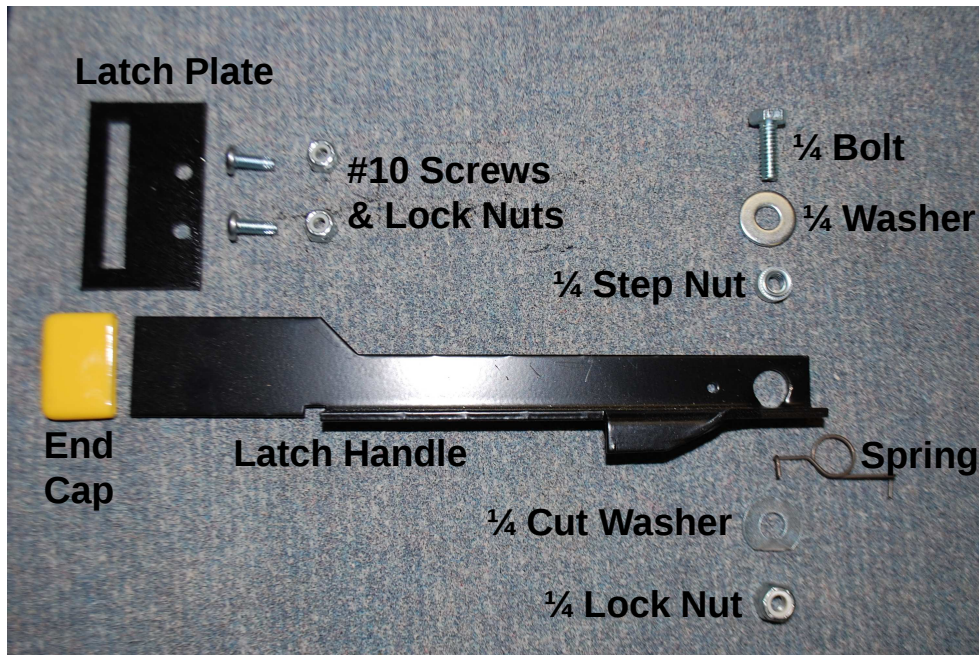

4. Install spring as shown

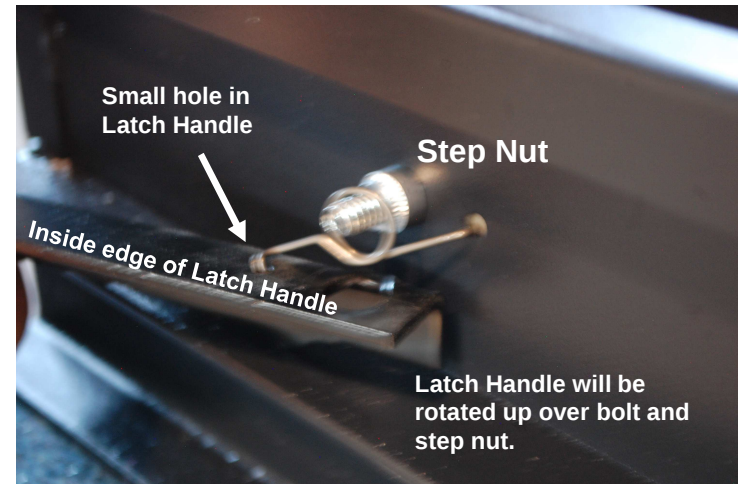


5. Rotate latch handle up and center it over the stepped nut and secure it with the cut washer and 1/4 Lock Nut



1. Remove the existing latch assembly.
2. Place 1/4 washer on 1/4 bolt and insert in hole in tray where old latch was removed. (Insert from inside out)
3. Spin stepped nut onto bolt with stepped end outward and tighten with wrench and pliers.



6. Install the latch plate using the #10 bolts and lock nuts. Make sure short side of latch plate is down. Pull plate inward and upward before tightening.

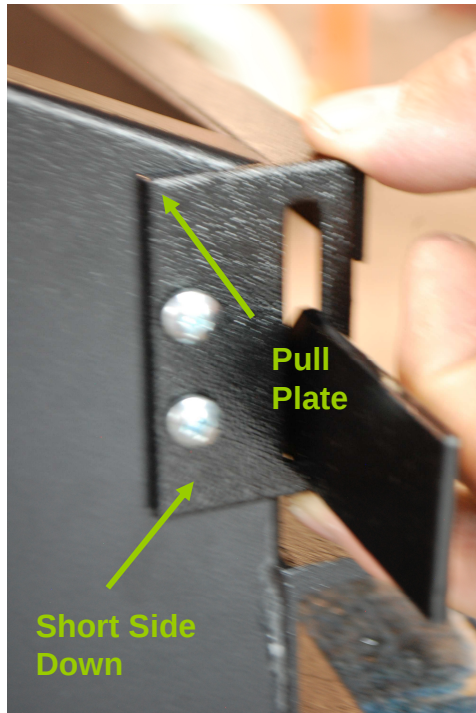

- 8: Replace Safety stop with new stop as shown below.



7. Press End Cap onto latch handle





This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.