


HYDRAULICS

Fig. 1

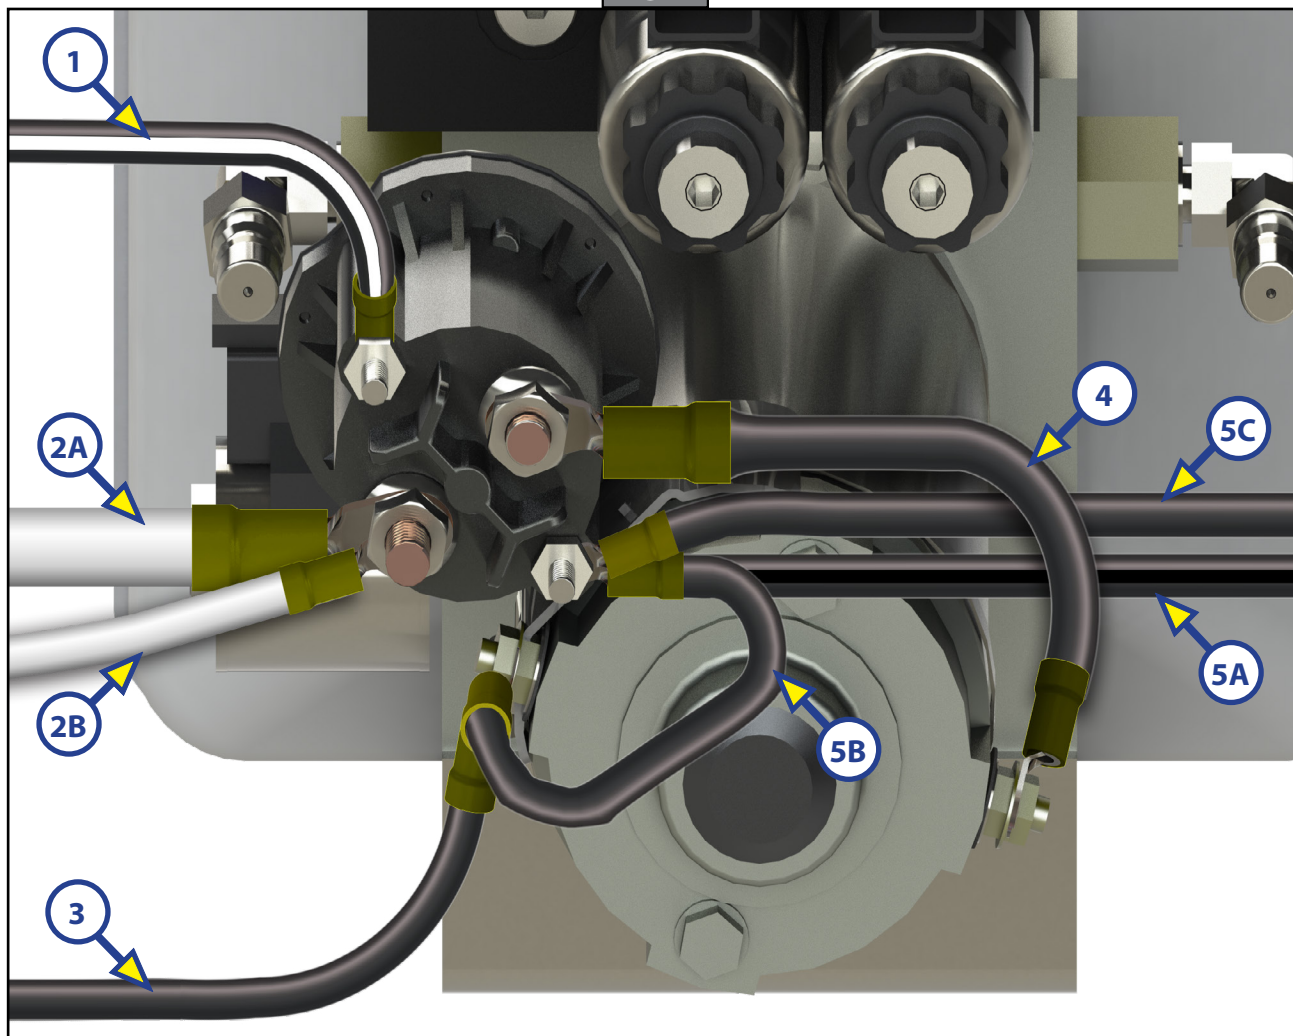

1. EXTEND/RETRACT: black w/white stripe wire - provides an extend/retract signal from the controller via power unit harness.

2A. POWER +12V: OEM-supplied wire - provides chassis power to the system.

2B. POWER +12V: white wire - provides power to the controller via power unit harness.

3. GROUND -12V: OEM-supplied wire - provides chassis ground to the system.

4. POWER +12V: black wire - provides +12V to the power unit motor when activated via extend/retract signal.

5A. GROUND: double black wire - provides ground to various power unit components.

5B. GROUND Jumper: black wire - provides ground to the solenoid and various power unit components.

5C. GROUND: single black wire - provides ground to various power unit components.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.