




LIPPERT
COMPONENTS®

Using the Auto Leveling Control Touch Pad- Travel Trailers

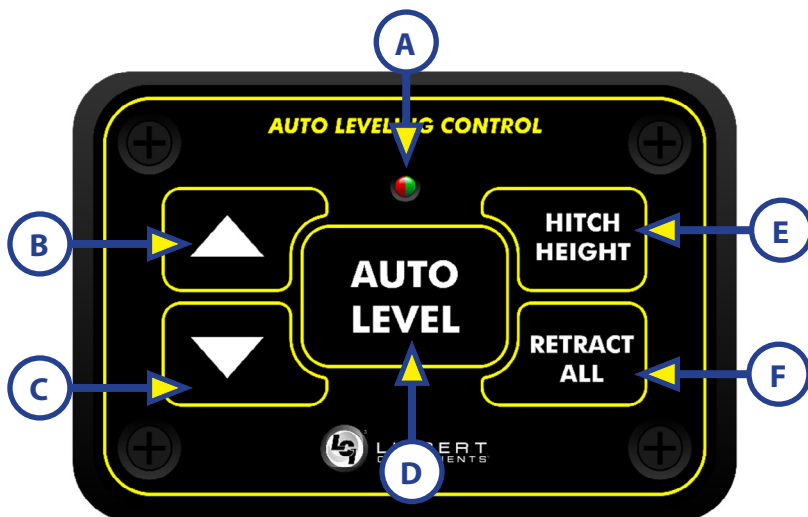

* LED Indicator

- **Off** - Touch pad is locked
- **Solid Green** - Touch pad is active
- **Blinking Green** - Jacks are moving and/or pump active
- **Solid Red** - Low battery
- **Blinking Red** - Error: (Consult OneControl Touch Panel or OneControl App for instructions.)

Features

A - Red/Green LED* - Indicates the status of the system.

B- Up Arrow - Extends tongue jack (raises the front of the trailer).

C- Down Arrow - Retracts tongue jack (lowers the front of the trailer).


D- Auto Level Button - Initiates Auto Level sequence.

E- Hitch Height Button - Initiates the smart hitch feature.

F- Retract All Button - Initiates full retract of all leveling jacks. Power Tongue Jack does not retract.

NOTE: Pressing the UP and DOWN arrows simultaneously turns the touch panel ON.

Using the OneControl Touch Panel™ - Travel Trailers

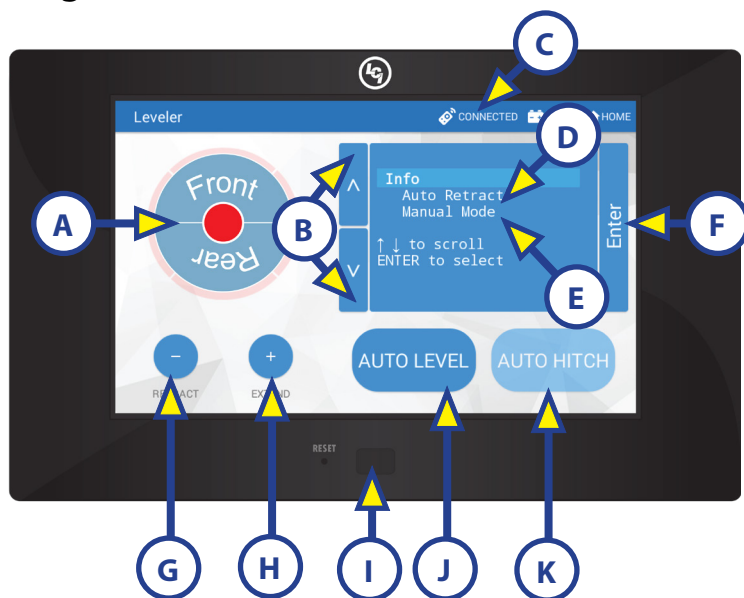

Features

A - Jack Button - Front: Operates Power Tongue Jack; Rear: Not operational in standard mode.

B - Up and Down Arrows - Scrolls through options on screen.

C - Connected Icon - Press 6 times to program zero point/ wireless configurations.

D - Auto Retract - Enters Auto Retract mode to retract all leveling jacks. Power Tongue Jack does not retract.

E - Manual Mode - Enters Manual Mode to manually operate jacks.

F - Enter - Push to select various modes.

G - Retract - Press to enter Retract mode.

H - Extend - Press to enter Extend mode.

I - Power - Turn touch panel on and off.

J - Auto Level - Starts auto level sequence

K - Auto Hitch - Initiates smart hitch feature.




LIPPERT
COMPONENTS®

Frequently Asked Questions - Auto Leveling Control Touch Pad

- Q.** How do I turn on Auto Leveling Control Touch Pad?
- A.** Press the UP and DOWN arrows simultaneously.
- Q.** Do I need to have the OneControl Touch Panel connected for the Auto Leveling Control Touch Pad to function?
- A.** The OneControl Touch Panel does not have to be connected for the Auto Leveling Control Touch Pad to function.
- Q.** Is the Auto Leveling Control Touch Pad on the outside of my trailer?
- A.** The Auto Leveling Control Touch Pad will be mounted outside the trailer within view of the hitch.
- Q.** Is the Auto Leveling Control Touch Pad waterproof?
- A.** Yes, the Auto Leveling Control Touch Pad is waterproof.
- Q.** How do I operate the front or rear jacks from the Auto Leveling Control Touch Pad?
- A.** You cannot operate the front or rear jacks from the Auto Leveling Control Touch Pad. The front or rear jacks must be operated from the OneControl Touch Panel inside the trailer.
- Q.** How do I know if there is an error on my system?
- A.** The red LED on the Auto Leveling Control Touch Pad will blink red if an error is present.
- Q.** How do I clear an error code on my system?
- A.** Error codes must be cleared from the OneControl Touch Panel inside the trailer (follow instructions on the screen). The only exception is when the Auto Leveling Control Touch Pad was used to abort an auto sequence. In this case the error can be cleared by pressing any Auto Leveling Control Touch Pad button.

Frequently Asked Questions - OneControl Touch Panel

- Q.** Do I need to have the Auto Leveling Control Touch Pad connected for the OneControl Touch Panel to work?
- A.** No, the Auto Leveling Control Touch Pad does not need to be connected for the OneControl Touch Panel to work.
- Q.** How do you set the zero point calibration?
- A.** Press the CONNECTED icon at the top of the leveling screen quickly 6 times. Wait a few seconds, press the gear icon with "OPTIONS." Follow the screen prompts for setting up zero mode, further leveling options and zero point calibration.
- Q.** What jacks can be operated in Standard/Idle Mode? (Screen shown on previous page).
- A.** Power Tongue Jack can be extended and retracted.
- Q.** How do I enter Manual Mode?
- A.** Use the UP and DOWN arrows to scroll to Manual Mode and hit ENTER. All jacks can be operated in Manual Mode (displayed at right). The available jack will be highlighted in dark blue when the appropriate extend or retract button is pressed.

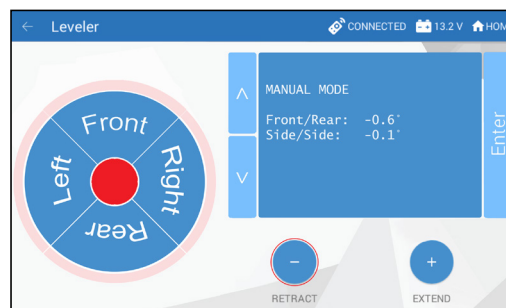



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.