


STORAGE AND CONVENIENCE

Tools Needed

- 1/8" punch
- Hammer
- Replacement Waste Master nozzle
- (2) dowel pins
- End seal
- Dow Corning 111 lubricant

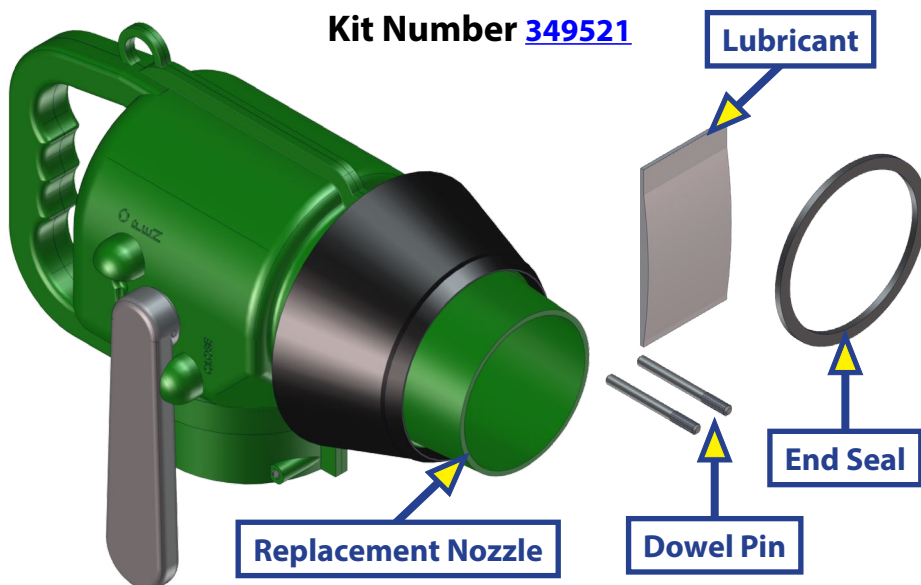

Replacement Procedure

1. At the nozzle, drive two pins out with a 1/8" punch and hammer (Fig. 1).

NOTE: Orient nozzle as seen in (Fig. 1). Drive pins out toward operating lever (Fig.1).

2. Remove nozzle from hose.
3. Before installing new nozzle, make sure new end seal is in place (flat end in groove).
4. Coat the seal with Dow Corning 111 lubricant included in kit.
5. Install new nozzle on hose.
6. Drive pins back into place. Install from operating lever side, smooth end first.



As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.