

EasyTouch RV
356
Operating Manual
Revision 1.2

Table of Contents

EasyTouch RV 356 Models and Compatible Replacements.....	3
Installing the Thermostat	3
Safety.....	3
Removing the Old Thermostat	4
Wiring the Thermostat	4
Re-apply Power	6
Mounting the Thermostat.....	7
Initial Setup Instructions.....	8
Configure your Available Outputs	8
Connecting Remotely	8
Operating the Thermostat.....	9
Main Screen	9
Operational Modes	11
Auto Gas Changeover.....	13
Local Weather and Local Time	14
Status Messages.....	14
Settings Screens	15
Schedule Screens.....	18
Create and Enable a Schedule	19
Smart-Device Application Features	20
Restart Thermostat	20
Calibrate Touchscreen.....	20
Check for Updates	20
Notifications.....	20
Edit Wi-Fi Settings or Connect to Wi-Fi	20
Appendix A: Working Wirelessly.....	21
First Connection Steps.....	21
Adding a Thermostat to Your Account	21
Connecting to a New Wi-Fi Network.....	22
Updating The EasyTouch RV Thermostat	22
Appendix B: Troubleshooting	23
Testing an Output.....	23
Wi-Fi Troubleshooting.....	23
EasyTouch RV Knowledge Bank – More Information.....	23

The EasyTouch 356 model thermostats were designed to directly replace certain 12-volt Coleman™, Airxcel™, RVComfort™, TrueAir™, and ComfortGuard™ single zone, single/dual-stage compressor, single/dual-stage heater systems. These are typically “basement units” in Winnebago or Alfa brand recreational vehicles. Please use section *EasyTouch RV 356 Models and Compatible Replacements* to make sure that this model is right for you.

EasyTouch RV 356 Models and Compatible Replacements

EasyTouch RV 356 can be purchased in two colors. *Table 1* lists all EasyTouch RV 356 models. The obsolete thermostats are no longer sold, however their only difference was how to wire the unit. There is no need to replace these models as operations and build quality were identical to the latest thermostats.

EasyTouch RV 356 Model	Color
ASY-356-X01	Black
ASY-356-X02	White
-OBSOLETE- ASY-356-X03 -OBSOLETE-	
-OBSOLETE- ASY-356-X04 -OBSOLETE-	

Table 1

Table 2 and *Table 3* list the known OEM model numbers that can be used with EasyTouch RV 356. The tables are not exhaustive so if your thermostat is not listed, please contact Micro-Air <https://www.micro-air.com/SupportRequest> to verify if this is the correct model for your application. Thermostat model numbers can be found in your original user’s manual and on the back side of the thermostat or the back of the mounting plate. Note that a “*” character means any character in that position is a match.

A 4-to-3 wire harness is provided with EasyTouch RV 356 that may or may not be needed. *Table 2* are those that do not use this harness, while *Table 3* thermostats will. See section *Wiring the Thermostat* for how and when to use it, if needed.

Compatible OEM Thermostats	
6536A335*	6795B345*
6536-345*	6795A365*
6759B345*	6636-345*
6537-335*	6535*335*
6636-344*	

Table 2

Compatible OEM Thermostats	
6535-344*	9530*335*
9330-336*	6330B355*
6537-344*	

Table 3

Installing the Thermostat

Safety

First, it is recommended to remove both AC and DC power from your system. Unplug your RV from shore power and turn off any converters or generators to remove AC power. Open your 12-volt DC bus breaker or fuse to de-energize your thermostat. This greatly reduces the chance of any harmful electrical discharge, as well as preventing accidentally opening a fuse.

Removing the Old Thermostat

The original thermostats have a front cover that pops off. Behind the cover there are 2-4 mounting screws that must be removed to free the back plate. Once the thermostat is removed, pull out some of the wire from the wall to inspect how it was installed.

Some RV builders will use the proper plugs recommended by the original thermostat manufacturer, which is also how EasyTouch RV is designed. This means you can simply unplug the thermostat and proceed to the next section.

Other RV builders do not use the proper plugs and direct wire the thermostat to the RV manufacturer's wiring using wire crimps or similar. Some of them may use a mix of plugs and direct wire. If the unit is direct-wired fully or in part then take some pictures of this wiring for reference. Be sure that you can see where the thermostat wires meet with the wall wires as they are typically different colors. You can also write in *Table 4* later in the section to record what color wires meet.

Wiring the Thermostat

Molex™ Plugs

If your installation was done with the proper mating Molex™ plugs, then you can simply plug in all the mating connectors and move on to the section *Mounting the Thermostat*. The provided 9-pin (3x3) wire harness will not be needed. Not all installations will use all plugs, just ensure that every original plug has an EasyTouch match.

You may find the Molex™ plug coming from the wall has a 3-pin plug and EasyTouch comes with a 4-pin plug installed. Use the provided 4-to-3 pin adapter harness in these systems, where the orange/white wire is not used. If you have a 4-wire plug coming from the wall already then you will not need the 4-to-3 pin adapter harness. If you find the 9-pin (3x3) is used but not a 4-or 3-pin then you will use the relevant *Direct-Wired* section directions to complete the wiring.

If the plugs are not the standard Molex™ plugs that mate with EasyTouch then you will have to wire it direct as described in the *Direct-Wired* section. You could also make up your own plugs but is beyond what Micro-Air can assist with.

Direct-Wired

The original thermostat in these systems will have wires coming out of the back of it that are connected to the RV manufacturer's wiring harness, using a crimp-splice or similar. The wire colors on the RV manufacturer's harness can vary, but the wires at the back of the original thermostat are always the same color for their use.

Follow the thermostat wires to where they are spliced to the RV manufacturer's wire harness. Write in the RV wiring harness colors in *Table 4* below before making connections. Take pictures if you have not already for reference as well. Some thermostats and harnesses may not have all of the wires shown in *Table 4*. The important part is that every original wire has an EasyTouch match.

Table 4 – Wire Color Chart

Micro-Air Connector		Original thermostat wire color	Micro-Air harness color		Function	Factory harness color (Provided to write in your color)
2-pin connector		Green/White Stripe	Green/White Stripe		Room Sensor	
		Green/White Stripe	Green/White Stripe		Room Sensor	
9-pin connector		Gray	Pin No.	Gray	Freeze Sensor	
			1			
		Red	2	Red	+ 12 VDC Out	
		Gray	3	Gray	Freeze Sensor	
		Green	3	Gray	AGS	
		Blue	4	Blue	- 12 VDC (Ground) Out	
		Yellow	5	Yellow	Compressor 1	
		Orange	6	Orange	Compressor 2	
		Black	7	Black	Indoor Fan High	
		White/Black Stripe	8	White/Black Stripe	Electric Heat	
		Purple	9	Purple	Indoor Fan Low	
3-pin Connector	4-pin Connector	Red or Red/White Stripe	1	Red/White Stripe	+ 12 VDC In	
		Blue or Blue/White Stripe	2	Blue/White Stripe	- 12 VDC (Ground) In	
		White	3	White	Gas Heat 1	
		Orange/White Stripe	4	Orange/White Stripe	Gas Heat 2	

Micro-Air provides a 9-pin harness that will be used to interface between EasyTouch and the RV manufacturer's wires. One side plugs into EasyTouch RV while the other wire end side is used to make your new wire connections. You will have to source or reuse electrical connectors to make these connections.

EasyTouch will also have a pre-wired 2-pin connector and a pre-wired 4-pin connector attached to the back. Connect the provided 4-to-3 pin adapter harness to EasyTouch. Strip away the black heat-shrink on the orange/white stripe wire if the orange/white stripe wire is used. Cut off the 2-pin and 3-pin plugs as needed and use electrical connectors (not provided) to complete the installation per *Table 4*. Any unused wires or plugs you can cut short or leave untouched.

When you know where each wire goes you should begin cutting wires. Move through them one at a time, replacing an OEM thermostat wire with the appropriate EasyTouch wire until all the wires are replaced.

Webasto (TrueAir) Special Considerations

Some Webasto (TrueAir) thermostats may have an additional consideration. Some of them had a freeze sensor while some used an AGS (Auto-Generator Start) output, but never both. Inspect your OEM thermostat wires for either two gray wires or a green wire. As per *Table 4*, connect your gray wires to the gray wires of the Micro-Air 9-pin harness (polarity does not matter) or connect your green wire to the pin-3 gray wire of the Micro-Air 9-pin harness. Pin-3 is the gray wire next to orange and red. See the *Auto-Gen Start* section in *Initial Setup Instructions* to tell the thermostat how you have it wired.

Re-apply Power

Restore DC power and the thermostat screen should light up and boot into the main menus. This will happen if the four power wires are connected properly. All other wires control the outputs or are sensors. Restore AC power so that your appliances can run again. Move on to the section *Mounting the Thermostat*, or the section *Initial Setup Instructions* and mount the thermostat later.


Mounting the Thermostat





Step 1: Locate the mounting buttons horizontally across the hole with the smaller diameter against the wall.




Step 2: Screw in one screw and level the buttons so the display will be straight when installed.

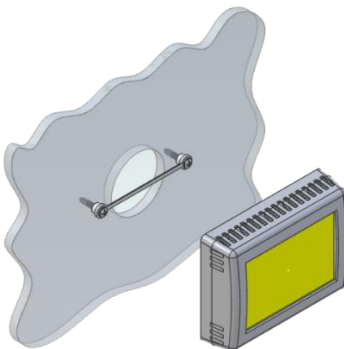

 Step 3: Screw in second screw making sure the two buttons remain level.

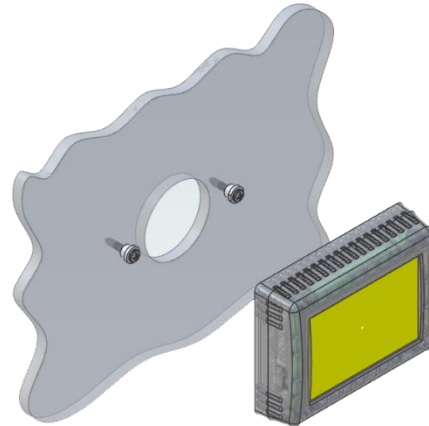

Step 4: Remove mounting tab before mounting on the wall.

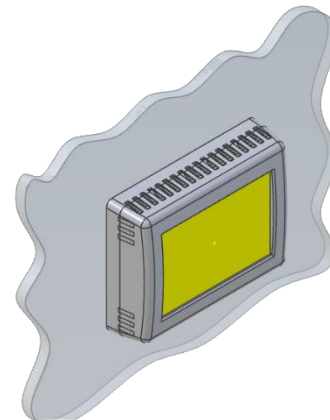

Step 5: Aligning the buttons with the holes in the back of the display. Press the display against the wall and gently slide the display down to lock it in place.

Initial Setup Instructions

Configure your Available Outputs

EasyTouch RV 356 is meant to replace a few different OEM thermostats and so must be configured for your system prior to using it. Tap the Settings button on the main screen, then navigate to the Switches button and tap it. Tap the heat pump button to enable or disable it based on what is installed in your system. A red circle with a line through it over the button indicates disabled. Cool and gas furnace are always enabled.



Settings



Switches



Heat Pump

Auto Gas Changeover Enable/Disable

You can enable or disable auto gas changeover by tapping the Enable/Disable button under the “Auto Gas Changeover” heading. When enabled, all of your available heat modes will act in stages based on how far the inside temperature is from the set-point. See section *Auto Gas Changeover* in section *Operating the Thermostat* for more details.



Auto Gas Changeover
Enable/Disable

Auto-Gen Start – Webasto (TrueAir) Systems

Some systems have hardware to allow for a generator to start prior to a cycle occurring that needs it. The hardware for Auto Gen-Start (AGS) is *not* part of the thermostat but it must be configured to know if it is available.



AGS Available/Unavailable

Tap the AGS Available/Unavailable button under the “Auto Gen-Start” heading to set it based on what you have. If set as “Available” then the Generator button will appear and you can turn the functionality on or off. Setting this to “Unavailable” is the default and should be used for all non-AGS systems. See section *Auto-Generator Start (AGS)* in *Settings Screens* for more details.



AGS Enable/Disable

Warning: You **MUST** configure AGS availability appropriately or your thermostat may not function as designed. You **CANNOT** enable this function unless you know you have the appropriate hardware. See section *Webasto (TrueAir) Special Considerations* if you are not sure. This can also be found in your original thermostat’s manual. Micro-Air cannot assist with acquiring AGS hardware.

Connecting Remotely

EasyTouch RV can be operated entirely by the touchscreen, however you can also communicate, monitor, and modify operation of it wirelessly using the EasyTouch RV application. Some extra features will require a wireless connection and is described in their sections. See *Appendix A: Working Wirelessly* for details.



EasyTouch RV App icon

Operating the Thermostat

Main Screen

This screen is where most time is spent using the thermostat. This screen allows you to set and monitor the desired operation of the thermostat and is shown in *Figure 1*.

(1) Inside temperature

This is the temperature reading for the space that the thermostat is trying to temper, determined by a local sensor. “Inside” means it is using a sensor inside the thermostat. “Inside(R)” indicates that a Remote sensor is in use and connected to the green/white wires on the back of the thermostat.

(2) Local Weather

This icon indicates the local weather at the last time weather information was received. Tap the icon for more detailed weather information. See the *Local Weather and Local Time* section for more details.

(3) Status Tray

Various icons may be here to indicate active operations.

The Wi-Fi indicator shows the state of the thermostat’s Wi-Fi connection. No icon means no connection to an internet enabling device. Red means it is connected to an internet enabling device but does not have internet. Green means it is connected to the internet. The number of bars indicate strength. See the *Connecting to a New Wi-Fi Network* for more details.

The Furnace icon here means that the heat mode is in Active Gas Changeover. See section *Auto Gas Changeover* in *Operating the Thermostat* for more details.

The Schedule icon here means that the created schedule is active and will change operation on that schedule. This is turned on and off in the Settings screens. See section *Schedule Screens* for more details.

(4) Status Message

Various messages may be shown here to indicate active operations. See the *Status Messages* section for potential messages and their meanings.

(5) Temperature Set Point Adjust

Raise and lower the temperature set-point using the red and blue arrows. This sets the desired temperature for the space based on the operating mode. All modes are listed in the (7) *Operational Mode* section.

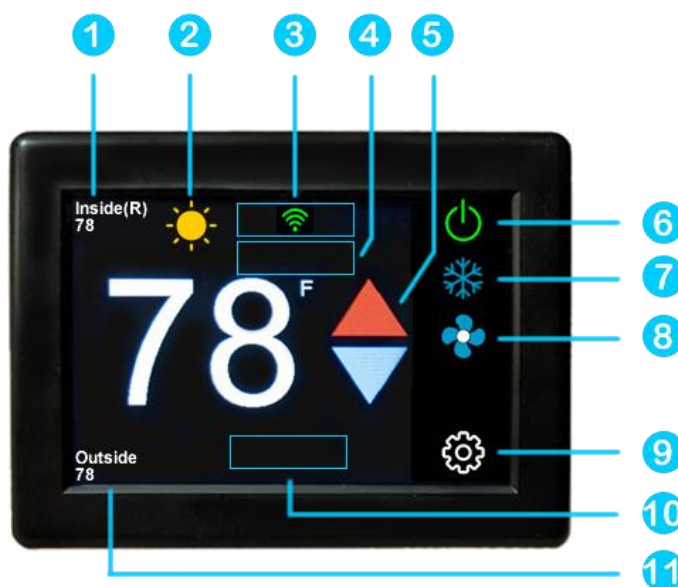


Figure 1 – Main Screen



Wi-Fi Indicator



Gas Changeover Active



Schedule Active

(6) System Power

Use the power button to turn the system on or off. Button is red for off and green for on.



Power

(7) Operational Mode

Pressing the mode button changes the current operating mode depending on what is available in your system. All possible modes are listed below. See the *Operational Modes* section for more details.



Fan Only



Cool Only



Heat Pump
Only



Furnace Only



Auto Cool/Heat
Pump



Auto Cool/Furnace

Note: If you do not see a mode you should have then see section *Configure your Available Outputs*.

(8) Fan Speed

Pressing the fan button selects how the fan will operate in conjunction with the (7) *Operational Mode*. Fans with green bars are manually always-on regardless of heating or cooling, with number of bars indicating speed. Fan Auto turns the fan on and off with a cooling or heat pump cycle and operates as Fan Off in all other operational modes.



Fan Low



Fan High



Fan Auto



Fan Off

(9) Settings

Pressing the settings button will change the screen to the settings screen to allow additional configurations. See section *Settings Screens* for more details.



Settings

(10) Additional Status Tray

Various icons may be here to indicate active operations. This thermostat has no icons to display here.

(11) Outside Temperature

This is the temperature reading for your local area that is retrieved over the thermostat's internet connection and is part of the (2) *Local Weather* information.

Operational Modes

All modes operate the overhead fan and/or a heating or cooling cycle based on the current heating or cooling setpoint, relative to the inside temperature.

Fans and Fan Only Mode

This mode lets the fan to operate based on the chosen (8) *Fan Speed*. This will circulate the air without operating any heating or cooling cycles.



Fan Only Mode



Fan Speed

Cool Only Mode

This mode only runs a cool cycle to maintain the cooling set-point in the space. Set the (7) *Operational Mode* button to Cool Only and the desired (8) *Fan Speed*, where behavior will then be based on *Table 5*.



Cool Only Mode

Environment (°F)	Cycle Operation	Auto Fan Operation
Inside $\leq$ Setpoint	None	Off
Inside 1° Above Setpoint	Compressor #1 On	On Low
Inside 2° Or More Above Setpoint	Compressor #1 and #2 On	On High
Inside Returns 1° Below Setpoint	Compressors Off	Runs 45 More Seconds, Off

Table 5 - Cool Only Mode Operation

Note: *Table 5* operation may be different based on the Gap settings. See section *Temperature Gap (Hysteresis)* for details.

Heat Pump Only Mode

This mode only runs an electric, overhead, heat pump heating cycle to maintain the heating set-point in the space. Set the (7) *Operational Mode* button to Heat Pump Only and the desired (8) *Fan Speed*, where behavior will then be based on *Table 6*.



Heat Pump Only Mode

Environment (°F)	Cycle Operation	Auto Fan Operation
Inside $\geq$ Setpoint	None	Off
Inside 1° Or More Below Setpoint	Compressor #1 And #2 On	On High
Inside Returns 1° Above Setpoint	Compressors Off	Runs 45 More Seconds, Off

Table 6 - Heat Pump Only Mode Operation

Note: *Table 6* operation may be different based on the Gap settings. See section *Temperature Gap (Hysteresis)* for details.

Note: All heat modes are subject to Auto Gas Changeover Operation when enabled. See section *Auto Gas Changeover in Operating the Thermostat* for details.

Furnace Only

This mode only runs an auxiliary heating cycle to maintain the heating set-point in the space. Set the (7) *Operational Mode* button to Furnace Only or Aqua Only and the desired (8) *Fan Speed*, where behavior will then be based on *Table 7*.



Furnace Only Mode

Environment (°F)	Cycle Operation	Auto Fan Operation
Inside ≥ Setpoint	None	Off
Inside 1° Or More Below Setpoint	Furnace Stage #1 On	
Inside Returns 1° Above Setpoint	Furnace Stage #1 Off	

Table 7 - Furnace Only Mode Operation

Note: *Table 7* operation may be different based on the Gap settings. See section *Temperature Gap (Hysteresis)* for details.

Note: All heat modes are subject to Auto Gas Changeover Operation when enabled. See section *Auto Gas Changeover in Operating the Thermostat* for details.

Auto Modes

These modes will automatically switch between heating and cooling cycles as needed. Their operation will be the same as their “only” mode counterparts described earlier in the *Operational Modes* section. Auto modes will have their own “dual” set-points that are separate heating and cooling set-points. No heating or cooling cycles will occur when the inside temperature is between the set-points.

This can be useful when setting a higher day-time cooling temperature and lower night-time heating temperature. It can also be used to control the temperature extremes when you are away from the RV. *Figure 2* shows how the main screen will look in auto mode.

Note: These auto modes are subject to Auto Gas Changeover and Gap operations. See their *Auto Gas Changeover* and *Temperature Gap (Hysteresis)* sections respectively for more details.

(1) Auto Mode Set-Points

Press the set-points to toggle between which set-point you have selected. A blue square will show around the one you have selected. The upper set-point is for cooling and the lower set-point is for heating.

(2) Set-Point Adjustment

Use the up and down arrows to change the selected set-point value.



Auto Cool/Heat Pump Mode



Auto Cool/Furnace Mode



Figure 2 - Auto Mode Main Screen

Auto Gas Changeover

Note: See section *Auto Gas Changeover* in section *Initial Setup Instructions* for enabling and disabling this feature.

Auto Gas Changeover operation mirrors the OEM thermostat's operation for additional stages of heat when the thermostat determines more are needed. The three escalating stages are shown in *Table 8*. All three stages may not be available based on your system, but EasyTouch will output the same logic. Stage 2 heating is available in every system.

Staging	Heat Source
Stage 1	Heat Pump
Stage 2	Furnace 1
Stage 3	Furnace 2

Table 8 - Heat Staging

Heat Pump and Auto Cool/Heat Pump Changeover Behavior

Table 9 shows how Auto Gas Changeover affects the Heat Pump operational modes when enabled.

Environment (°F)	Operation
Inside 4° Or Less Below Setpoint	Normal Heat Pump Operation (Stage 1)
Inside 5° Or 6° Below Setpoint	Stage 1 and Stage 2 Run Until Setpoint is Satisfied
Inside 7° Or More Below Setpoint	Stage 1, Stage 2, and Stage 3 Run Until Setpoint is Satisfied
or	
Any Stage Runs 20 Minutes	Stage Escalates to the Next Highest Available Stage
3 Cycles in a Row Call for Escalation	Operates on <i>Table 10</i> Behavior for Two Hours

Table 9 - Heat Pump AGC Operation

Note: *Table 9* operation may be different based on the Gap settings. See section *Temperature Gap (Hysteresis)* for details.

Furnace and Auto Cool/Furnace Changeover Behavior

Table 10 shows how Auto Gas Changeover affects the Furnace operational modes when enabled.

Environment (°F)	Operation
Inside 4° Or Less Below Setpoint	Normal Furnace Operation (Stage 2) (Stage 1 Never Runs)
Inside 5° Or More Below Setpoint	Stage 2 and Stage 3 Run Until Setpoint is Satisfied
or	
Any Stage Runs 20 Minutes	Stage Escalates to the Next Highest Available Stage
3 Cycles in a Row Call for Escalation	Stage 2 and Stage 3 will Start Together for Next Two Hours

Table 10 - Furnace AGC Operation

Note: *Table 10* operation may be different based on the Gap settings. See section *Temperature Gap (Hysteresis)* for details.

Local Weather and Local Time

Local weather is displayed on the main screen and shown visibly in section (2) *Local Weather* under section *Main Screen*. Tapping the button will reveal more detailed weather information of the last received weather data. The local temperature is displayed in the lower left corner of the main screen, as shown in section (11) *Outside Temperature*.

A valid location and an internet connection on the thermostat are required to retrieve weather data. Local time data also requires valid location data. Location is saved in the thermostat when a Bluetooth connection is made from a smart device with its location services enabled. The location in the thermostat is updated when a subsequent Bluetooth connection is made with a different smart-device location than the one saved. Location is preserved through power losses or device restarts.

New weather data is retrieved when there is a screen press or when a connection from a smart device is made, along with the above prerequisites.

Time is pulled in when a Bluetooth or Wi-Fi connection is made from the app. Also, an internet connection on the thermostat will grab the time so long as there is a valid saved location. If power is interrupted or the device is restarted, it will go out to the internet to grab the current time when the internet connection is re-established, without app interaction.

Status Messages

Some messages may be displayed on the main screen as shown in section (4) *Status Message* under *Main Screen*. Table 11 shows the potential messages and their meaning.

Message Text	Description
OPEN INDOOR SENSOR	The room sensor inside EasyTouch RV has failed open/disconnected or shorted. It must be repaired, or replaced by an external Airxcel OEM remote sensor using the green/white stripe wires of EasyTouch RV.
BAD INDOOR SENSOR	
OPEN FREEZE SENSOR	The freeze sensor is open to say that the indoor coil has frozen up under cooling operation and should be serviced as directed in the OEM manual for the A/C unit. Cooling operation will resume when the sensor closes to indicate it has warmed up and will resume cooling operation. If not, ensure that the sensor is installed to the thermostat correctly on the two gray wires. AGS systems do not use a freeze sensor so ensure that the thermostat is configured properly for AGS systems if used, as described in the <i>Webasto (TrueAir) Special Considerations</i> section.
AUX HEAT ENABLED	This means that the two-hour timer of the Auto Gas Changeover logic is active. See the <i>Auto Gas Changeover</i> section in <i>Operating the Thermostat</i> for details.

Table 11 - Status Message Descriptions

Settings Screens

The settings screens allow for further configuration and control of the thermostat. It is a paged system that you can navigate through to see all available settings. Each setting button can be tapped to configure the related settings. **Note: Not all settings may be available depending on your EasyTouch RV model. If you do not see the graphic then it is not available for your system.**



Settings Button

Tap the settings button as shown in section (9) *Settings* under *Main Screen* to view them.

Navigation

Use these buttons to flip through all the available settings or return to the main screen.



Previous Settings Page



Back to Main



Next Settings Page

System Help

This screen displays a QR code that can be scanned to provide information about thermostat operation and troubleshooting from the Micro-Air website. It also shows the current thermostat firmware revision and the thermostat serial number.



Help Button

Day/Night Mode (Screen Saver)

Tap this icon to switch between Day or Night mode. Day mode will dim the display down to the Sleep Level set in the *Display Brightness* settings, after 30 seconds of no screen presses. Night mode will turn the backlight completely off after 30 seconds of no screen presses. The display will brighten again after a screen press to the Active Level set in the *Display Brightness* settings.



Day Mode



Night Mode

Display Brightness

This screen allows you to set the Active and Sleep brightness levels that are used by the *Day/Night Mode (Screen Saver)* settings. Tap the associated up and down arrows to change their level.



Brightness Button

Schedule – Edit, Enable or Disable

There are two Schedule buttons with sub-writings “Schedule” or “Enable/Disable”. Tap the enable/disable button to turn the schedule on or off. Tap the schedule button to modify the schedule. See section *Schedule Screens* for more details.



Schedule Button

Wi-Fi Information

This screen allows you to monitor the state of your Wi-Fi connection to the thermostat. SSID and Password fields shows the saved credentials that the thermostat is always attempting to find and connect to. Tap the password field to reveal the password.



Wi-Fi Button

The Router, Strength, and Internet fields show the state of the Wi-Fi connection. The MAC address of the thermostat is also shown at the bottom. See section *Connecting to a New Wi-Fi Network* for more details about using Wi-Fi.

Bluetooth (Account) Password Reset

This screen is used to reset the saved Bluetooth password in the thermostat. This is the password that must match your EasyTouch RV app account to make remote connections. Only one account can have access to the thermostat. Use this whenever you reset the password to your app account to regain remote access to the thermostat.



Bluetooth Password Reset

Temperature Reading Adjustment

This setting allows you to calibrate the Inside temperature reading with an offset. For example, if the inside temperature reads 72°F (22.2°C) and you feel it is 75°F (24°C), you can use the up and down arrows on this page to increment the offset to +3°F (+1.8°C).



Temperature Reading Adjustment

Temperature Gap (Hysteresis)

This setting determines the difference in temperature required between setpoint and inside temperature before a heating or cooling cycle will begin. This is helpful to prevent short cycling in large spaces or spaces with high thermal loss, by running a cycle for longer amounts of time. This offset is applied to all logic that involves setpoint operations, such as auto modes, auto gas changeover, etc. See *Table 12* for an operational example.



Temperature Gap Button

Inside Temperature (°F)	Heating Setpoint (°F)	Heating Gap Setting (°F)	System Operation
69	68	3	None
66			None
65			Heating Cycle Begins
67			Heating Cycle Continues
69			Heating Cycle Terminates

Table 12 - Temperature Gap Operational Example

Measurement Units

This setting determines how to display temperatures on the thermostat. Tap the Units button to toggle between Fahrenheit and Celsius.



Units Button

Touchscreen Calibration

The EasyTouch RV touchscreen is calibrated at the factory to accurately interpret your touch presses. Pressing the Touchscreen Calibrate Button will allow you to recalibrate the touch press area. Follow the on-screen prompts to calibrate the touchscreen. Any overlapping test targets on the second screen is a good calibration.



Touchscreen Calibrate Button

Restart

This setting will turn the thermostat off then on as if removing and restoring power. Tap the Restart button and follow the on-screen prompts to confirm.



Restart Button

Reset All

This setting will reset certain settings in the thermostat back to factory defaults. Some thermostats offer options to which settings to return to defaults. Tap the Reset All button and follow the on-screen prompts to choose what you would like to reset.



Reset All Button

Dip Switches

This setting is used to configure your thermostat's operational settings and is slightly different for each EasyTouch RV model. Some simply display how the air conditioner control board that EasyTouch RV communicates with is configured. Others allow for telling EasyTouch RV what appliances it has connected to it. Tap the Switches button to see what configurations are available. See section *Initial Setup Instructions* for details on what must be configured, if any. Micro-Air cannot assist with manipulating and adding more appliances to your system.



Switches Button

Auto-Generator Start (AGS)

Warning: See Section **Auto-Gen Start – Webasto (TrueAir) Systems** in *Initial Setup Instructions* for configuring this behavior where appropriate.

This setting allows for a generator to start prior to any appliances that need line voltage to run. EasyTouch RV will output voltage to its pin 3 grey wire to go to existing AGS hardware, prior to calling for any appropriate cycles. It then disconnects voltage from this wire when it is no longer needed. Tap the AGS Enable button to green to enable this behavior or to gray to disable it.



AGS Enable Button

Furnace/Aqua Icons

Most RV systems have auxiliary heat modes in the form of a “forced-air” gas furnace or hydronic heat. EasyTouch RV or the associated control board treats these as the same output and so you can tap the Furnace/Aqua button to toggle between what icons to display for this operational mode. This is simply a cosmetic setting for all EasyTouch RV models except the 350 model, which should be set appropriately.



Furnace/Aqua Button

Schedule Screens

The schedule supports 7 day per week scheduling of events. Events can include changes to the set point or mode of operation for one or more zones. *Figure 3* shows the main schedule screen.

The smart device application also offers a method to copy days. Once a schedule is set for one day, it can be copied to any other day.

(1) Day of the Week

Day of the week is selected from the days along the top of the screen. The day selected appears in white.

(2) Scheduled Events

Events are numbered 1 to 6 along the left side of the display. Tap an event to edit it and advance to the schedule edit screen, shown in *Figure 4*. Tap “more” to see events 4, 5, and 6.

(3) System Time

System time is displayed along the bottom. Tap the time to change from 12-hour to 24-hour time format. A “--:--” is shown when time has yet to be set. See section *Local Weather and Local Time* for setting up the system time.

(4) Back

Tap the back arrow to return to the last screen.

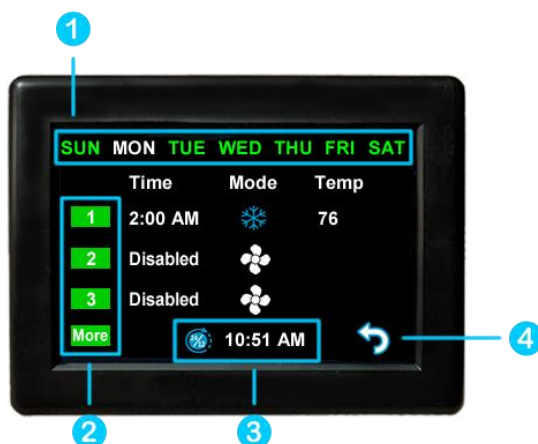


Figure 3 - Main Schedule Screen

Figure 4 shows the edit screen when an event is tapped as shown in (2) *Scheduled Events* on the main schedule screen. The event on the main screen and action time in the edit screen will show disabled until a time is set. Press “Disabled” (1) at the top of the screen to show a gray box around the disabled selection. Use the up and down arrows to make a change. The up and down arrows change to full color once a selection is made. Use the back arrow (2) to save any changes and leave the screen.



Figure 4 - Schedule Edit Screen (Disabled Event)

Figure 5 shows the schedule edit screen once a valid time is set for the event.

1. Set the event time by selecting hours, minutes or AM/PM.
2. Set the desired mode by tapping the mode button.
3. Tap the hours, minutes, AM/PM or the set point to select an editable parameter, then use the red and blue arrow buttons to make a change.
4. Tap the zone number to enable/disable the zone you want this event to affect. A green box will draw around zones the event is enabled for. EasyTouch RV models that are not zone controls will not have this feature and will always be enabled when a valid Action Time (1) is used.

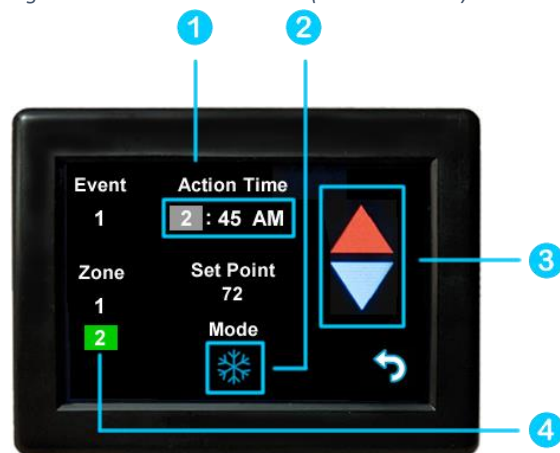


Figure 5 - Schedule Edit Screen (Enabled Event)

Create and Enable a Schedule

- Tap the edit schedule button as described in the *Schedule – Edit, Enable or Disable* section in settings, to enter the main schedule screen, shown by Figure 3.
- Ensure that a valid (3) *System Time* is shown. Tap the day you want to set up a schedule for, then the event you want to edit, all shown by Figure 3. Tapping the event will take you to the edit schedule screen, shown by Figure 5.
- Tap the Action Time, Setpoint and Mode to make edits to what you want your event to do. Tap the zone you want this event to occur in if shown.
- Tap the back button and repeat for any other events and any other days.
- Tap the back button once again to return to the settings screen and this will save your schedule. Activate the schedule by pressing the schedule button with the “Enabled/Disabled” subtext as described in the *Schedule – Edit, Enable or Disable* section in settings. When enabled, it will be noted on the *Main Screen (3) Status Tray*.

Smart-Device Application Features

Restart Thermostat

This Bluetooth only feature allows resetting the display just as if you removed and restored power.

Calibrate Touchscreen

It is normally not necessary to recalibrate the touchscreen. This selection prompts the user to press the four corners of the display then test the calibration using three diagonal marks. This feature is only available from Bluetooth as being at the thermostat is required.

Check for Updates

Checks to see if any updates are available for the thermostat. The smart device application must have internet and the thermostat must be connected to Wi-Fi with a green Wi-Fi symbol. Tap Check for Updates and follow the prompts.

Notifications

Notifications provide a way for the user to monitor the temperature in the space using notification limits. Limits are set by connecting to the thermostat in the app, selecting the settings gear, and then selecting notifications. A minimum and maximum allowed temperature can be set. *Table 13* shows an example of operation with an 80°F maximum temperature set. Notification will be sent for each degree it rises above the maximum temperature. If temperature drops, no notification will be sent unless the temperature exceeds the last maximum temperature again (82 in the example). If the temperature drops two degrees below the set maximum, (78 in the example) it will again alert for each degree above the set maximum. This behavior helps avoid nuisance notifications to your smart device.

Temperature (°F)	Action
80	Send first notification
81	Send another notification
82	Send another notification
81...79	Temperature drops, no notification
78	Max temp resets

Table 13 - Push Notifications Operation Example

Edit Wi-Fi Settings or Connect to Wi-Fi

This is where you will make the connection from the thermostat to the internet. See section *Connecting to a New Wi-Fi Network* for details on how to use this feature. The app must be connected to the thermostat over Bluetooth to see this option.

Appendix A: Working Wirelessly

This thermostat may be operated remotely using either Bluetooth or Wi-Fi. All connectivity is performed through the EasyTouch RV App on a smart-device. The app is downloaded from the Google Play store or Apple App store. The first time the app is opened, it will ask to create an account. Create your account and follow the prompts to connect your thermostat.



EasyTouch RV App icon

Bluetooth is a limited range method to connect, typically used when near the thermostat. The thermostat can be connected to an internet-connected network, where you can then access the thermostat from anywhere you have an internet connection with the app.

If a second user is going to use the thermostat remotely, they **MUST** use the same account and password that the first user assigned to the thermostat. Each thermostat can only be assigned to a single account, but many users can control the thermostat if they use the same account.

First Connection Steps

Note: An internet connection on your smart device is necessary for these steps.

1. EasyTouch RV uses BLE which is a special implementation of Bluetooth. It is not necessary to “Pair” the thermostat with the phone but an account must be created for operation. Ensure that Bluetooth is enabled and that the app has Bluetooth and location services permissions. Android users must also have locations services turned on in general.
2. Start the app on your smart device. The app will open and if you have not entered your account information, it will ask you to create an account and enable permissions. Enter your name, email, and a password at the prompts. The system will send a confirmation email to your inbox. Enter the number in the confirmation email when asked.
3. Once the account is created, the application may ask to add a device. If your thermostat is powered it will show in the list to be added to your account. Select the device and enter a name for it. This name is used to identify and connect to it in the future.
4. If you added a control, the app will ask if you want to connect it to Wi-Fi now. Enter your SSID (network name) and password of the network you want to connect the thermostat to.

Adding a Thermostat to Your Account

Follow the next steps if the account process does not add a control or a second thermostat is to be added.

1. Press the settings gear and “Add Device”.
2. The nearby thermostat(s) should be listed in the new selection window. These are the thermostats heard over Bluetooth. Select the device and enter a name for the device.
3. Press OK and the screen will return to the settings menu (Android) or the selection screen (Apple). Android users should press the back button to get to the selection screen.
4. Select the device name to open the thermostat screen.

Connecting to a New Wi-Fi Network

You can connect to the thermostat from anywhere using the app when the thermostat is connected to an internet source. The internet source **must** be a 2.4GHz network to connect to EasyTouch.

1. Connect to the thermostat in Bluetooth (Apple) and press the settings gear.
2. Select Wi-Fi Setup from the settings window.
3. Connect to a network:
 - a. The SSID (network name) will say “searching” then switch to “select”. Tap “select” to choose from a network the thermostat can hear.
 - i. Alternatively, enter the SSID manually (case sensitive)
 - b. Enter the password (case sensitive).
4. Press OK and the screen will return to the selection screen. The thermostat will reset and a green Wi-Fi symbol will appear on the thermostat screen if the connection was successful.
5. With a green Wi-Fi symbol, you can now connect to the thermostat from anywhere using the app over the internet.

Updating The EasyTouch RV Thermostat

Ensuring you have the latest thermostat software is key to having all the latest features.

1. Ensure the thermostat is connected to Wi-Fi with a green Wi-Fi symbol.
2. Connect to the thermostat and press the settings gear, then tap Check for Updates.
3. Follow the prompts to update the thermostat or ensure that you already have the latest software.

Appendix B: Troubleshooting

The most common problems during installation are not matching the wires correctly or properly mating the wires. The first step should always be to recheck the instructions and make sure the wires are joined and seated properly.

The second most common problem is not knowing the thermostat operation. If the system is running a heating or cooling cycle, the set point will turn red for heating and blue for cooling. When the thermostat turns white, the heat pump, heat strip and furnace should all be off. The fan may continue to run for a while after the cycle completes. If a fan is left in a manual mode it will not shut off.

Testing an Output

Table 4 – Wire Color Chart in section *Wiring the Thermostat* shows the color label and purpose for each of the thermostat wires. This information can be used in troubleshooting to verify that the thermostat has turned on an output and troubleshooting the output is required.

Use a voltmeter to verify that the thermostat has turned on an EasyTouch output. Set to voltmeter measure DC voltage and check for ~12 volts between the blue (ground) wire and the output terminal to be tested to see if the thermostat has turned on the output. If there is 12 volts present further troubleshooting of the component (fan, compressor furnace, heat pump, heat strip) is required. If 12 volts is not present, verify that the fuse in EasyTouch RV is still good.

Wi-Fi Troubleshooting

No Wi-Fi Icon

- SSID (Network name) and password are both case sensitive.
- Be sure you are connecting to a 2.4 GHz network and not a 5GHz or 6GHz network.
- Set the security to WPA2 and TKIP+AES if you are having trouble.
- The thermostat has a limit of 31 characters for the SSID and 50 for the password.
- Ensure the number of devices limit for the network is not full.
- Ensure the Wi-Fi source is not out of range or metal partitions blocking the signal.
- Try a guest network or mobile hotspot that may have reduced restrictions.
- Reset the router to renew the DHCP lease.
- If you are in a metal enclosure, try moving the router or thermostat a few inches (even if temporary) and trying again.
- If using MAC filtering, add the thermostat to the allowed devices list.
- Try assigning a DHCP reservation to the thermostat MAC address.

Red Wi-Fi Icon

- The router must have an internet connection
- Server may be down, check back at a later time
- Be sure there is no firewall in the router blocking the incoming messages (port 8883, MQTT). Place the thermostat IP into the DMZ settings to bypass any firewalls.

EasyTouch RV Knowledge Bank – More Information

Visit our knowledge bank at http://www.micro-air.com/kb_easytouch_rv.cfm for the latest resources for setup, operation, and troubleshooting, as well as our main website for contacting us for support.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.