



T.I.P. Troubleshooting Information on Power Gear

FLAT FLOOR ROOM HEIGHT ADJUSTMENT

This TIP sheet is designed to provide information on setting the room height on a flat floor slide-out system utilizing angled rails.

With the room fully extended-

- Measure from the top of the moving slide-out rail to the bottom of the slide-out room floor up close to the coach. This is dimension "A".
- Measure from the top of the moving slide-out rail to the bottom of the slide-out room floor out near the mounting bracket. This is dimension "B".
- To calculate dimension "B" use the following formula:
"B" (end bracket height setting) = "A" + (slide-out room floor thickness) + $\frac{1}{4}$ ".

EXAMPLE:

"B" (end bracket height setting) = "A" + (slide-out room floor thickness) + $\frac{1}{4}$ ".


If "A" = $3\frac{1}{4}$ "

Then "B" = $3\frac{1}{4}$ " + 1" + $\frac{1}{4}$ " = $4\frac{1}{2}$ "

- Perform this check on each slide-out rail independent of the other.

NOTE:

1) These figures are approximates. Each coach may be slightly different.

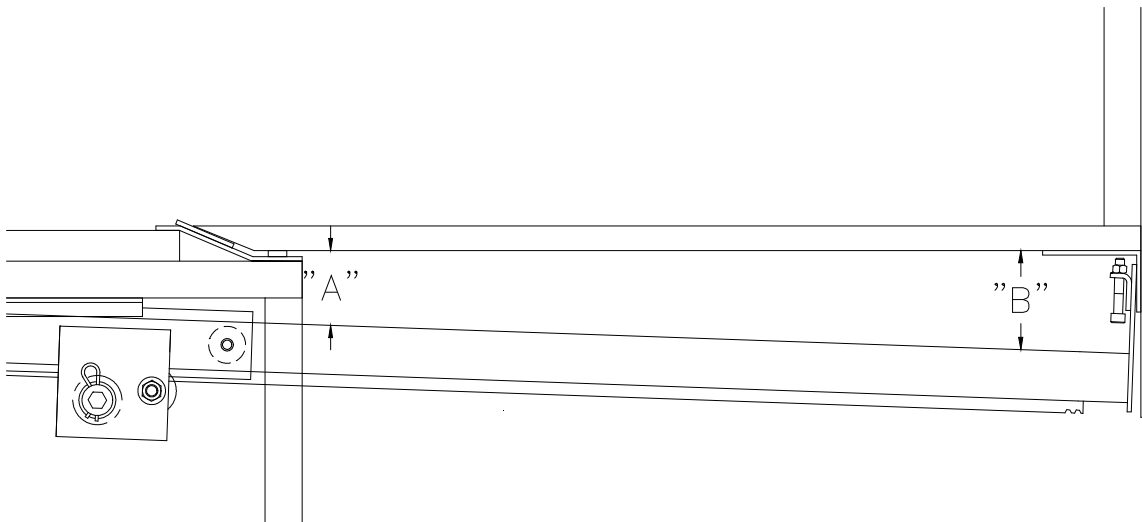



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.