

GEN-SLIDE

HYDRAULIC SLIDE-OUT MANUAL



TABLE OF CONTENTS


System Description	3
System Operation	3
Maintenance	4
Troubleshooting Hints	4
Parts Listing	5
How to Order	6

SYSTEM DESCRIPTION

The Power Gear Gen-Slide system is a hydraulic actuator system designed to provide years of reliable service. It consists of the following components:

- A bi-directional hydraulic pump.
- A cylinder assembly with piloted locking system.

SYSTEM OPERATION

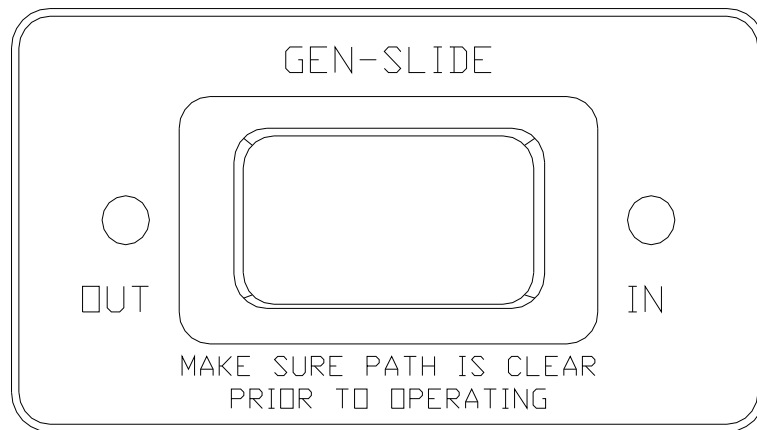

CONTROL SWITCH PANEL


To extend your generator:

- 1) Make sure the generator path is free of obstacles.
- 2) Push the rocker switch to the “out” position.
- 3) Extend the generator to your satisfaction, then release the switch.

To retract your generator:

- 1) Make sure the generator path is free of obstacles.
- 2) Push the rocker switch to the “in” position.
- 3) When the generator is fully retracted, release the switch.

SYSTEM MAINTENANCE

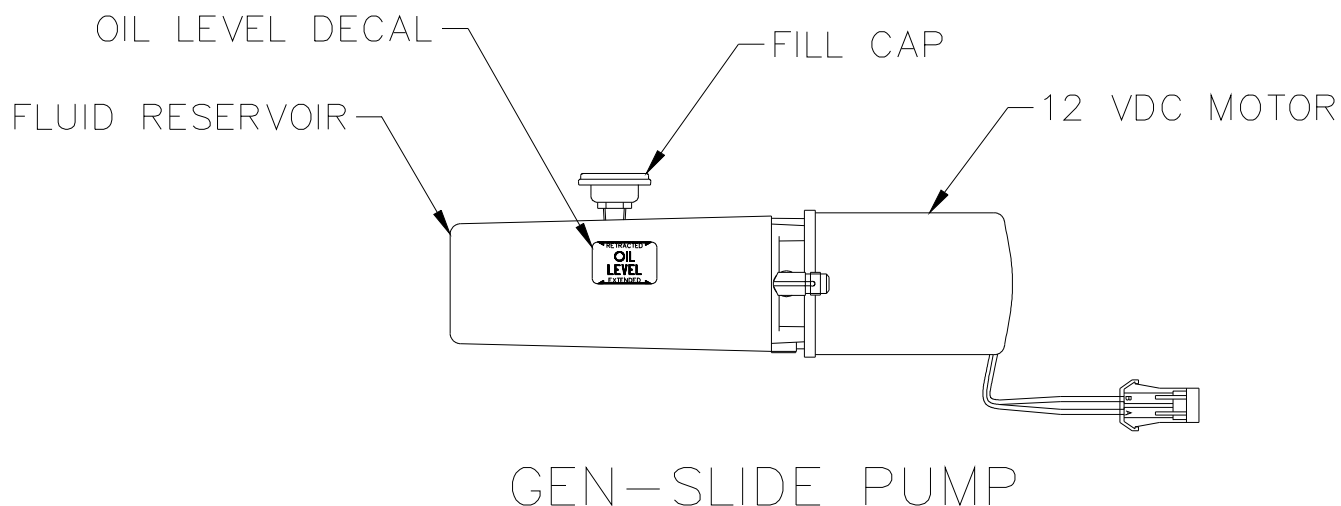

**This system uses Type “A” Automatic Transmission Fluid (Dextron III, etc.).
Do not fill reservoir with any other type of fluid.**

The Gen-Slide system is designed to provide years of trouble-free service. To assure the continued operation of your Gen-Slide, periodically check the fluid level in the pump reservoir. This can be done in the fully extended or fully retracted positions.

Examine the fluid level, and measure it against the oil level decal on the side of the reservoir, keeping in mind the current position of the generator. If the fluid level is lower than the appropriate level line, remove the fill cap on the top of the reservoir and add hydraulic fluid.


The Gen-Slide system is a closed hydraulic circuit. If additional fluid is needed, be sure to check the pump, hoses to the cylinder assembly, and the cylinder assembly itself for leakage.

NOTE- With the generator slide-out extended NEVER completely fill the reservoir. This will result in overflow and leaking when the generator slide-out is retracted.

TROUBLESHOOTING

If your Gen-Slide system fails to function, check the system fuse. If the fuse is not damaged, check the wiring connections on the control switch and to the pump. If these are all intact, secure your generator in the retracted position and have the system serviced.

PARTS LISTING

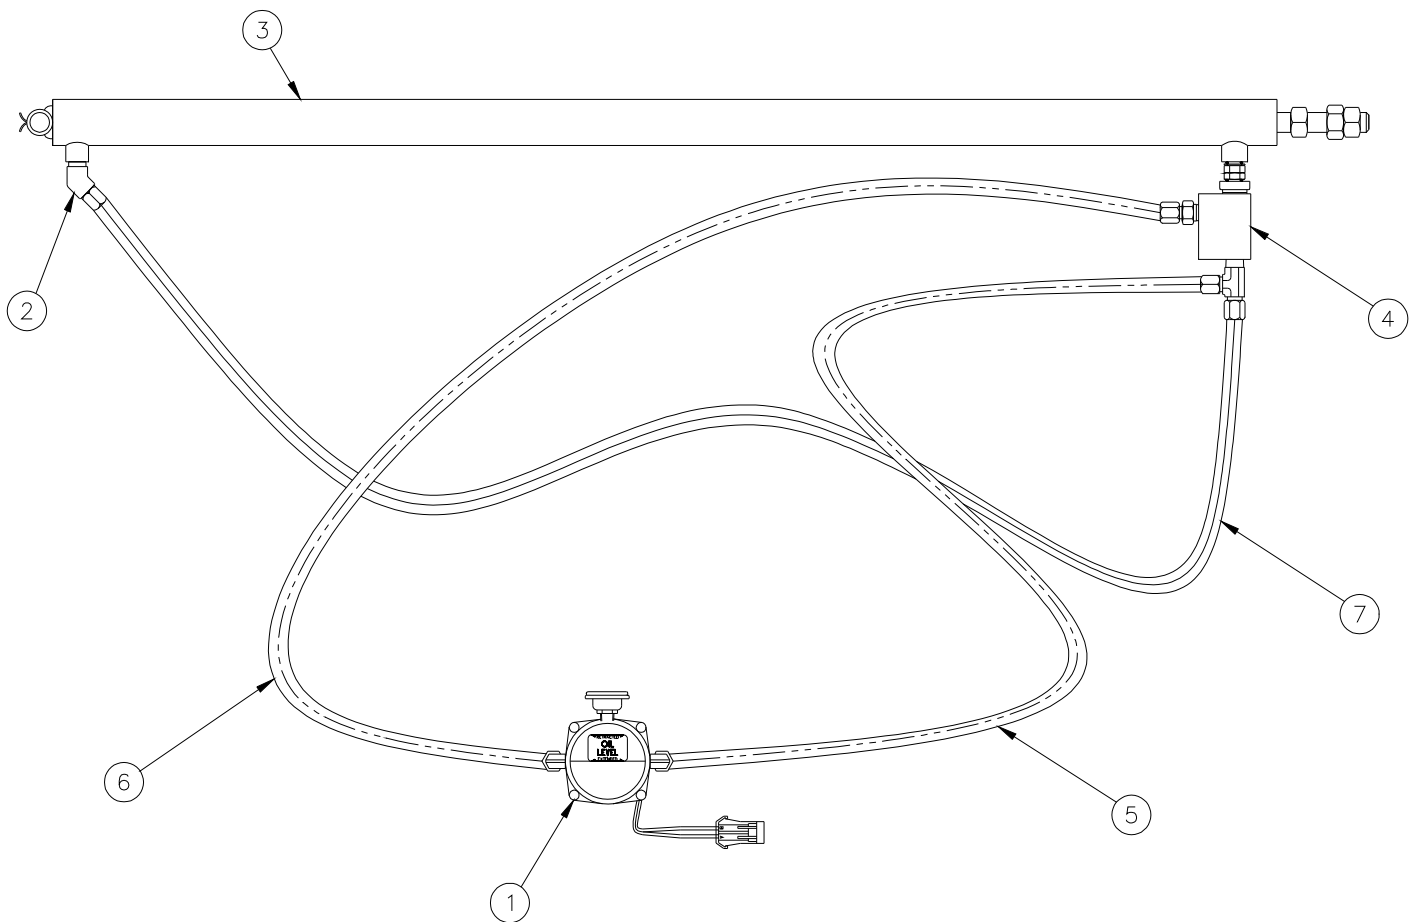

Item #	Description	Part Number
1	Gen-Slide Pump/Motor Assembly	540109
2	Elbow	07-1251
3	Cylinder Assembly	540113
4	Lock Valve Assembly	540115
5	Hose, 48"	08-A048
6	Hose, 52"	08-A052
7	Hose, 78"	08-A078

PARTS ORDERING INFORMATION

When ordering parts, please provide the following information:

- 1) Your Name
- 2) Your Company's Name
- 3) Your Phone Number
- 4) Your Shipping Address
- 5) Your Billing Address
- 6) The Purchase Order Number
- 7) The Coach Model Number

For each part needed, please provide:

- 1) The Part Number
- 2) The Part Description
- 3) The Quantity Required



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.