




T.I.P. Troubleshooting Information on Power Gear

RV Manufacturer's Bracket Instruction For Horizontal and Vertical Adjustments

- 1.) Loosen nuts on carriage bolts (item 2 below). Turn jack bolts (item 1 below) clockwise to adjust the slide room position upward. Turn the jack bolt counterclockwise to adjust the slide room position downward.
- 2.) Loosen nuts and slide heads left or right to adjust the slide room position horizontally.
- 3.) Loosen bolts (item 3 below) and slide head in or out to adjust the side-to-side room seal compression or to adjust the out-position of the slide room.

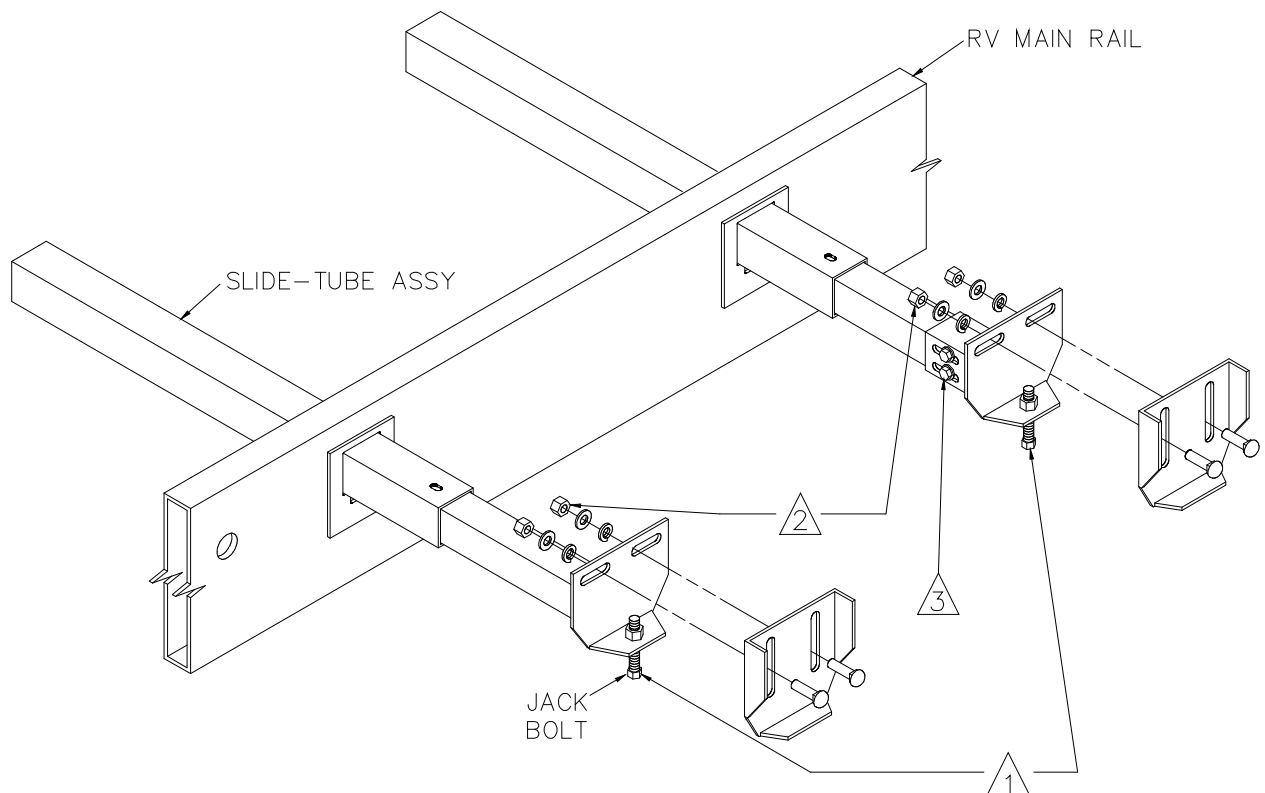



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.