



T.I.P. Troubleshooting Information on Power Gear


SYNCHRONIZING A 2 RAIL SLIDE-OUT ROOM

Should the slide-out room go out of synchronization this procedure will allow you to retune the room. Measure room synchronization from common solid points at each end of the room.

NOTE- This Tip Sheet does cover standard and flat floor slide-out systems.

To synchronize the room please refer to the Figure below.

TIMING SLIDE-OUT RAILS

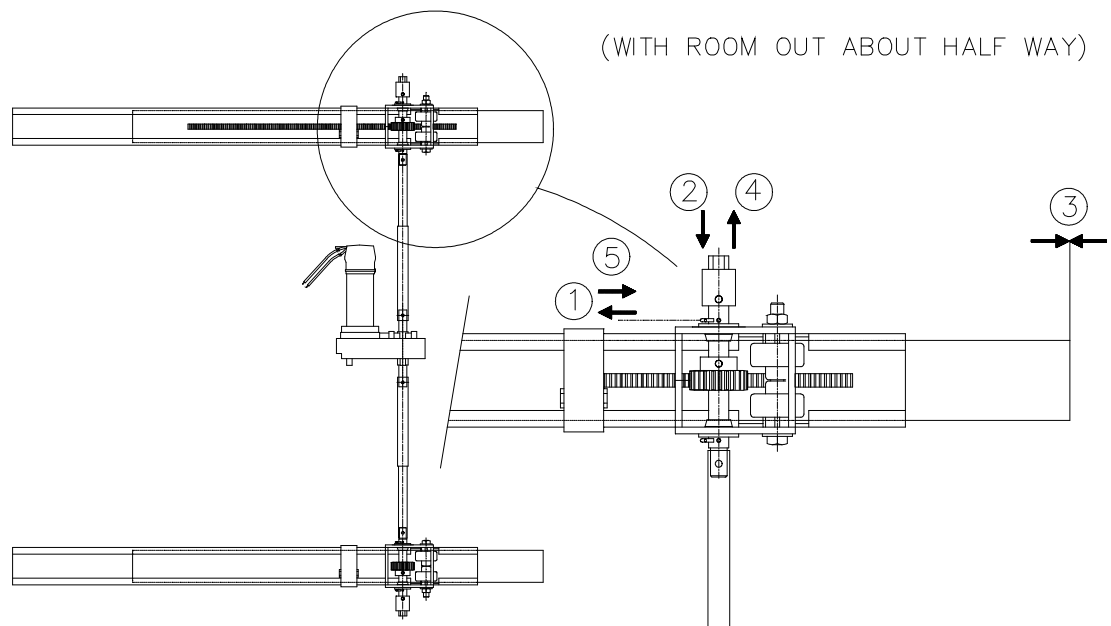

With room about half way out release slide-out motor brake.

1. Pull the clip pin out.
 2. Slide the drive shaft assembly in to disengage gear from gear rack.
 3. Move slide-out inner rail in/out to desired location.
 4. Slide drive shaft assembly back into position.
 5. Push clip pin back into shaft.
- Before proceeding put slide-out motor brake lever back into "Engaged" position.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.