


PD5000 with Converter.

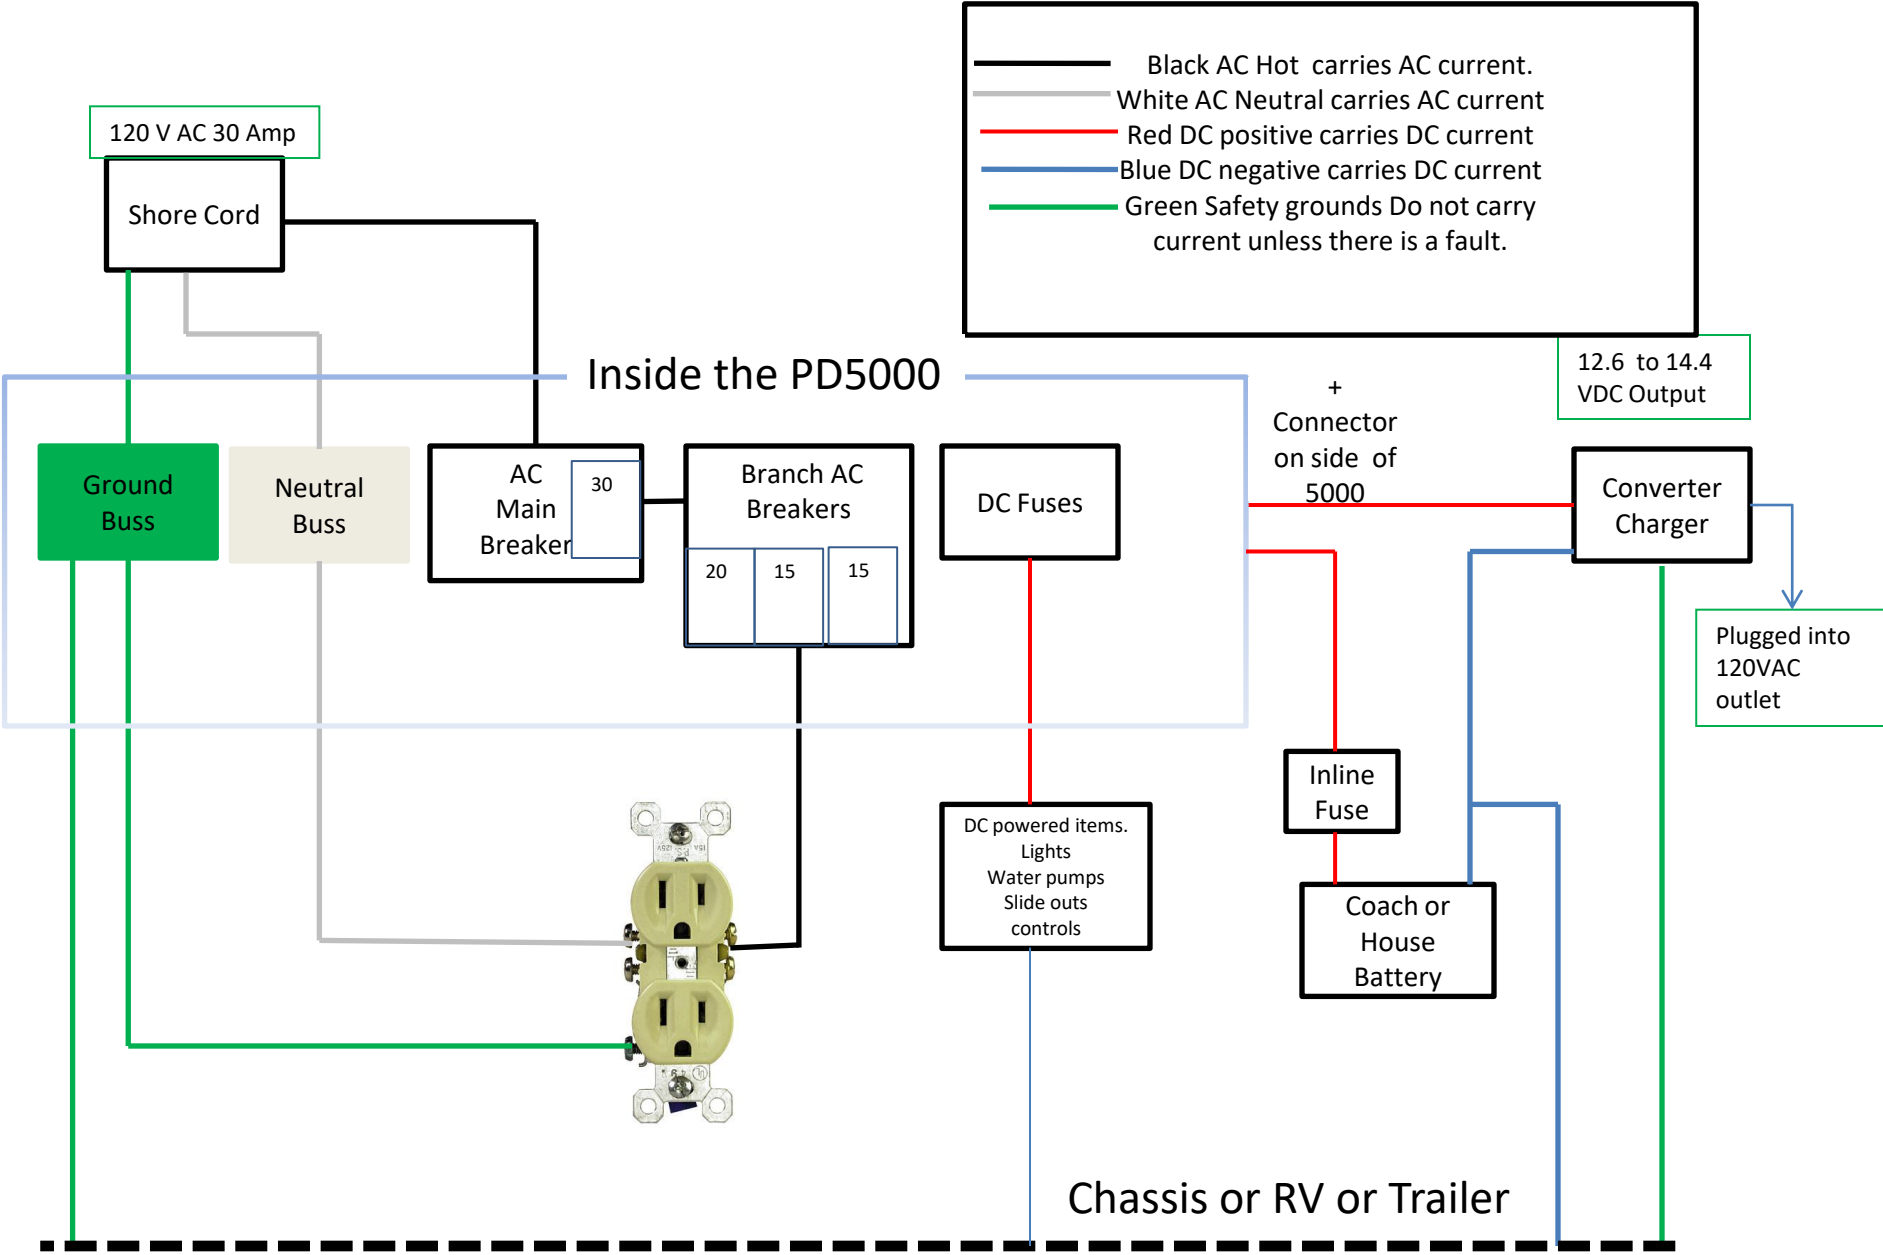

PD5000 with Converter.

AC Current flow path


Black AC Hot carries AC current.

White AC Neutral carries AC current


Red DC positive carries DC current

Blue DC negative carries DC current

Green Safety grounds Do not carry current unless there is a fault.

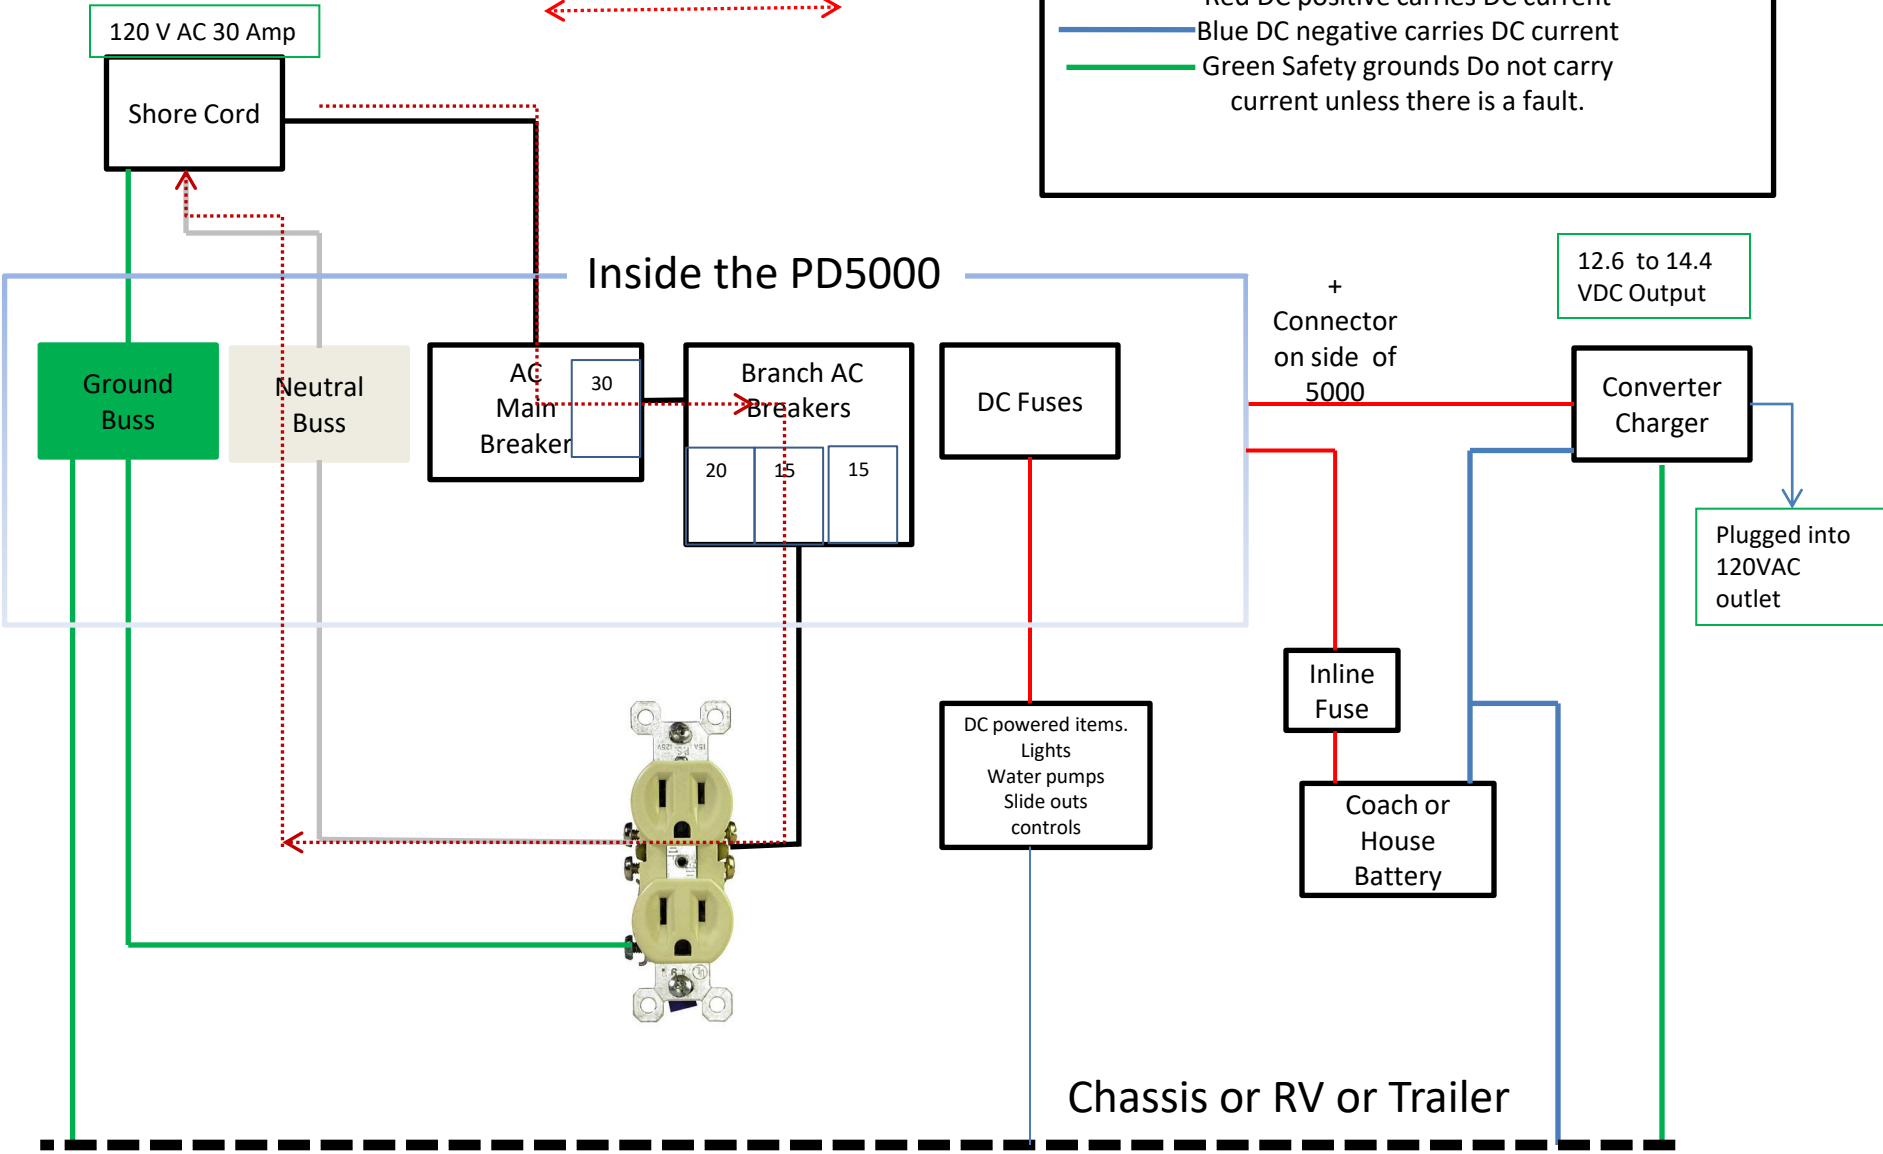

PD5000 with Converter.

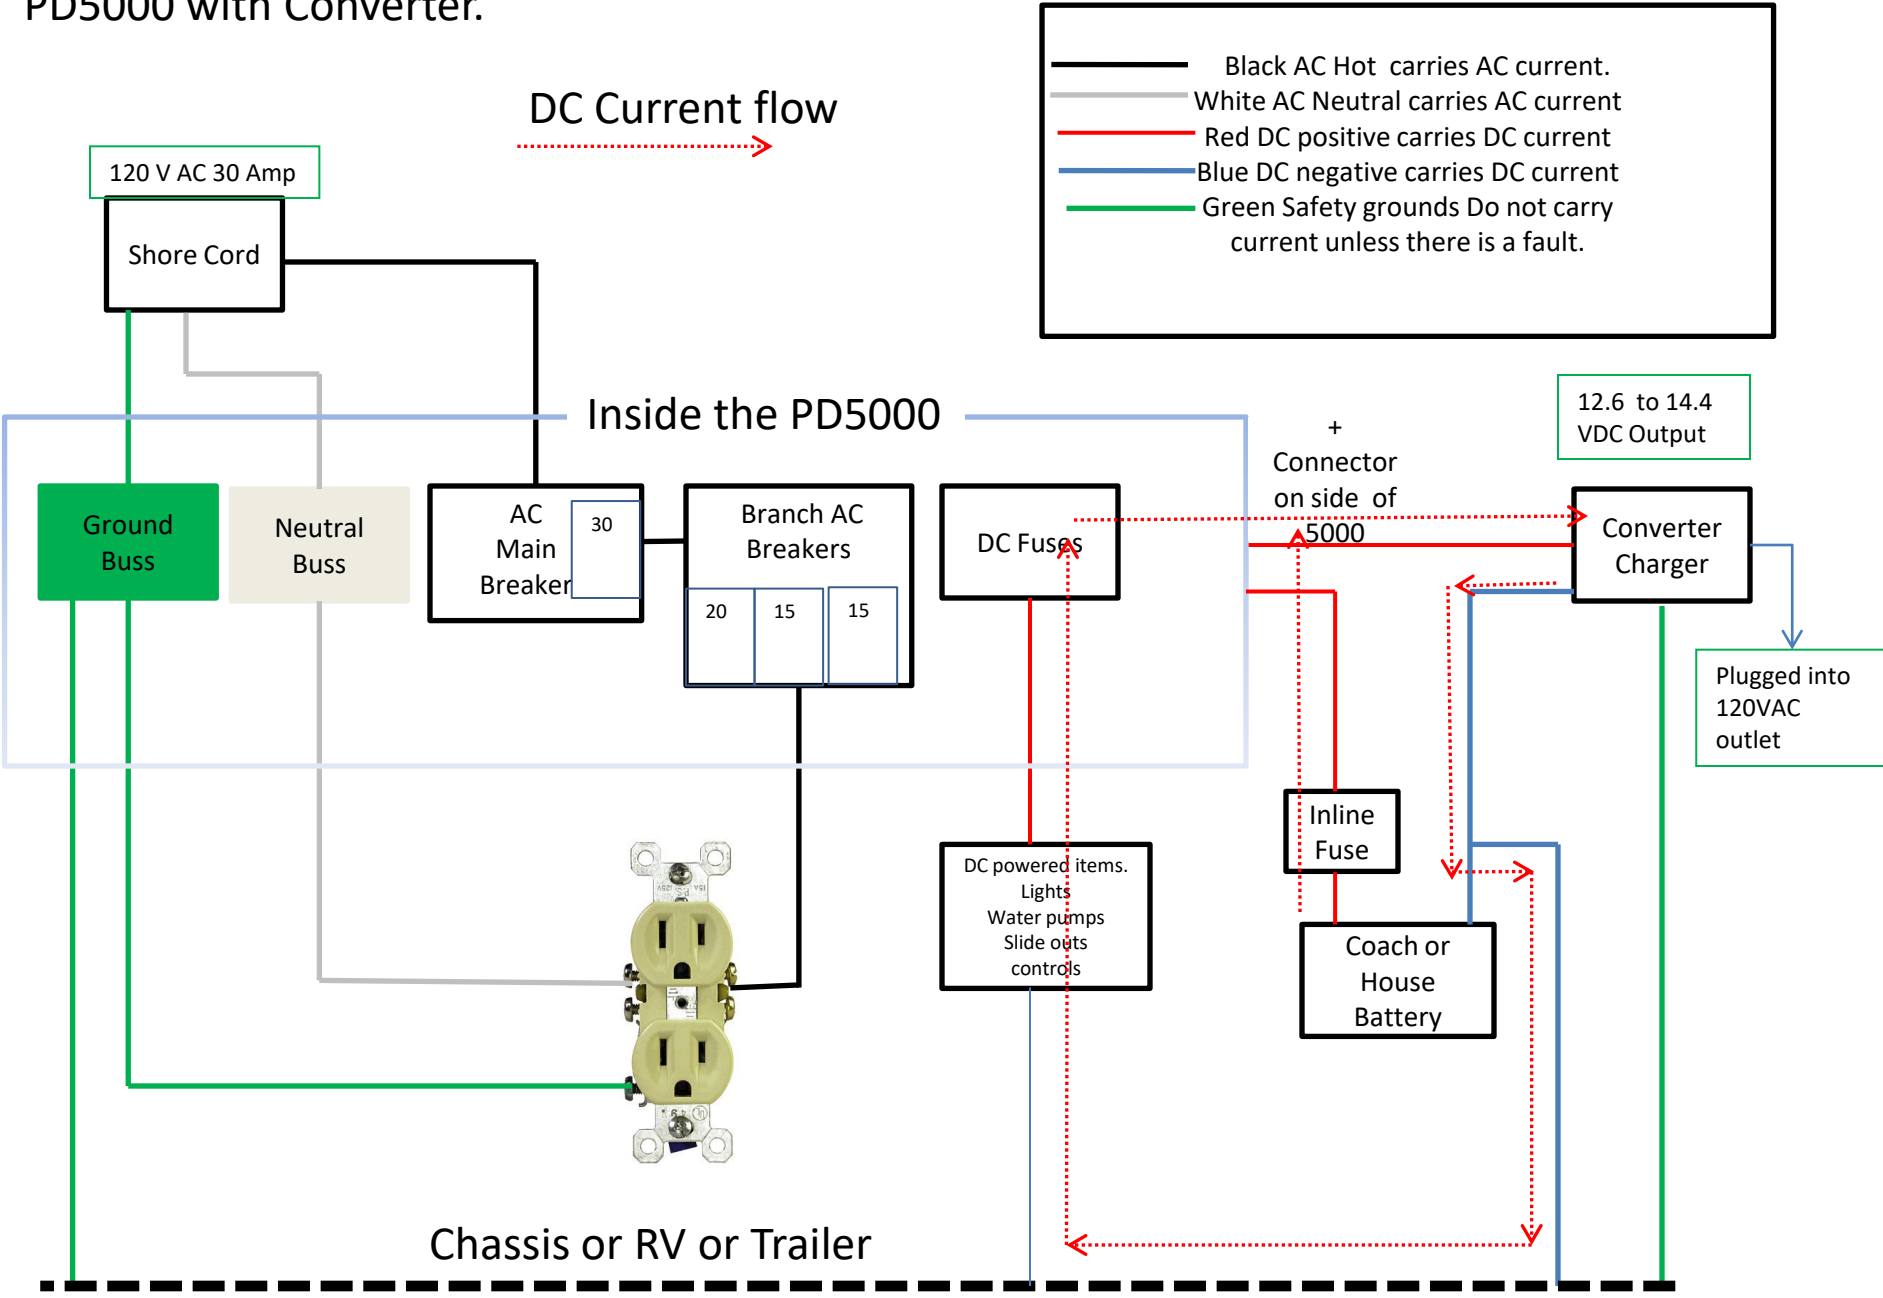



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.