

RENOGY

BATTERY MONITOR

USER MANUAL



WARNING

Please read this guide carefully to avoid incorrect connections that can cause the battery monitor to malfunction and/or create a fire hazard. Disconnect the negative pole of the battery before installation.

★ The Renogy Battery Monitor can't be exposed in the sun for a long time or in the environment with large amounts of ultraviolet radiation when using or storing, in winter ($<-20^{\circ}\text{C}$) and summer ($>60^{\circ}\text{C}$) otherwise the LCD will shorten the life span.

BATTERY SAFETY

- Do NOT let the positive (+) and negative (-) terminals of the battery touch each other.
- Use only sealed lead-acid, flooded, gel or lithium batteries which must be deep cycle.
- Explosive battery gases may be present while charging. Be certain there is enough ventilation to release the gases.
- Be careful when working with large lead acid batteries. Wear eye protection and have fresh water available in case there is contact with the battery acid.
- It is the user's responsibility to operate the equipment in a safe manner. Do not charge batteries in an enclosed environment unless allowed by the manufacturer of the battery.
- Never connect a load to a battery without using fuses or circuit breakers.

GENERAL INFORMATION

The Renogy Battery Monitor is a high precision device (also known as coulometer), which can test the voltage, current, and capacity of a battery to help users know the state of charge at any time. The Renogy Battery Monitor has a memory function which allows users to set a low voltage capacity alarm. It is suitable for mobile and portable equipment, e-bike, motorcycles, electric wheelchairs, and so on.

★ The Renogy Battery Monitor is suitable for lithium batteries, lead acid batteries and nickel-metal hydride batteries that have voltage from 10V to 120V.

IDENTIFICATION OF PARTS



LCD InterFace

500A Shunt/Sampler



Shielded Wire


INSTALLATION

Connection/Setup

First, connect the Shunt in series to the negative circuit of your battery. B- of shunt connects to B- of the battery. P- of shunt connects to P- of output or C- of charge.

Then take a wire of 0.3-0.75 mm². One end of the wire connects to positive of battery, another end connects to B+ of Shunt (either one is ok).


Finally connect the Shunt to the Renogy Battery Monitor by the shielded wire and the screen of the Renogy Battery Monitor display should turn on.

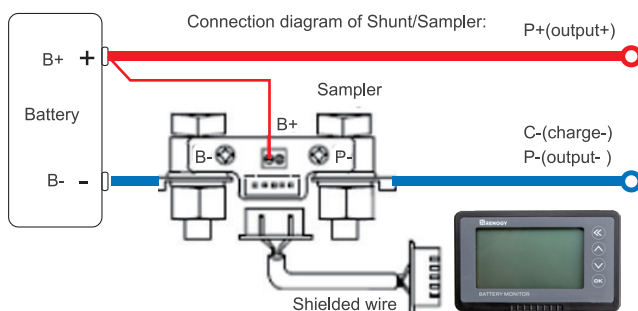

Attention: Please connect as shown. The shunt must be series connected to the negative circuit, DO NOT connect to the positive circuit. If you want to extend the shielded wire, you must use 4 lines of the same specification.


■ **Mounting**

The Renogy Battery Monitor is fixed by tabs, so it is easy to install. First, open a rectangular orifice on your equipment panel according to the size. Then put The Renogy Battery Monitor into the rectangular orifice, and make sure the tabs are locked.

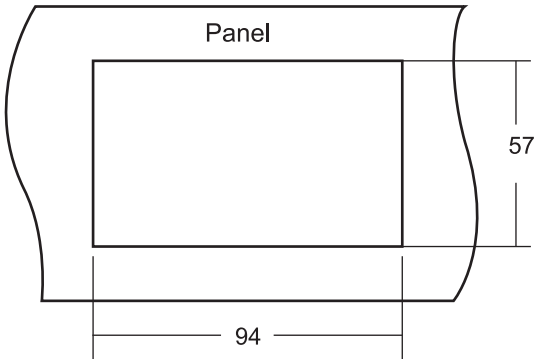

OPERATION

Interface description

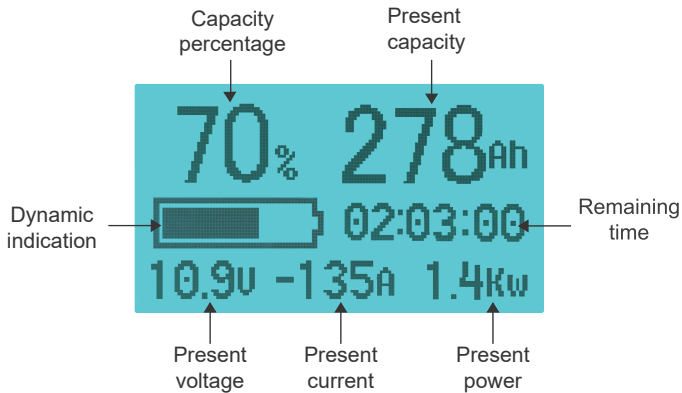

Use steps

1. Connect and check the current: Power on after completing the connection as shown, the screen should display capacity percentage. If the screen has no response, please check the connection. Then charge or discharge the battery and check whether the display current is equal to the actual current. If the deviation is large, please check the connection.

2. Capacity reset: On first use, the percentage and capacity are not the actual value, you should reset the capacity. First, discharge the battery to 0% and hold the ⏻ key for 3s to set the capacity zero or charge the battery fully and hold the 🔋 key for 3s to set the capacity full. This will only have to be done on initial installation of the Renogy Battery Monitor or if the battery bank is replaced.

3. Check and reset the actual capacity: If you find the displayed capacity doesn't match the actual capacity during use, please check and reset the actual capacity, discharge the battery to 0 % and hold the ⏻ key for 3s to set the capacity 0, then set the preset capacity as large as possible. Then charge the battery fully and the displayed capacity should be the actual capacity. Finally set the display capacity as preset capacity (Please refer to use setting).

User settings

Preset capacity and voltage setting :

1. Press the  key for 3s to enter setting menu;
2. Click  or  key to select the setting items:
 - CAP—Preset capacity: An initial capacity has been set at the factory, please set it according to the real capacity of your battery.
 - HIGH V—Full voltage: When the voltage is higher than the set voltage the percentage will be 100%.
 - LOW V—Zero voltage: When the voltage is lower than the set voltage the percentage will be 0%. If the voltage keeps drawing the value will flicker and buzzer warning once every 10s.
 - ALARM—Alarm setting: When the capacity is lower than the set voltage the percentage and capacity will flicker and buzzer warning once every 10s.
 - Attention: If you need to set the HIGH V and LOW V values, please confirm the full charge voltage and all discharge voltage specifications of your battery.
3. Select CAP and click the  key to enter the preset capacity setting; The set value will flicker, click the  key can select other values, click the  or  key to select the correct values after this click the  key to quit preset capacity setting.
4. We can set other items with the same method as preset capacity. When all the items are set and all the values are correct, click the  key to save the set and quit the setting menu.

Set capacity to zero or full :

On first use or change of the battery bank, the memory capacity should be set zero or full: In the main interface, hold the  key for 3s to set the capacity zero, the percentage will be 0%; hold the  key for 3s to set the capacity full, the percentage will be 100%.

Sleep mode wake up operation

1. When the battery current is low, the Renogy Battery Monitor will go into a low power sleep mode, press any key to see the display if needed. When the battery current rises over normal value or the battery starts charging or discharging the Renogy Battery Monitor will wake up.

2. The Renogy Battery Monitor can stay connected to the battery bank since it has a very low self-consumption.

■ Manual turn off backlight function :

Long press front ⏮ Keyboard can turn off the backlight, Long press again ⏮ Keyboard can Wake up the backlight.

TROUBLESHOOTING

- When connecting the load, if the backlight is blinking, the B- and P- of the shunt are wired inversely.
- When the battery current is low the Renogy Battery Monitor will enter a low power (sleep mode) and the backlight will turn off, click any one of the keys and the backlight will turn on for 10s.
- When the current changes frequently the data acquisition may produce an error, and it may affect the accuracy.
- When charging or discharging. The Renogy Battery Monitor will be working and the capacity displayed will be real-time numbers.

TECHNICAL SPECIFICATIONS

Description	Parameter
Working Voltage	10.0 - 120.0 V
Working dissipation	10.0 - 15.0 mA
Standby dissipation	1.0 - 2.0 mA
Voltage accuracy	±1.0 %
Current accuracy	±1.0 %
Capacity accuracy	±1.0 %
Backlight on current(50A)	30 - 60 mA
Backlight on current(>50A)	80 - 120 mA
Preset capacity value	0.1 - 9999.0 Ah
Temperature range	0 - 35 °C
Weight	2.6 oz / 75 g
Size	3.9 x 2.4 x 0.7 inch



2775 E. Philadelphia St., Ontario, CA 91761
1-800-330-8678

Renogy reserves the right to change the contents of this manual without notice.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.